

INTEGRATED NETWORK AV RECEIVER
AVR-X3600H

- For purposes of improvement, specifications and design are subject to change without notice.
- Please use this service manual when referring to the operating instructions without fail.
- Some illustrations used in this service manual are slightly different from the actual product.

[Click here!](#)

On-line service parts list

<http://dmedia.soundunited.com/documents/details/25940>

[ONLINE PARTS LIST \(P5\)](#)

WEB owner's manual

NA: <http://manuals.denon.com/AVRX3600H/NA/EN/index.php>

EU: <http://manuals.denon.com/AVRX3600H/EU/EN/index.php>

AP: <http://manuals.denon.com/AVRX3600H/AP/ZH/index.php>

Upload is planned for the time of a future press release.

BEFORE SERVICING THIS UNIT

ELECTRICAL

MECHANICAL

REPAIR INFORMATION

UPDATING

Confidential

BEFORE SERVICING THIS UNIT

SAFETY PRECAUTIONS

NOTE FOR SCHEMATIC DIAGRAM

HANDLING THE SEMICONDUCTOR AND OPTICS

ONLINE PARTS LIST

[Accessing the Parts List](#)

[Searching Part Numbers or Ref. Numbers](#)

[NOTE FOR PARTS LIST](#)

SERIAL NUMBER

[Serial Number Organization](#)

[SKU Code of this Unit](#)

POST-SERVICE PRECAUTIONS

[Initializing this Unit](#)

[JIG FOR SERVICING](#)

SAFETY PRECAUTIONS

The following items should be checked for continued protection of the customer and the service technician.

Leakage current check

Before returning the set to the customer, be sure to carry out either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the set is defective.

Be sure to test for leakage current with the AC plug in both polarities, in addition, when the set's power is in each state (on, off and standby mode), if applicable.

CAUTION

Please heed the following cautions and instructions during servicing and inspection.

Ⓞ Heed the cautions!

Cautions which are delicate in particular for servicing are labeled on the cabinets, the parts and the chassis, etc. Be sure to heed these cautions and the cautions described in the handling instructions.

Ⓞ Cautions concerning electric shock!

- (1) An AC voltage is impressed on this set, so if you touch internal metal parts when the set is energized, you may get an electric shock. Avoid getting an electric shock, by using an isolating transformer and wearing gloves when servicing while the set is energized, or by unplugging the power cord when replacing parts, for example.
- (2) There are high voltage parts inside. Handle with extra care when the set is energized.

Ⓞ Caution concerning disassembly and assembly!

Through great care is taken when parts were manufactured from sheet metal, there may be burrs on the edges of parts. The burrs could cause injury if fingers are moved across them in some rare cases. Wear gloves to protect your hands.

Ⓞ Use only designated parts!

The set's parts have specific safety properties (fire resistance, voltage resistance, etc.). Be sure to use parts which have the same properties for replacement. The burrs have the same properties. In particular, for the important safety parts that are indicated by the \triangle mark on schematic diagrams and parts lists, be sure to use the designated parts.

Ⓞ Be sure to mount parts and arrange the wires as they were originally placed!

For safety reasons, some parts use tapes, tubes or other insulating materials, and some parts are mounted away from the surface of printed circuit boards. Care should also be taken with the positions of the wires by arranging them and using clamps to keep them away from heating and high voltage parts, so be sure to set everything back as it was originally placed.

Ⓞ Make a safety check after servicing!

Check that all screws, parts and wires removed or disconnected when servicing have been put back in their original positions, check that no serviced parts have deteriorated the area around. Then make an insulation check on the external metal connectors and between the blades of the power plug. And otherwise check that safety is ensured.

(Insulation check procedure)

Unplug the power cord from the power outlet, disconnect the antenna, plugs, etc., and on the power.

Using a 500V insulation resistance tester, check that the insulation resistance value between the inplug and the externally exposed metal parts (antenna terminal, headphones terminal, input terminal, etc.) is 1M Ω or greater. If it is less, the set must be inspected and repaired.

CAUTION

Concerning important safety parts

Many of the electric and the structural parts used in the set have special safety properties. In most cases these properties are difficult to distinguish by sight, and the use of replacement parts with higher ratings (rated power and withstand voltage) does not necessarily guarantee that safety performance will be preserved. Parts with safety properties are indicated as shown below on the wiring diagrams and the parts list in this service manual. Be sure to replace them with the parts which have the designated part number.

- (1) Schematic diagrams Indicated by the \triangle mark.
- (2) Parts lists Indicated by the \triangle mark.

The use of parts other than the designated parts could cause electric shocks, fires or other dangerous situations.

NOTE FOR SCHEMATIC DIAGRAM

WARNING:

Parts indicated by the \triangle mark have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:

Before returning the set to the customer, be sure to carry out either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the set is defective.

WARNING:

DO NOT return the set to the customer unless the problem is identified and remedied.

NOTICE:

- (1) ALL RESISTANCE VALUES IN OHM. k=1,000 OHM / M=1,000,000 OHM
- (2) ALL CAPACITANCE VALUES ARE EXPRESSED IN MICRO FARAD, UNLESS OTHERWISE INDICATED. P INDICATES MICRO-MICRO FARAD. N INDICATES NANO FARAD.
- (3) EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
- (4) CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

HANDLING THE SEMICONDUCTOR AND OPTICS


Electrostatic breakdown of the semi-conductors or optical pickup may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

1. Ground for Human Body

Be sure to wear a grounding band (1 M ohm) that is properly grounded to remove any static electricity that may be charged on the body.

2. Ground for Workbench

Be sure to place a conductive sheet or copper plate with proper grounding (1 M ohm) on the workbench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing

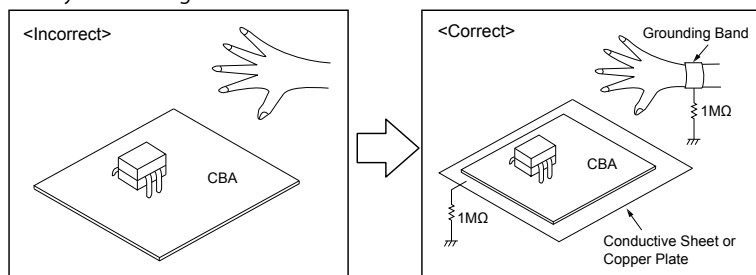

ONLINE PARTS LIST

Accessing the Parts List


- (1) Access from the Service Manual
 - Click the URL link on the cover of the service manual.Examples of display



NOTE: If the web browser does not open automatically, copy the URL and paste it into the address bar of the web browser and then press Enter.



- (2) Accessing the Part List from the Model Asset Screen.
 - Display Model Asset from New SDI.
 - Click the section displayed as ▼ Link to Part Lists under the Additional Classification.

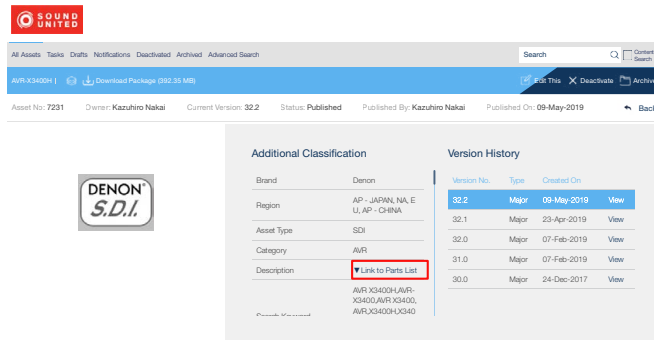


NOTE: If the ▼ Link to Parts List section is not displayed, download the parts table from the Asset list.


Searching Part Numbers or Ref. Numbers

You can search a Parts List for part numbers or Ref. numbers.

- (1) Enter the part number or Ref. number in the search window of the Parts List, and press the search button.
- (2) The search results are displayed.
 - The name of the sheet in which the search part is used and the part's line are displayed.

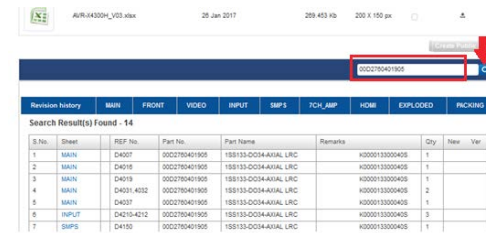

- (3) Next, click the "Sheet" section of the search results.

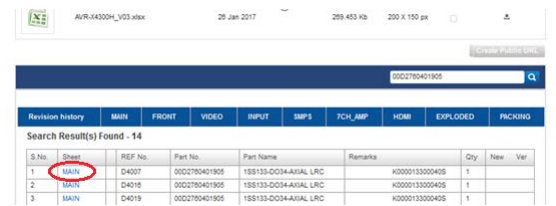


NOTE FOR PARTS LIST

- Parts indicated by "nsp" on this table cannot be supplied.
 - When ordering a part, make a clear distinction between "1" and "I" (i) to avoid mis-supplying.
 - A part ordered without specifying its part number can not be supplied.
 - Part indicated by "@" mark is not illustrated in the exploded and packaging view.
- WARNING:** Parts indicated by the ⚠ mark have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

SERIAL NUMBER

Serial Number Organization

The 14-digit serial number that contains the code of the manufacturing plant and the manufacturing date.

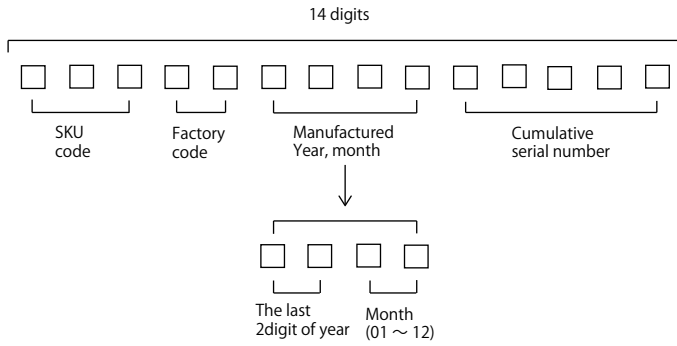

SKU Code of this Unit

Product SKU	SKU Code
AVRX3600HBKE3	BHA
AVRX3600HBKE2	BHB
AVRX3600HBKE1C	BHC

POST-SERVICE PRECAUTIONS


Initializing this Unit

Make sure to initialize this unit after replacing the microcomputer or any peripheral equipment, or the digital PCB.

1. Press the power button to turn off the power.
2. While holding down buttons "**ZONE2 SOURCE**" and "**DIMMER**" simultaneously, press the power button to turn on the power.
3. Release the buttons after confirming that the display flashes at 1-second intervals.
 - * The unit is initialized.Use network initialization mode to initialize the network related settings.

NOTE :

- If the unit fails to enter the service mode in step 3, repeat the procedure from step 1.
- Initializing the device restores the customized settings to the factory settings. Write down your settings in advance and reconfigure the settings after initialization.

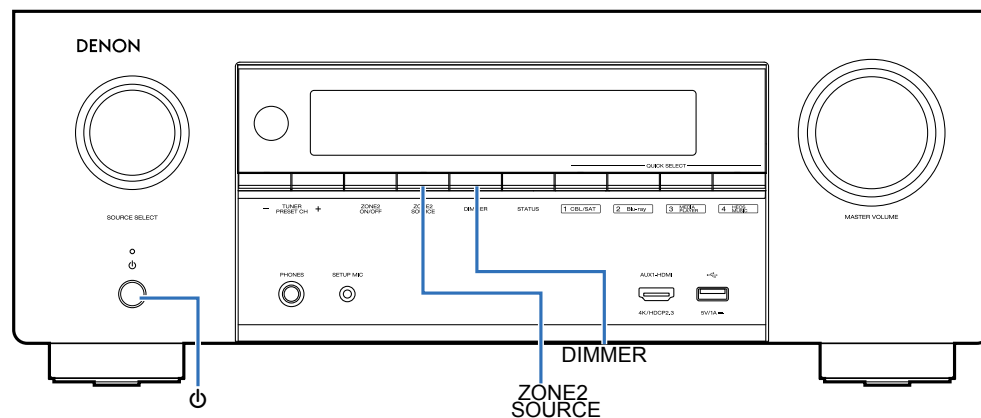

JIG FOR SERVICING

Use the following jigs (extension cable kit) when repairing the PCBs.
Order with your dealer for the jigs your dealer if necessary.

- 8U-110084S : EXTENSION UNIT KIT : 1 Set
 - 8U-110136S : EXTENSION UNIT KIT : 1 Set
- (See [JIG FOR SERVICING](#))

ELECTRICAL

SCHEMATIC DIAGRAMS

SCH01 HDMI SW1
SCH02 HDMI SW2
SCH03 HDMI TX
SCH04 CPU
SCH05 CPU LEVEL CHG
SCH06 DIGITAL CNT
SCH07 DSP
SCH08 MAIN DAC
SCH09 DIR A.PLD
SCH10 ADV8003
SCH11 ADV8003 DDR
SCH12 D.SUPPLY
SCH13 NET PHY
SCH14 VIDEO PLD
SCH15 ADV7180
SCH16 INPUT1
SCH17 INPUT2
SCH18 F. HDMI
SCH19 SIDE CNT
SCH20 VIDEO & RS232C
SCH21 FRONT CNT
SCH22 AMP1-5CH
SCH23 AMP2-5CH
SCH24 AMP3-4CH
SCH25 SPK
SCH26 TUNER & REG
SCH27 FRONT
SCH28 SMPS

PRINTED CIRCUIT BOARDS

DIGITAL, F HDMI
INPUT, FRONT CNT
4CH AMP, 5CH AMP
SPK, H2L, TUNER, GUIDE R, FFC GUIDE
FRONT, CNT, FUNCTION, USB
VIDEO, GUIDE L, SIDE CNT, SMPS

LEVEL DIAGRAM

FRONT ch
CENTER, SURROUND ch
SUBWOOFER ch
ASSIGN1 2 ch
ZONE2 (w/ Source) ch
ZONE2 (w/o Source) ch

BLOCK DIAGRAM

ANALOG AUDIO DIAGRAM
DIGITAL AUDIO DIAGRAM
VIDEO DIAGRAM

POWER DIAGRAM

WIRING DIAGRAM


SEMICONDUCTORS

1. IC's
2. FL DISPLAY
3. Remote Code Table

SCHEMATIC DIAGRAMS


SCH01 HDMI SW1

HDMI SW1

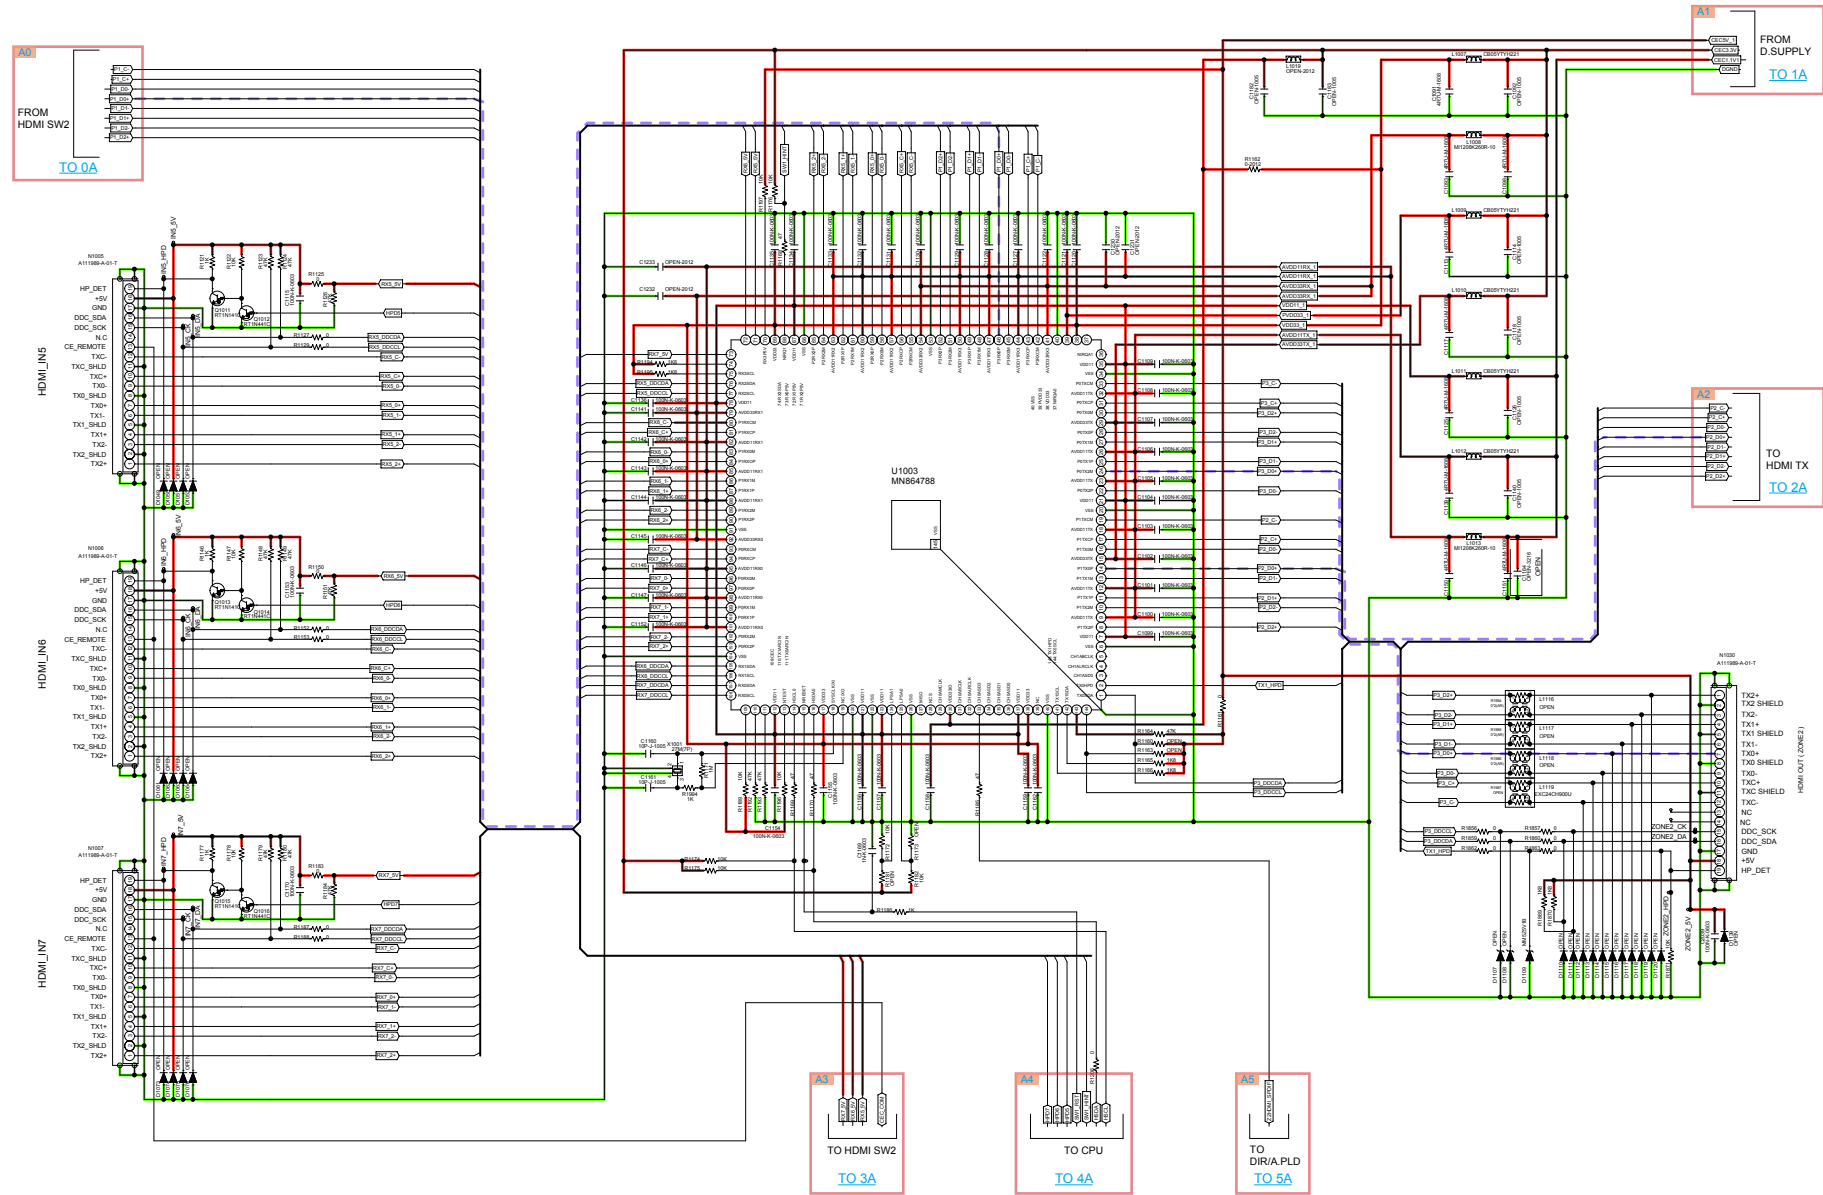

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)

HDMI SW2

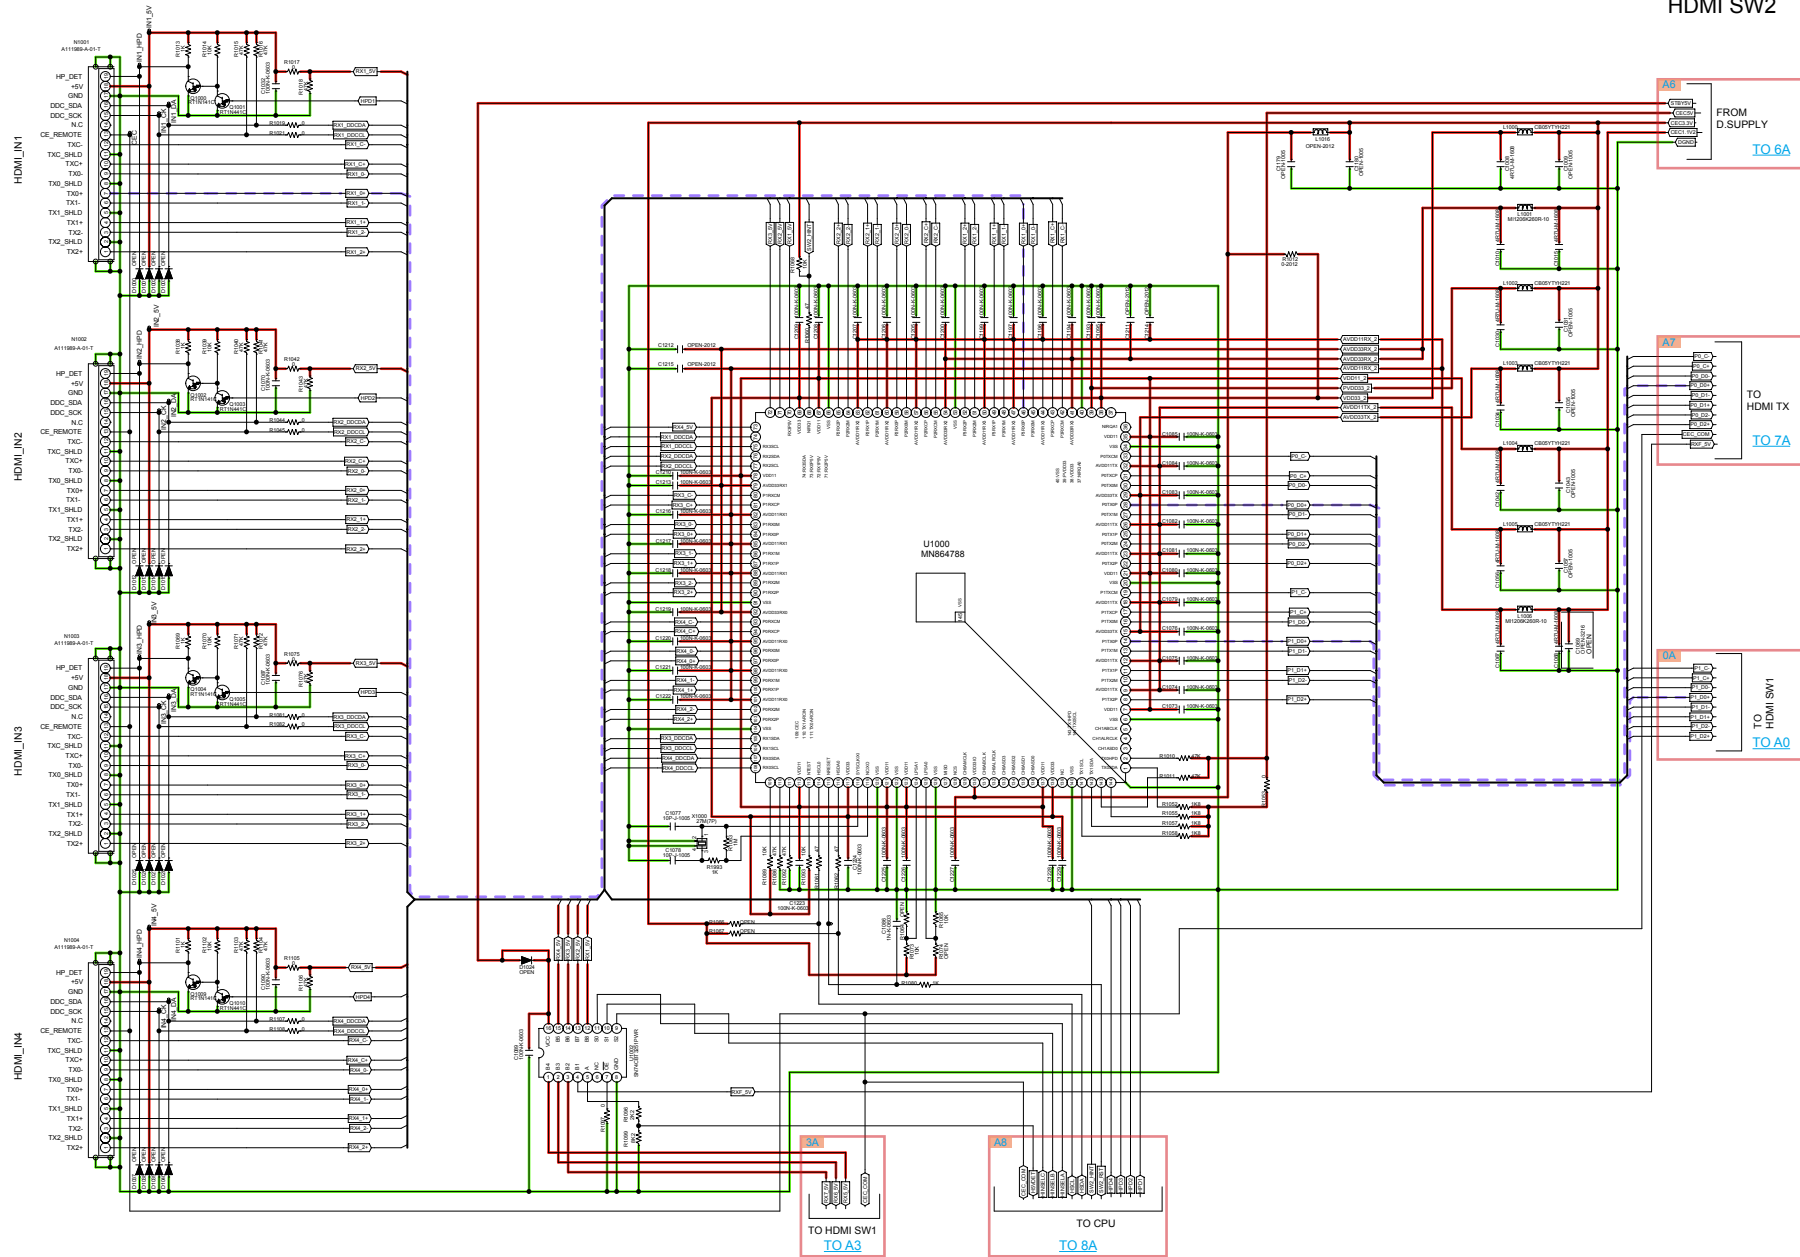

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)


Before Servicing
This Unit

Electrical

Mechanical

Repair Information

Updating

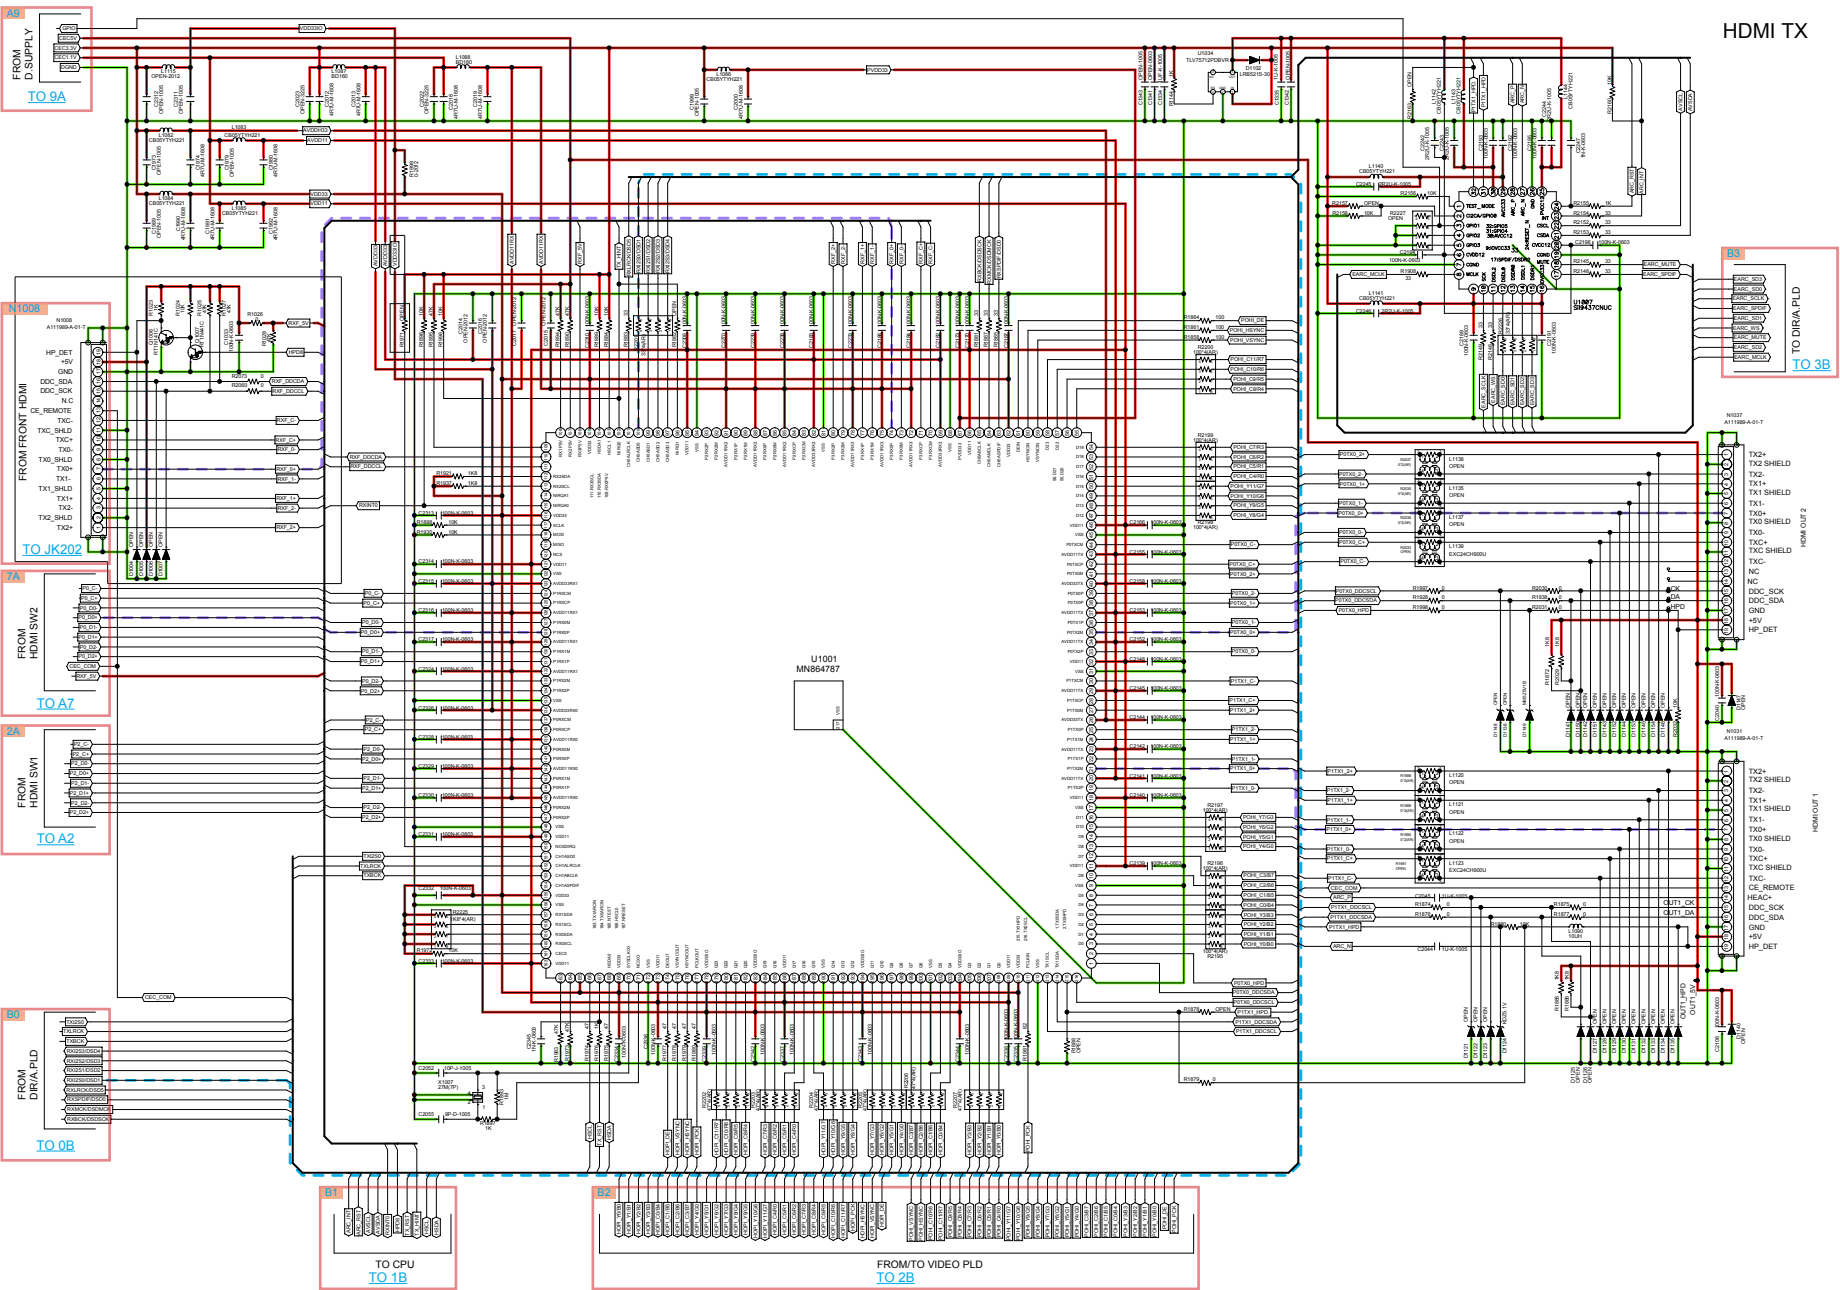

HDMI TX

- GND LINE
- POWER+ LINE
- POWER- LINE
- ANALOG AUDIO
- DIGITAL AUDIO
- TMDS SIGNAL
- VIDEO SIGNAL
- COMPONENT(Y)


Before Servicing
This Unit

Electrical

Mechanical

Repair Information


Updating

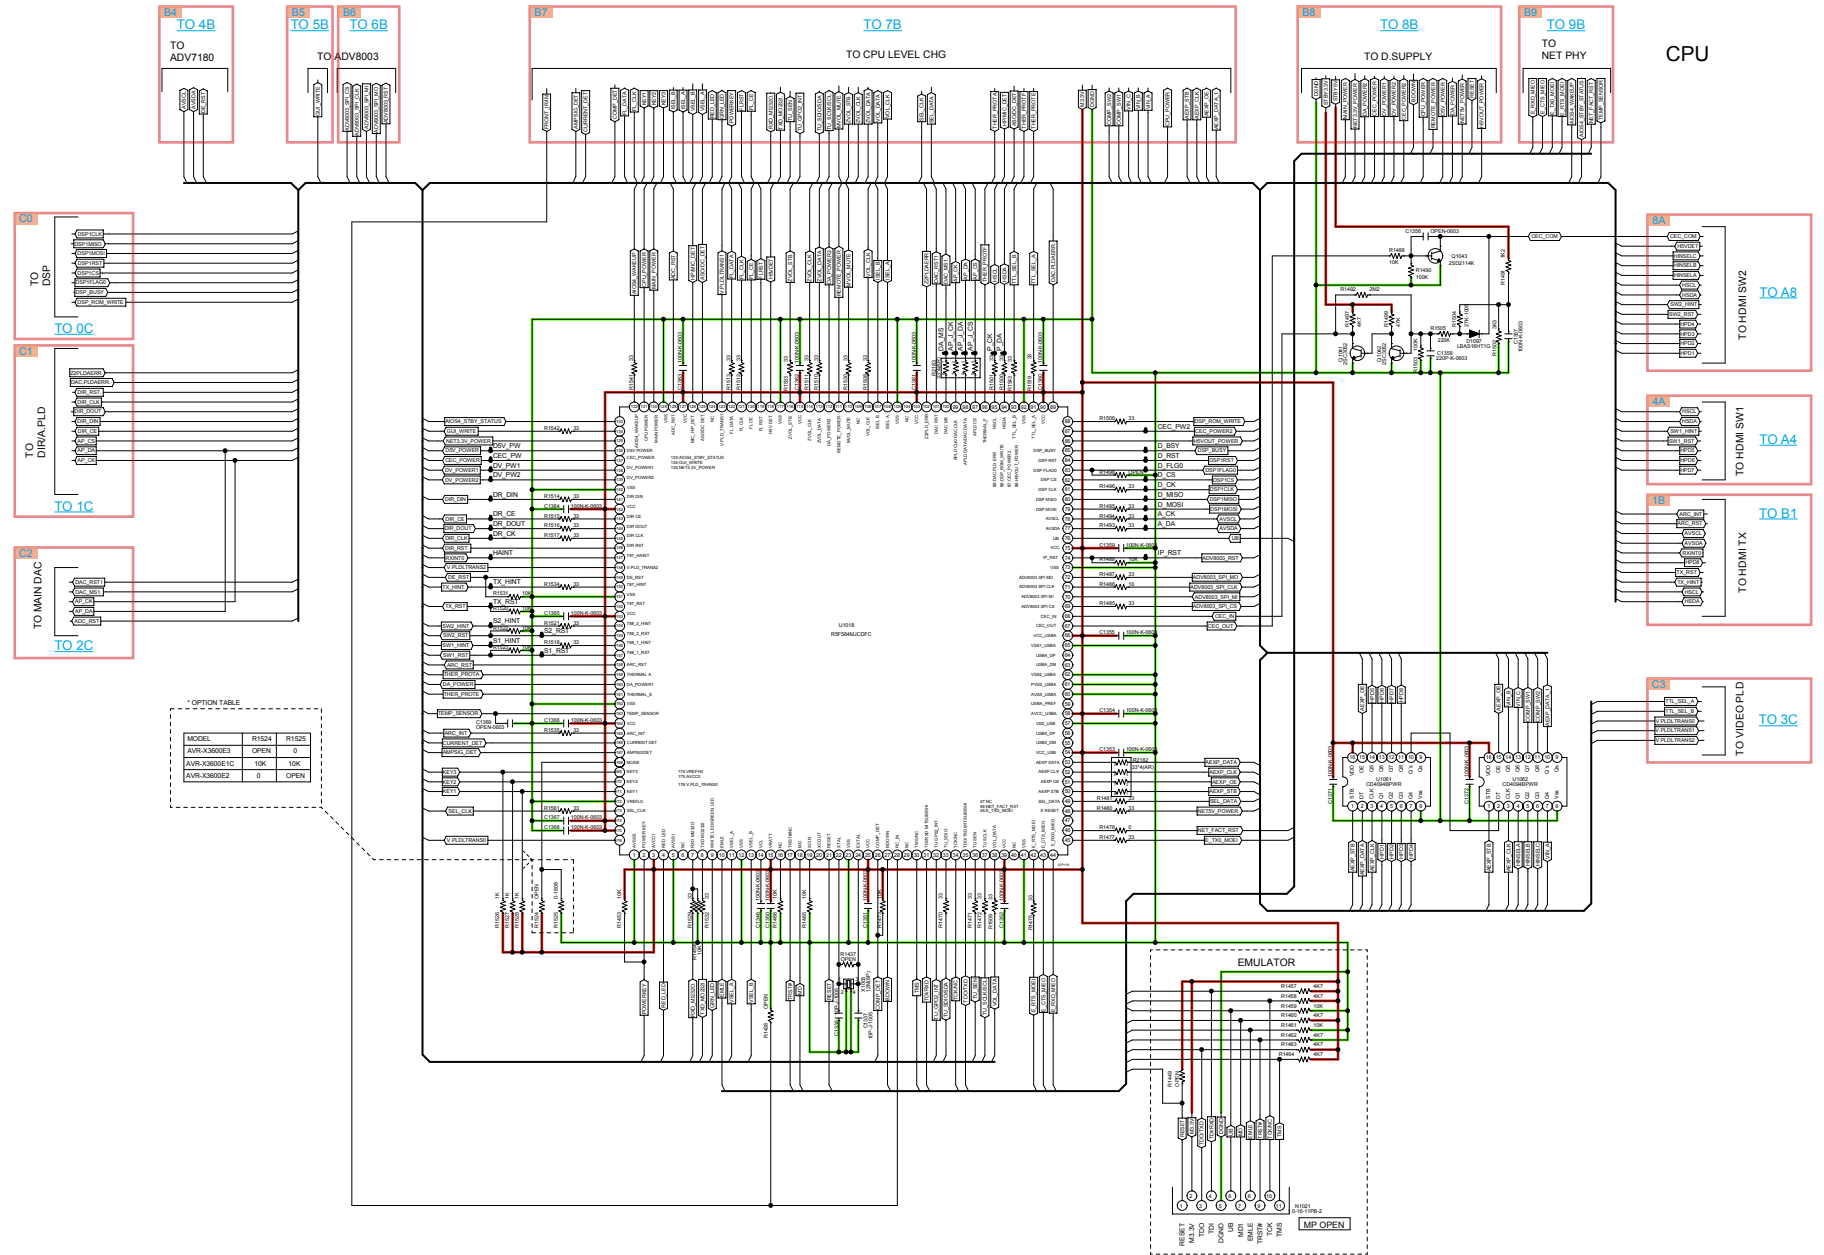


OPTION TABLE

MODEL	R1524	R1525
AVR-X300E3	OPEN	0
AVR-X300E1C	10K	10K
AVR-X300E2	0	OPEN

— GND LINE
 — POWER+ LINE
 — POWER- LINE
 — ANALOG AUDIO
 — DIGITAL AUDIO
 — TMDS SIGNAL
 — VIDEO SIGNAL
 — COMPONENT(Y)

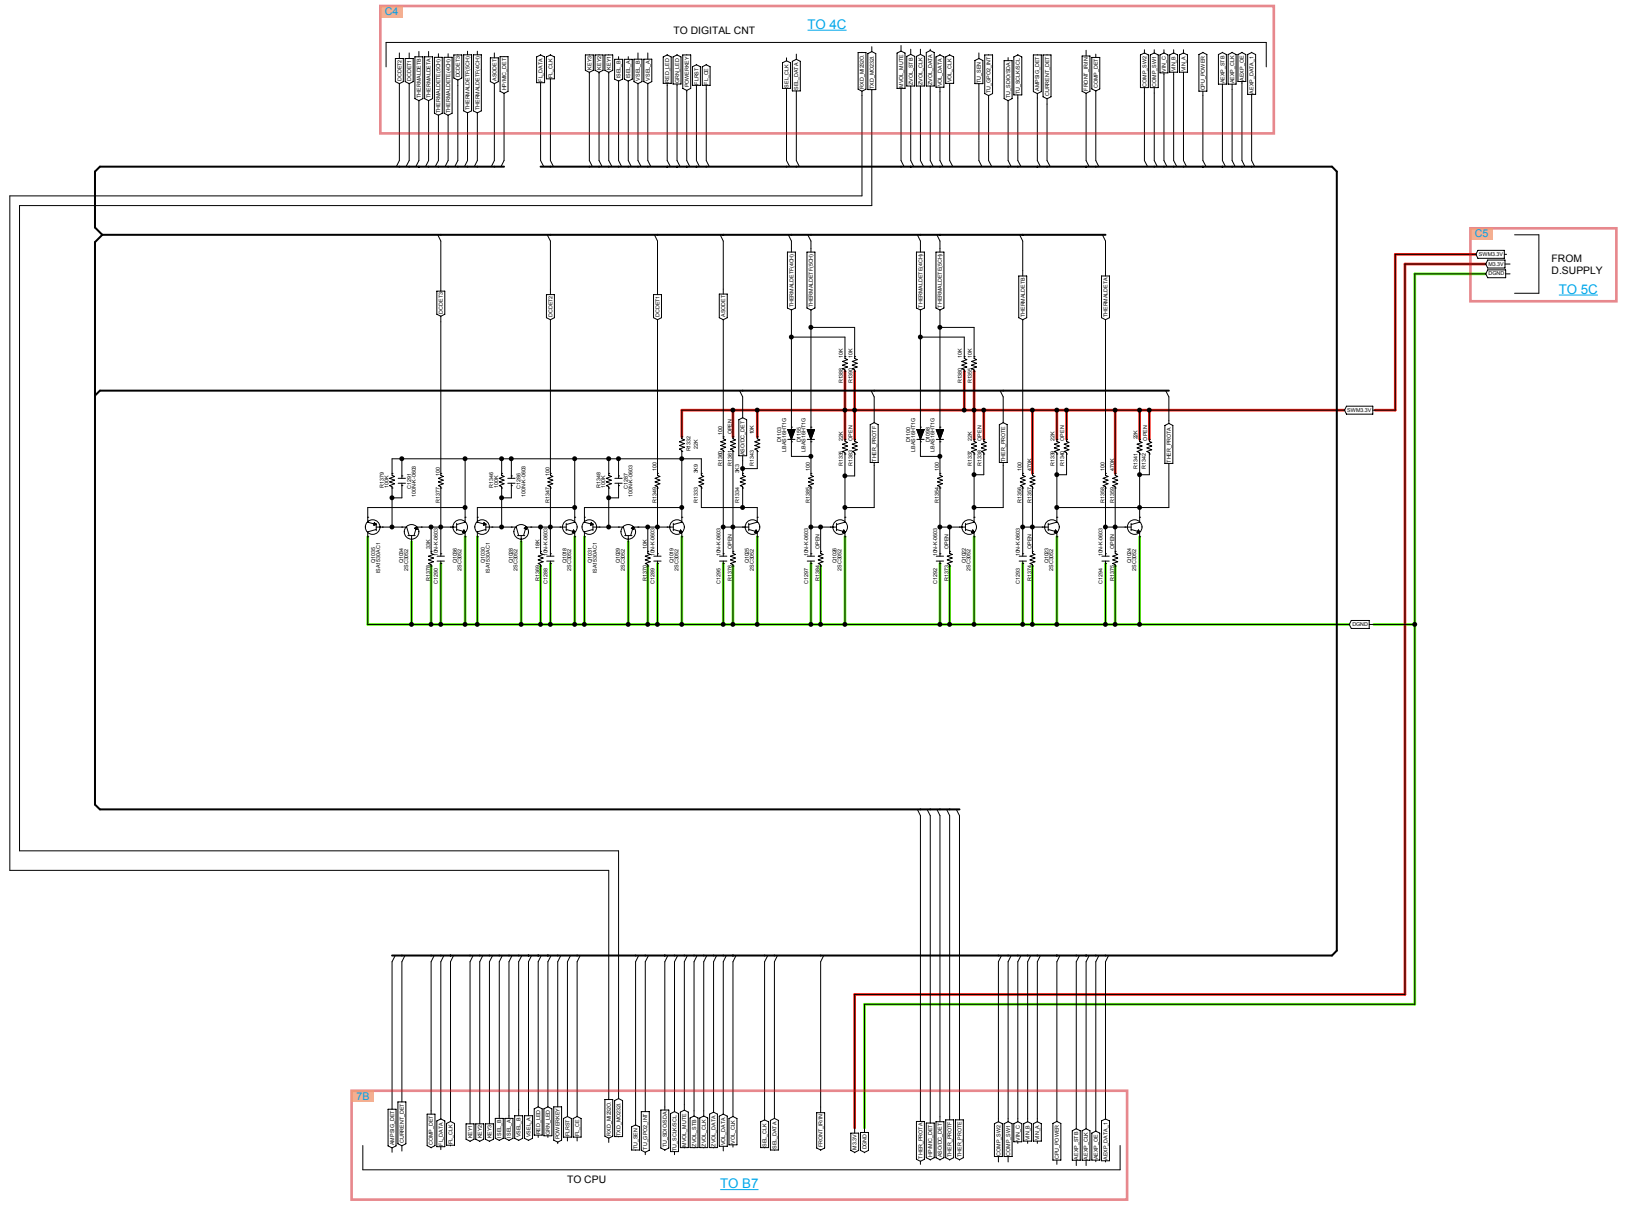


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)

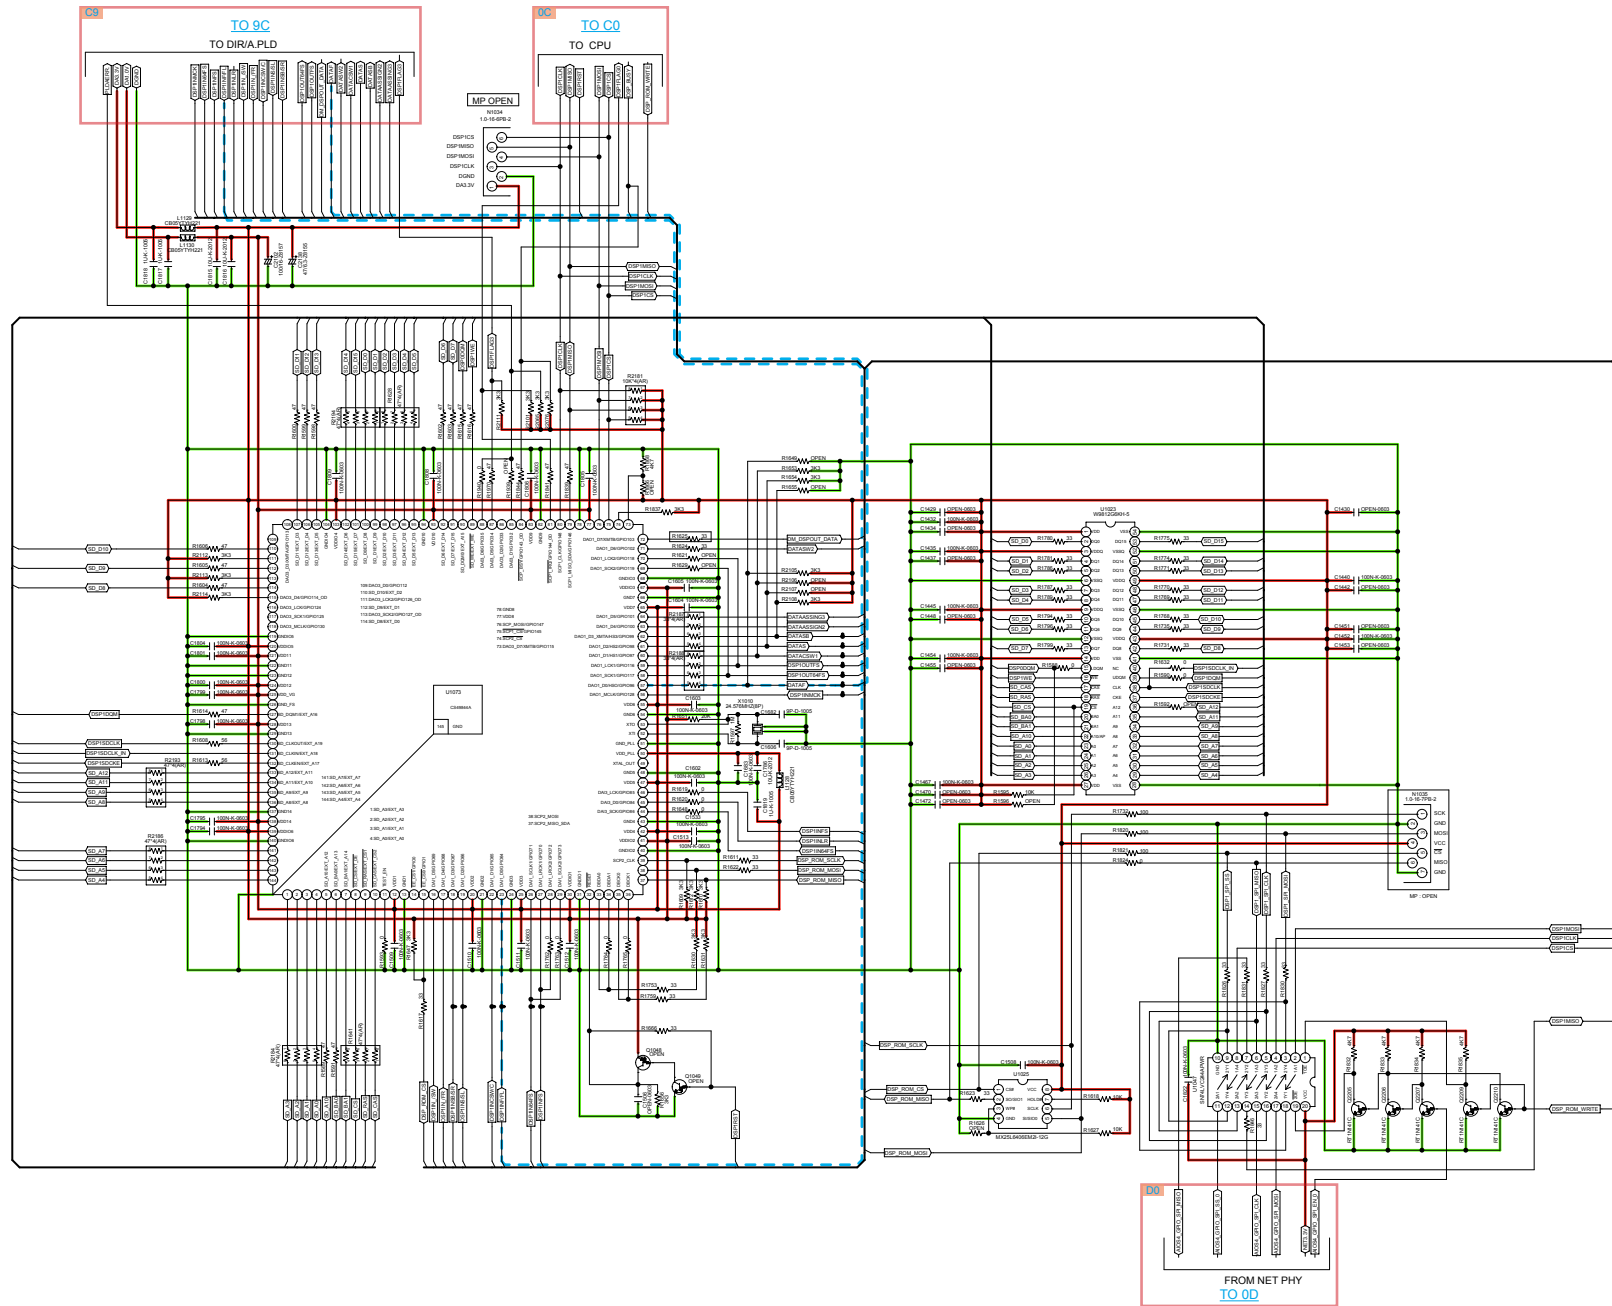

— GND LINE
 — POWER+ LINE
 — POWER- LINE
 — ANALOG AUDIO
 — DIGITAL AUDIO
 — TMDS SIGNAL
 — VIDEO SIGNAL
 — COMPONENT(Y)

SCH08 MAIN DAC

MAIN DAC

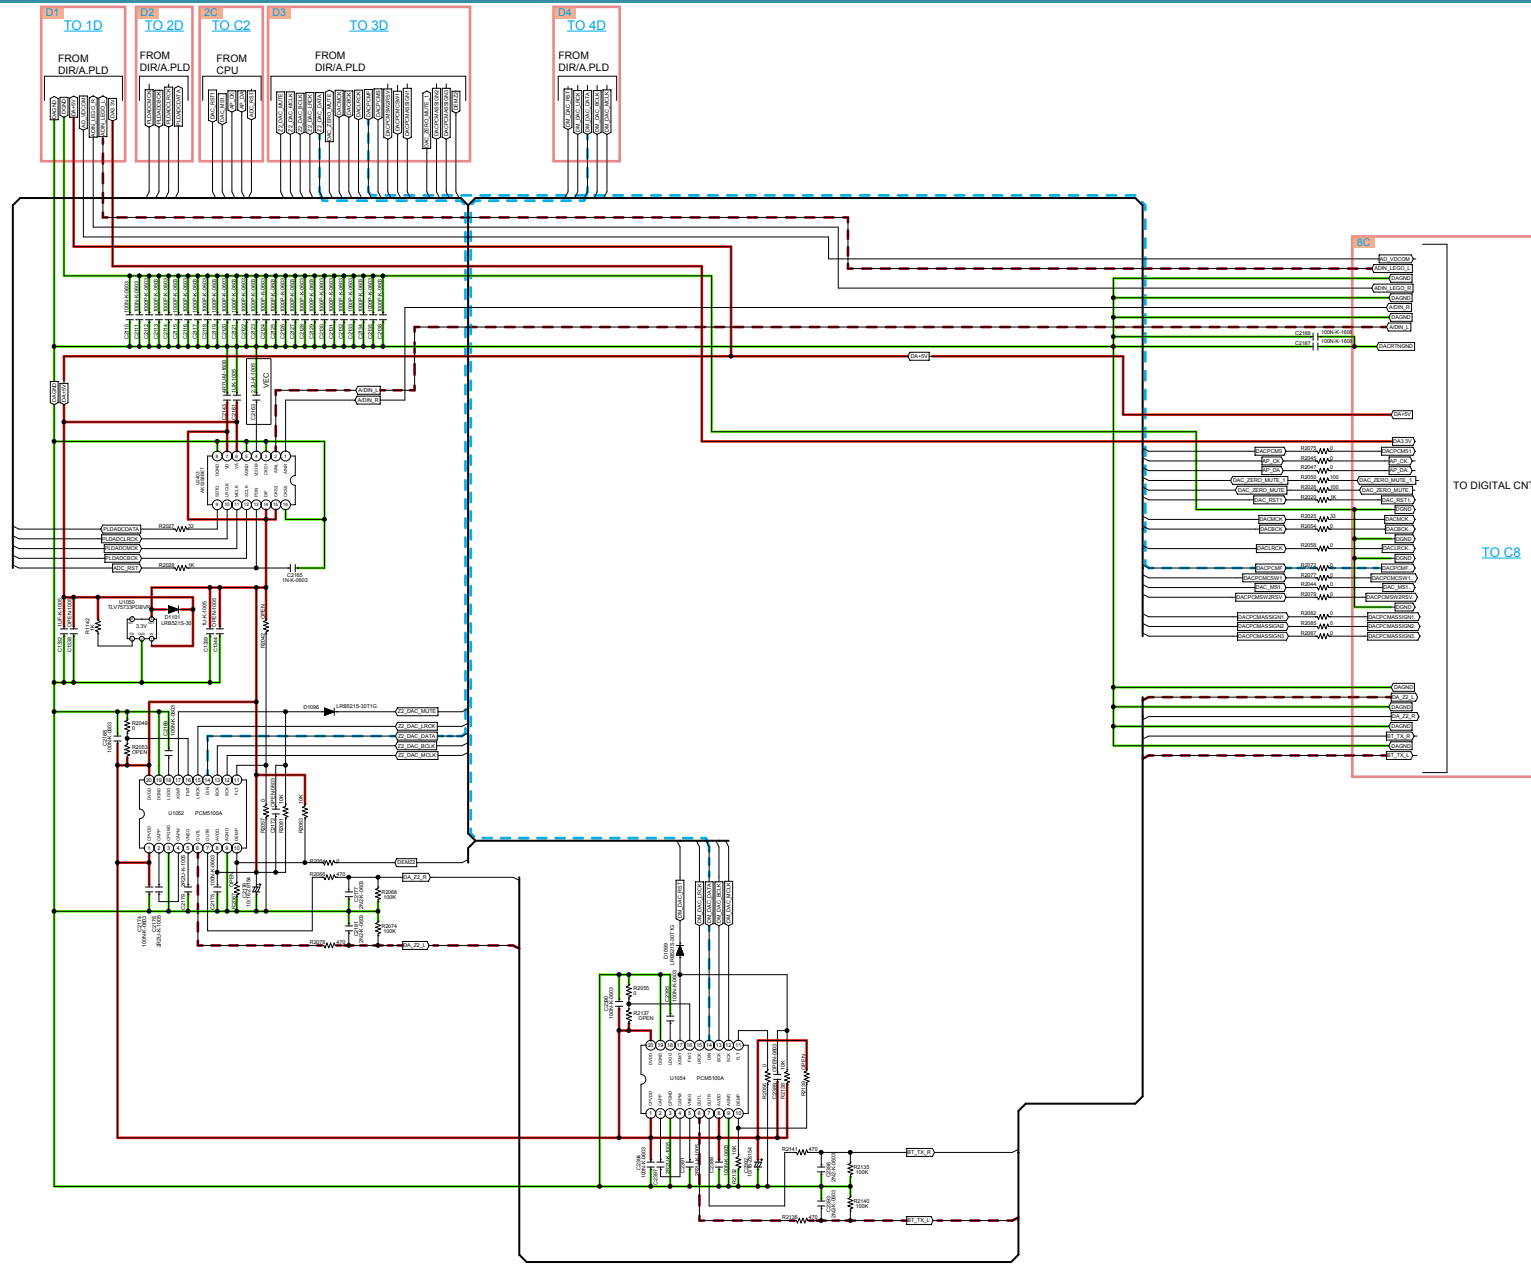

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)


Before Servicing
This Unit


Electrical

Mechanical

Repair Information

Updating

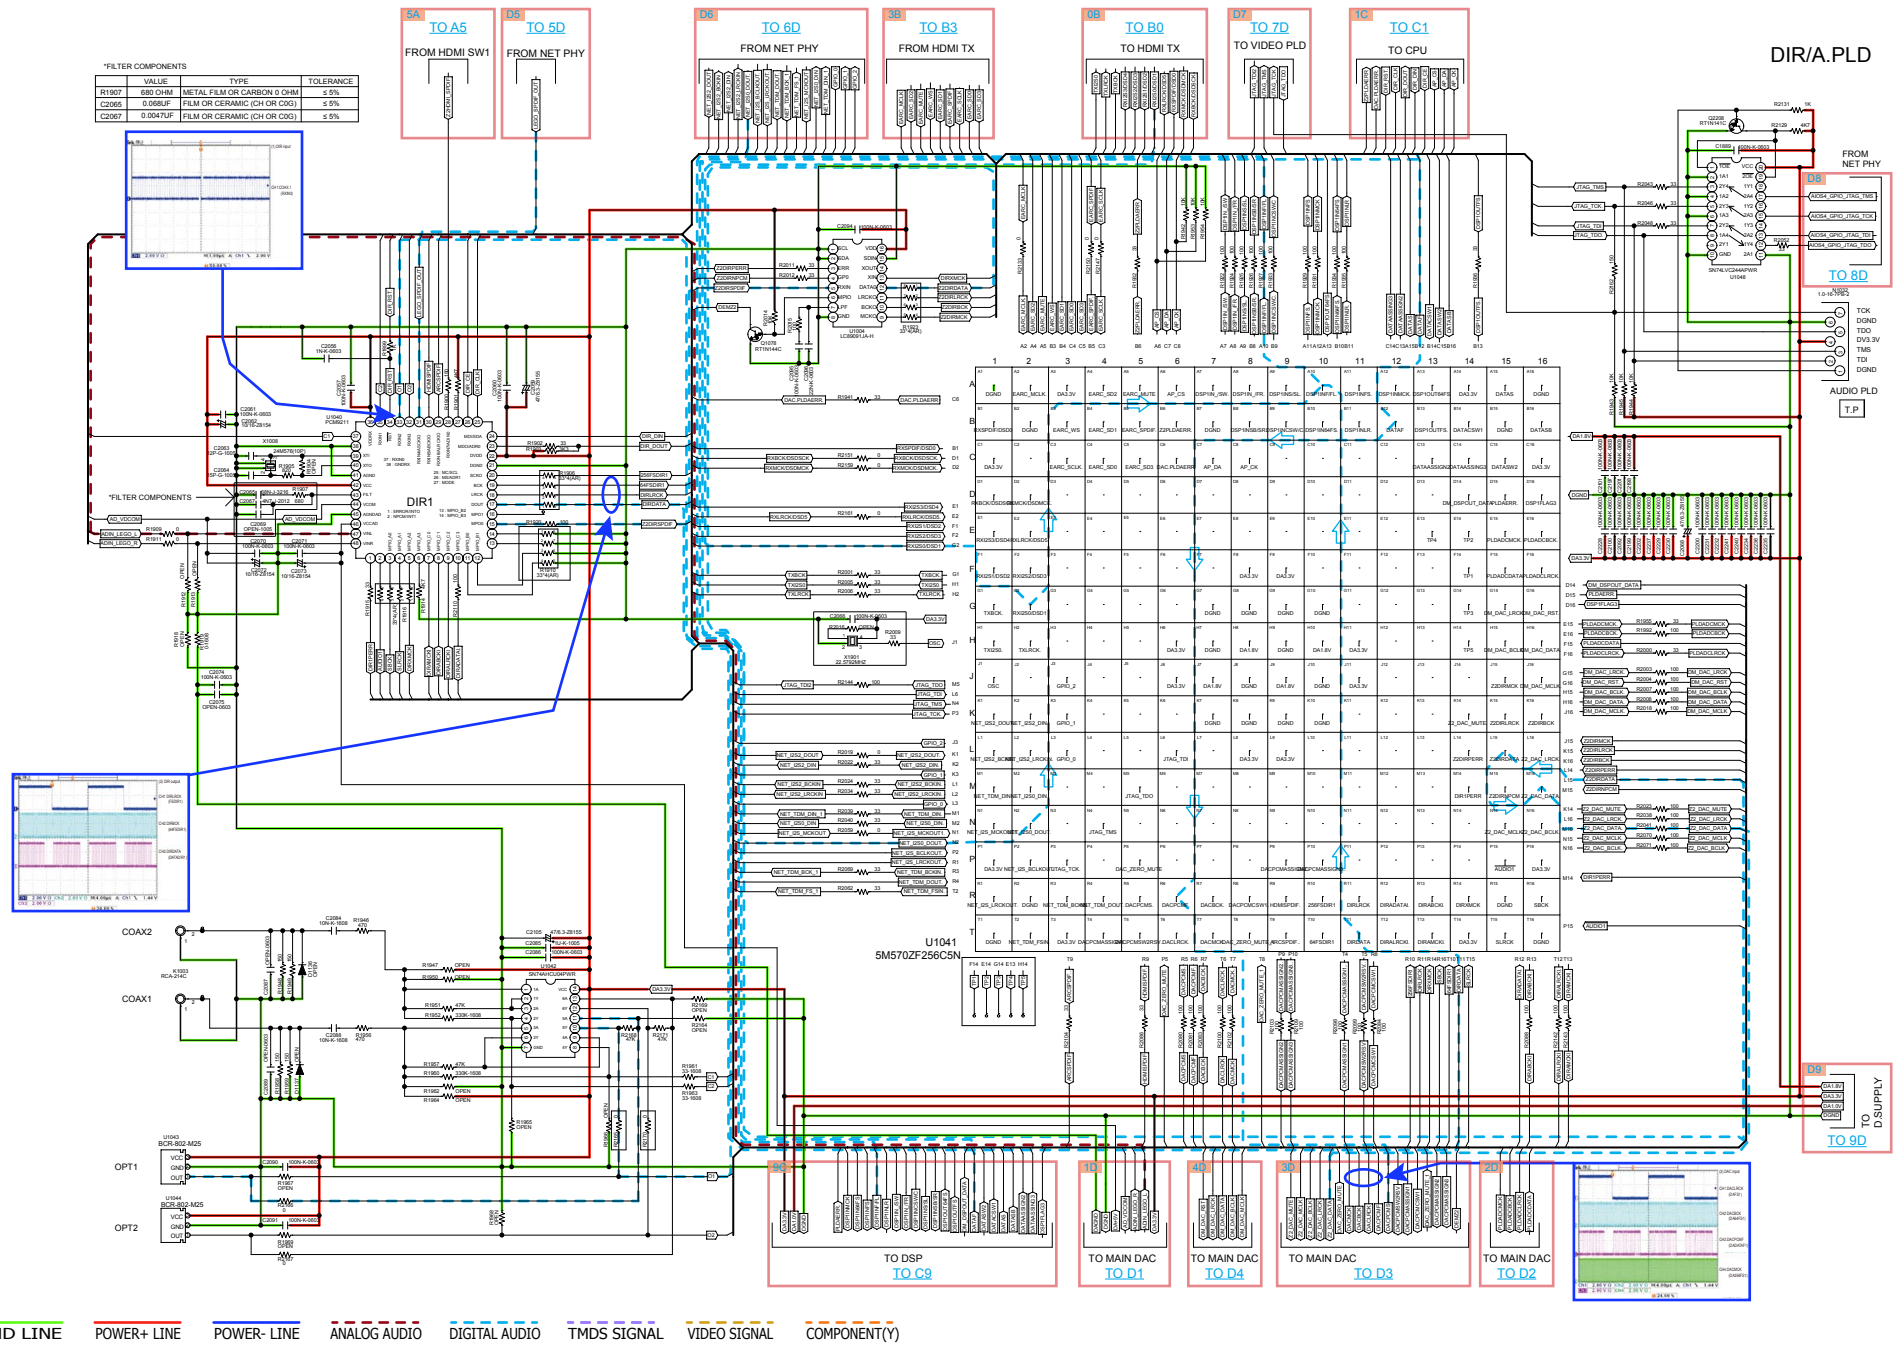

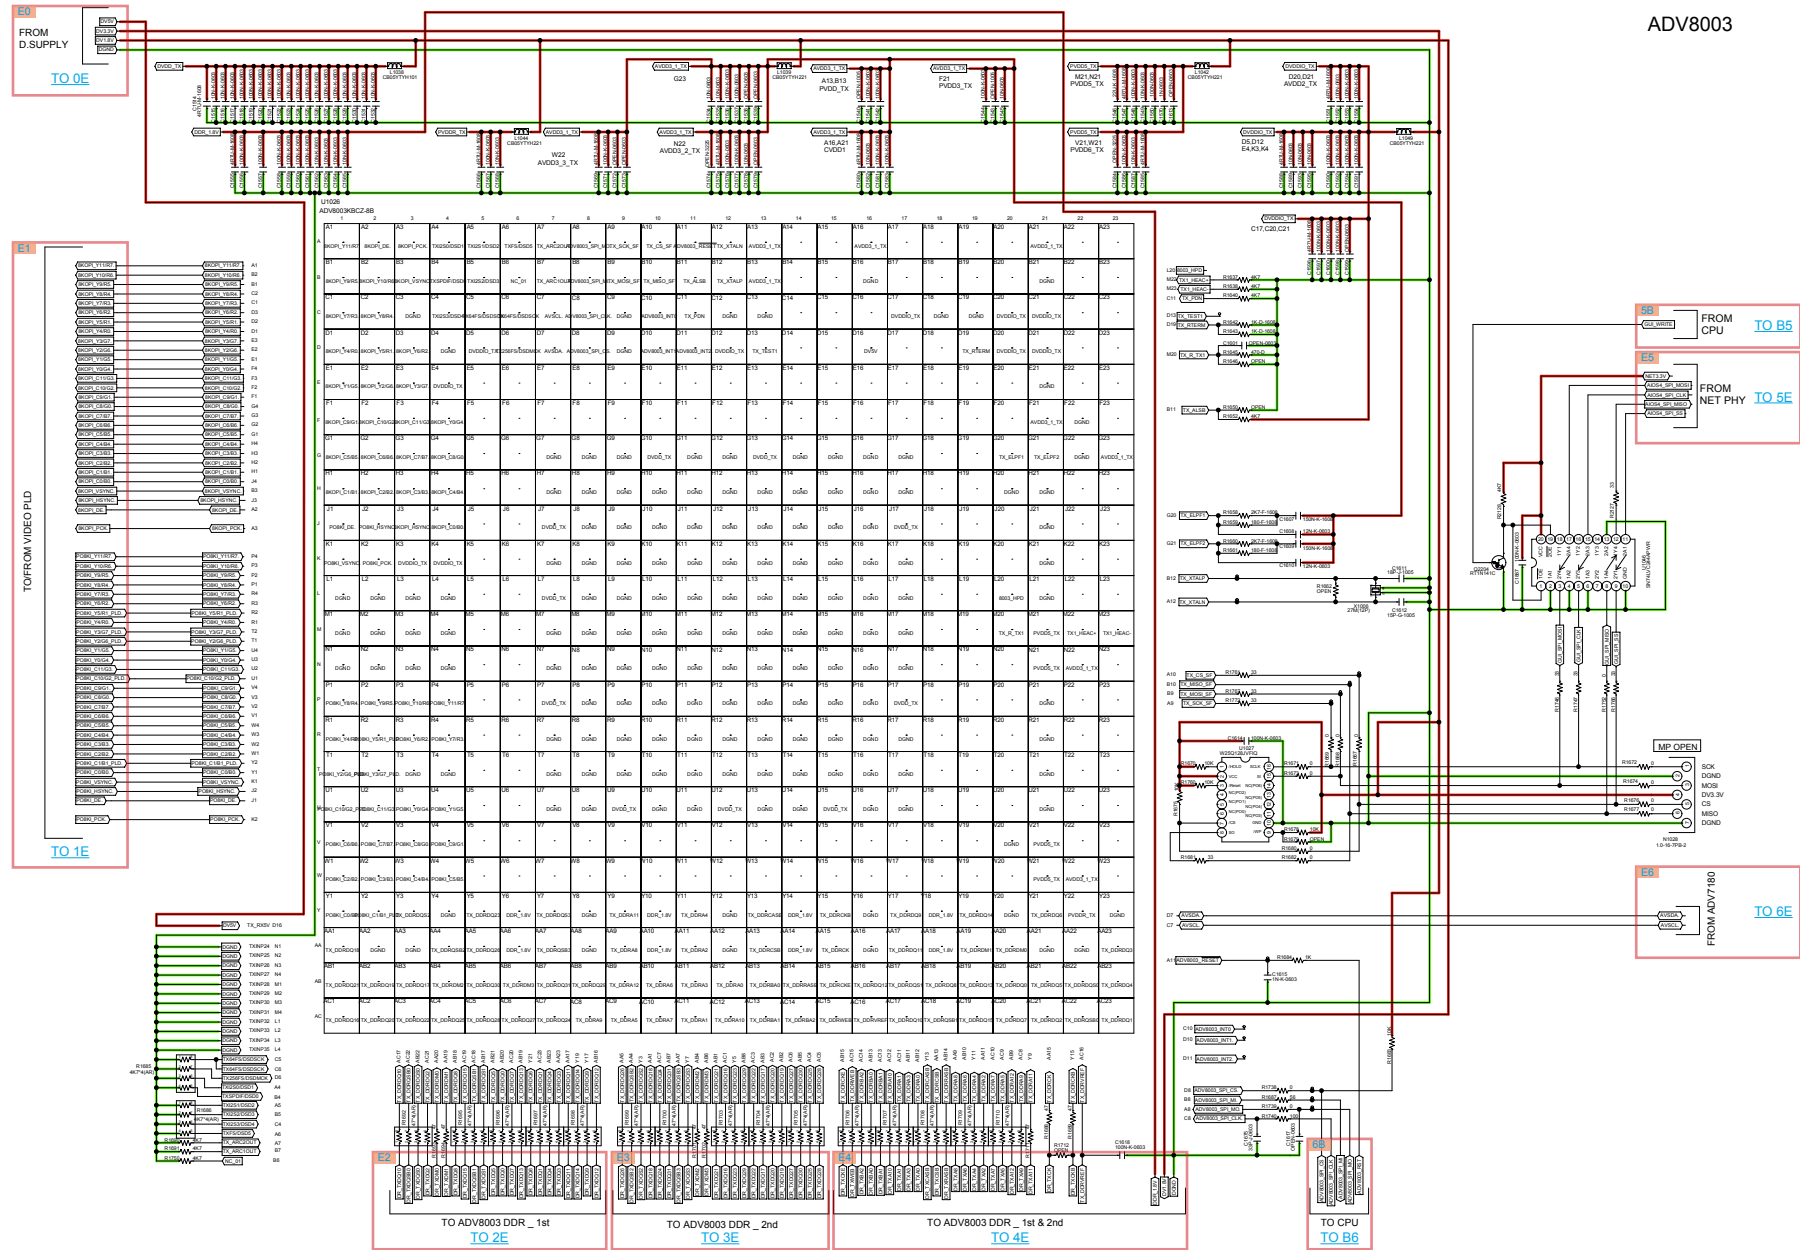

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)




Before Servicing This Unit

Electrical


Mechanical


Repair Information

Updating

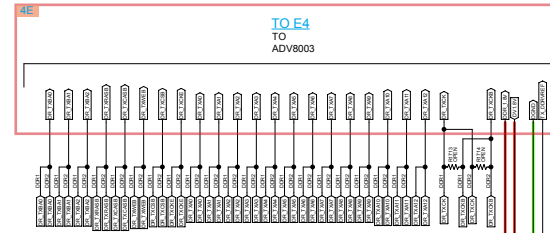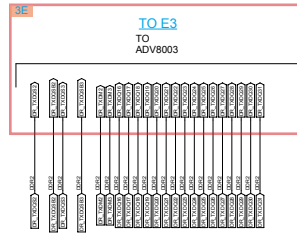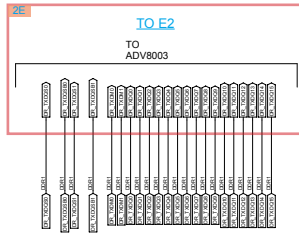


		U1028 ADV8003REF-RE3(28P)							
	1	2	3	4	5	6	7	8	9
A	A1	0000	0000	0000	0000	0000	0000	0000	0000
B	B1	0000	0000	0000	0000	0000	0000	0000	0000
C	C1	0000	0000	0000	0000	0000	0000	0000	0000
D	D1	0000	0000	0000	0000	0000	0000	0000	0000
E	E1	0000	0000	0000	0000	0000	0000	0000	0000
F	F1	0000	0000	0000	0000	0000	0000	0000	0000
G	G1	0000	0000	0000	0000	0000	0000	0000	0000
H	H1	0000	0000	0000	0000	0000	0000	0000	0000
J	J1	0000	0000	0000	0000	0000	0000	0000	0000
K	K1	0000	0000	0000	0000	0000	0000	0000	0000
L	L1	0000	0000	0000	0000	0000	0000	0000	0000
M	M1	0000	0000	0000	0000	0000	0000	0000	0000
N	N1	0000	0000	0000	0000	0000	0000	0000	0000
P	P1	0000	0000	0000	0000	0000	0000	0000	0000
R	R1	0000	0000	0000	0000	0000	0000	0000	0000


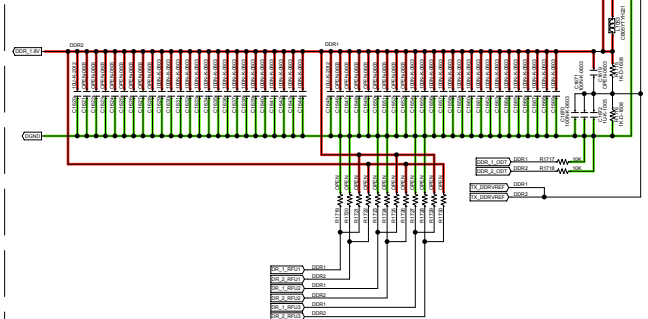


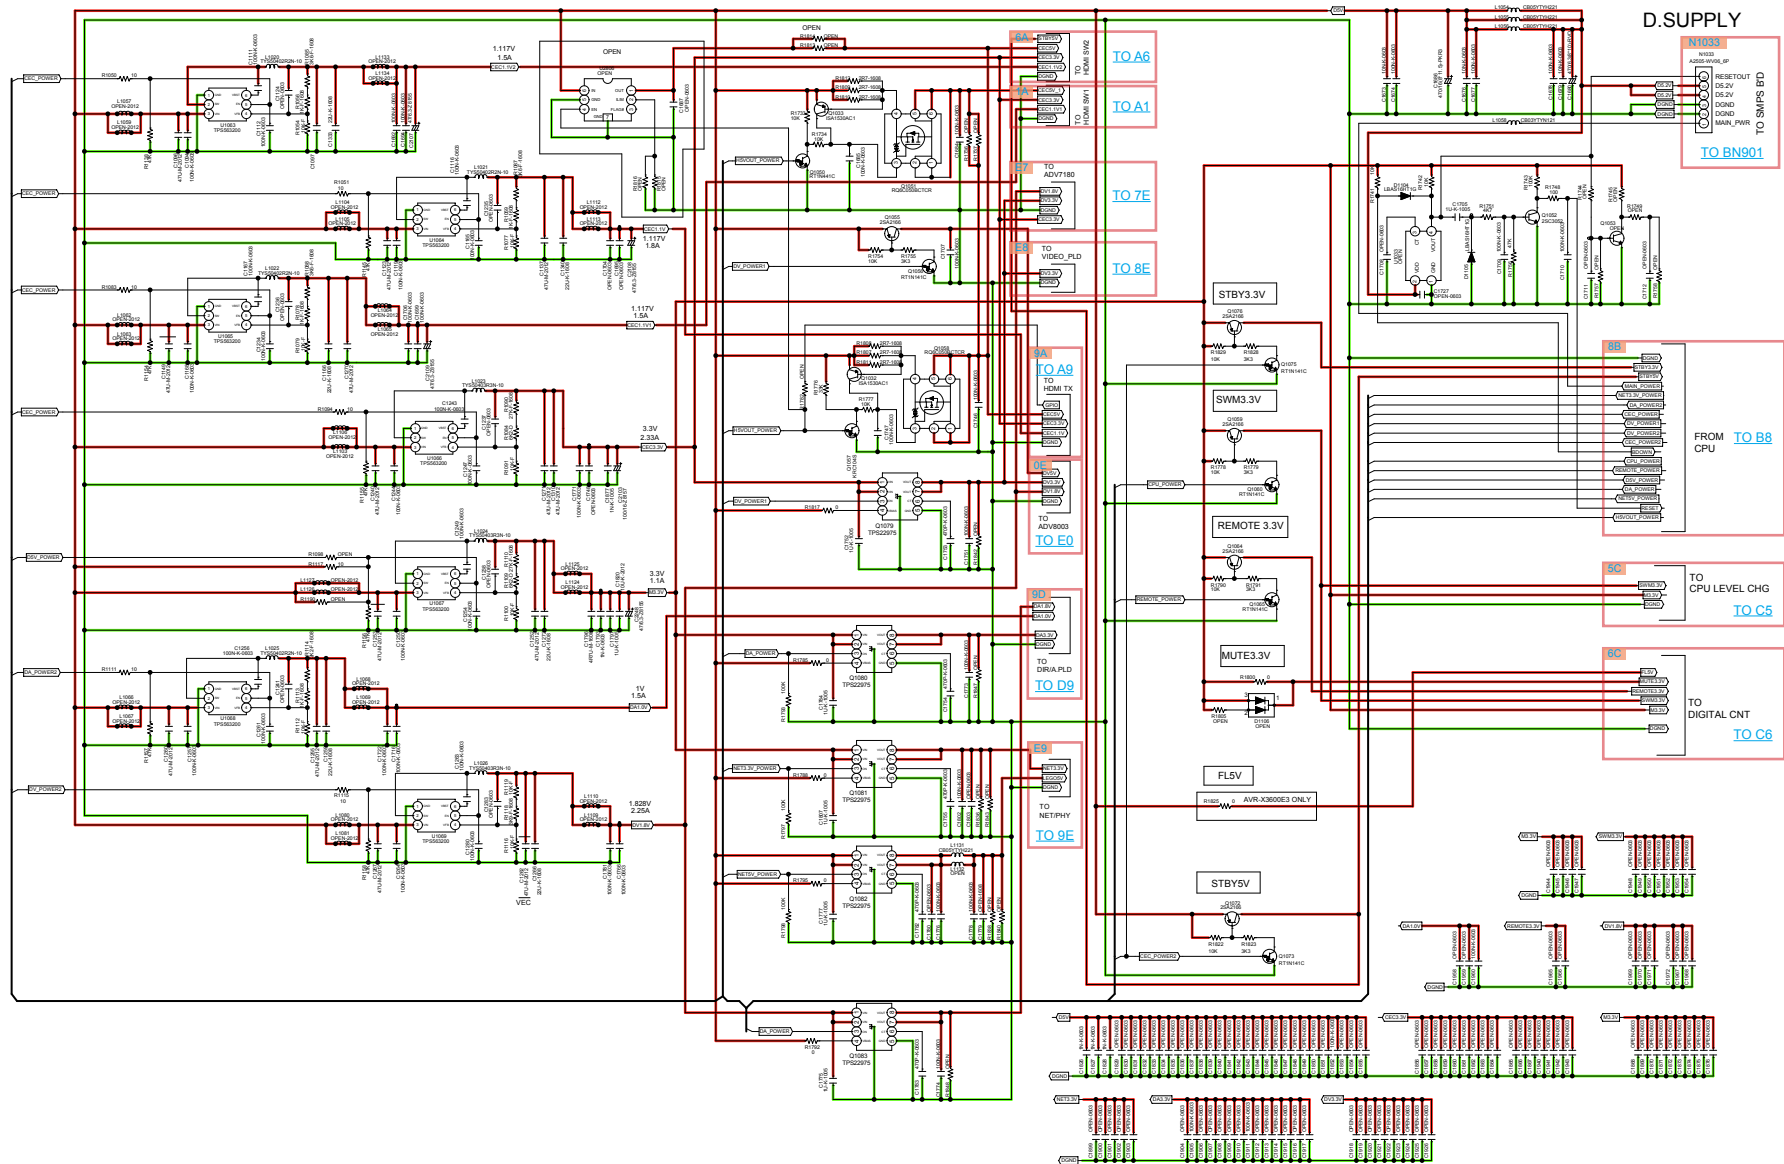

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)

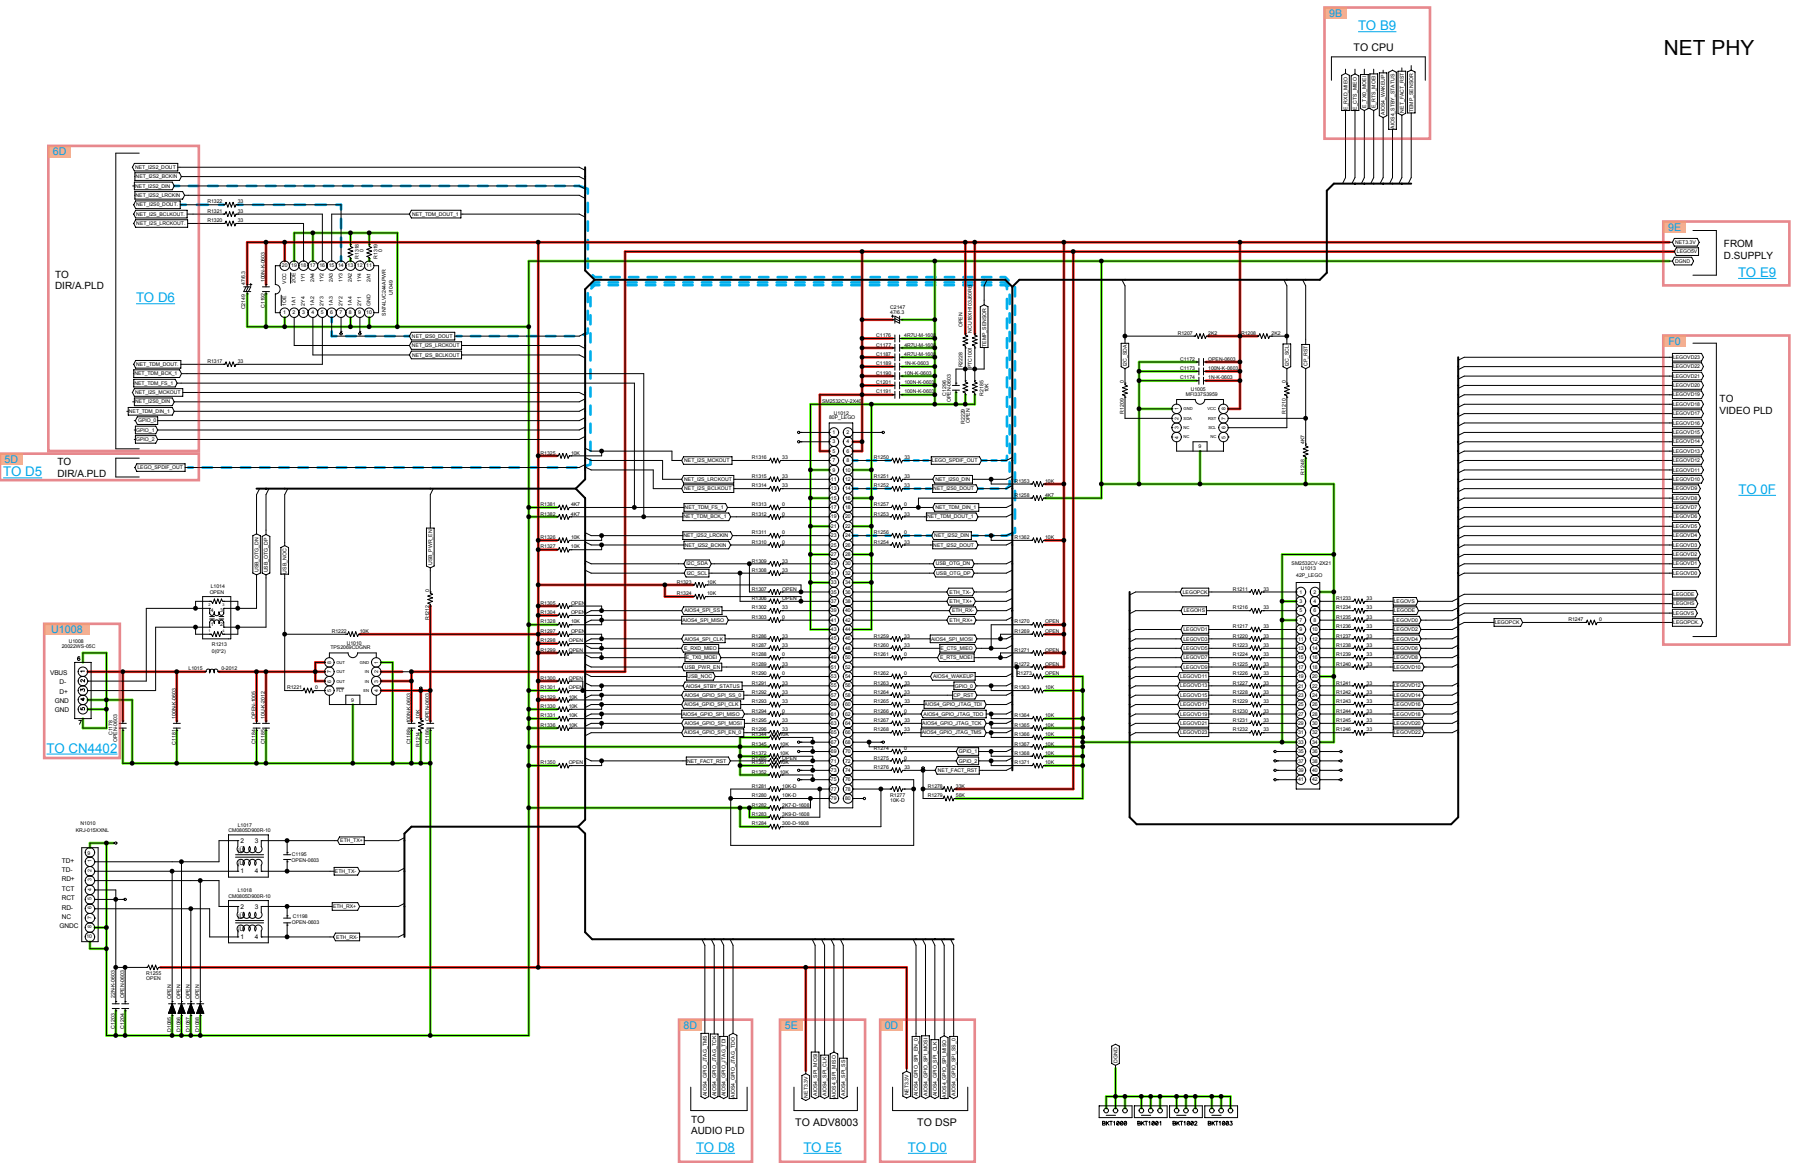



— GND LINE
 — POWER+ LINE
 — POWER- LINE
 — ANALOG AUDIO
 — DIGITAL AUDIO
 — TMDS SIGNAL
 — VIDEO SIGNAL
 — COMPONENT(Y)

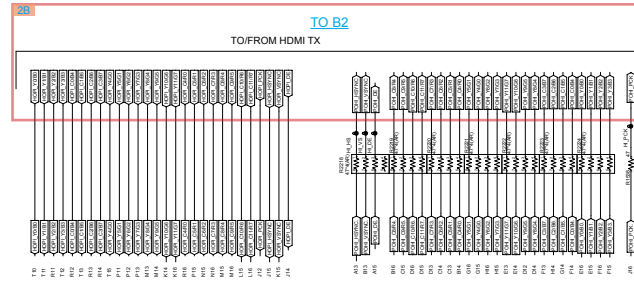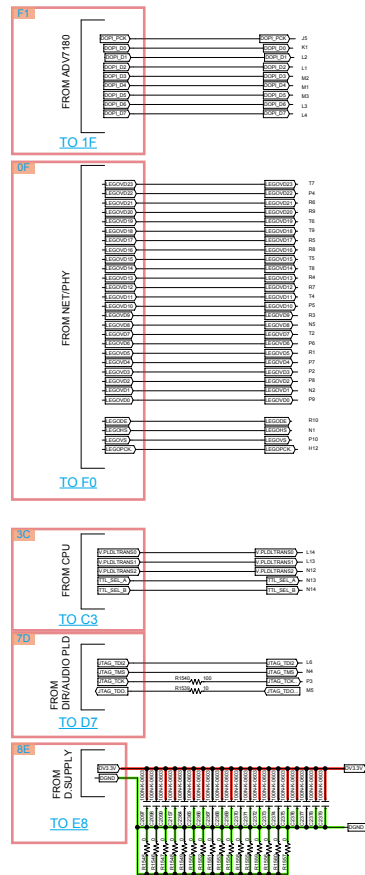


URD11
EPMD10F26CAN

A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16
D0D0	HKOP_L0B3	D0V3V	POHM_L0B5	POHM_L0B6_P1D0	POHM_L0B5	POHM_L0B6_P1D0	POHM_L0B6_P1D0	POHM_L0B6_P1D0	POHM_L0B6_P1D0	POHM_L0B6_P1D0	POHM_L0B6_P1D0	POHM_L0B6_P1D0	POHM_L0B6_P1D0	POHM_L0B6_P1D0	D0D0
HKOP_L1B1	D0D0	HKOP_L1B3	POHM_L1B5	POHM_L1B6	POHM_L1B7	D0D0	POHM_L1B9	POHM_L1B10	POHM_L1B11	POHM_L1B12	POHM_L1B13	POHM_L1B14	POHM_L1B15	D0D0	POHM_L1B16
D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12	D13	D14	D15	D16
HKOP_L11B3	HKOP_L1B5	HKOP_L1B6	HKOP_L1B7	HKOP_L1B8	HKOP_L1B9	HKOP_L1B10	HKOP_L1B11	HKOP_L1B12	HKOP_L1B13	HKOP_L1B14	HKOP_L1B15	HKOP_L1B16	HKOP_L1B17	HKOP_L1B18	HKOP_L1B19
D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12	D13	D14	D15	D16
HKOP_L1B2	HKOP_L1B3	HKOP_L1B4	HKOP_L1B5	HKOP_L1B6	HKOP_L1B7	HKOP_L1B8	HKOP_L1B9	HKOP_L1B10	HKOP_L1B11	HKOP_L1B12	HKOP_L1B13	HKOP_L1B14	HKOP_L1B15	HKOP_L1B16	HKOP_L1B17
F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	F13	F14	F15	F16
HKOP_L2B5	HKOP_L1B5	HKOP_L1B7	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	POHM_L1B13	POHM_L1B14	POHM_L1B15	POHM_L1B16
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12	G13	G14	G15	G16
HKOP_L2B1	HKOP_L2B2	HKOP_L2B3	HKOP_L2B4	HKOP_L2B5	HKOP_L2B6	HKOP_L2B7	HKOP_L2B8	HKOP_L2B9	HKOP_L2B10	HKOP_L2B11	HKOP_L2B12	HKOP_L2B13	HKOP_L2B14	HKOP_L2B15	HKOP_L2B16
H1	H2	H3	H4	H5	H6	H7	H8	H9	H10	H11	H12	H13	H14	H15	H16
HKOP_L2B4	HKOP_L2B5	HKOP_L2B6	HKOP_L2B7	HKOP_L2B8	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	D0V3V	POHM_L1B13	POHM_L1B14	POHM_L1B15	POHM_L1B16
J1	J2	J3	J4	J5	J6	J7	J8	J9	J10	J11	J12	J13	J14	J15	J16
HKOP_L2B8	HKOP_L2B9	HKOP_L2B10	HKOP_L2B11	HKOP_L2B12	HKOP_L2B13	HKOP_L2B14	HKOP_L2B15	HKOP_L2B16	HKOP_L2B17	HKOP_L2B18	HKOP_L2B19	HKOP_L2B20	HKOP_L2B21	HKOP_L2B22	HKOP_L2B23
K1	K2	K3	K4	K5	K6	K7	K8	K9	K10	K11	K12	K13	K14	K15	K16
HKOP_L2B1	HKOP_L2B2	HKOP_L2B3	HKOP_L2B4	HKOP_L2B5	HKOP_L2B6	HKOP_L2B7	HKOP_L2B8	HKOP_L2B9	HKOP_L2B10	HKOP_L2B11	HKOP_L2B12	HKOP_L2B13	HKOP_L2B14	HKOP_L2B15	HKOP_L2B16
L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16
HKOP_L2B1	HKOP_L2B2	HKOP_L2B3	HKOP_L2B4	HKOP_L2B5	HKOP_L2B6	HKOP_L2B7	HKOP_L2B8	HKOP_L2B9	HKOP_L2B10	HKOP_L2B11	HKOP_L2B12	HKOP_L2B13	HKOP_L2B14	HKOP_L2B15	HKOP_L2B16
M1	M2	M3	M4	M5	M6	M7	M8	M9	M10	M11	M12	M13	M14	M15	M16
HKOP_L2B1	HKOP_L2B2	HKOP_L2B3	HKOP_L2B4	HKOP_L2B5	HKOP_L2B6	HKOP_L2B7	HKOP_L2B8	HKOP_L2B9	HKOP_L2B10	HKOP_L2B11	HKOP_L2B12	HKOP_L2B13	HKOP_L2B14	HKOP_L2B15	HKOP_L2B16
N1	N2	N3	N4	N5	N6	N7	N8	N9	N10	N11	N12	N13	N14	N15	N16
LEG005	LEG001	P3	J1A1_0A5	LEG008	LEG009	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16
Q1	Q2	Q3	Q4	Q5	Q6	Q7	Q8	Q9	Q10	Q11	Q12	Q13	Q14	Q15	Q16
D0V3V	D0D0	J1A1_0A3	LEG002	LEG009	LEG004	LEG003	LEG003	LEG003	LEG003	HKOP_L2B1	HKOP_L2B2	HKOP_L2B3	HKOP_L2B4	D0V3V	HKOP_L2B16
R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15	R16
LEG005	D0D0	LEG009	LEG0013	LEG0017	LEG0012	LEG0013	LEG0013	LEG0013	LEG0013	HKOP_L2B1	HKOP_L2B2	HKOP_L2B3	HKOP_L2B4	D0D0	HKOP_L2B16
T1	T2	T3	T4	T5	T6	T7	T8	T9	T10	T11	T12	T13	T14	T15	T16
D0D0	LEG007	D0V3V	LEG0011	LEG0015	LEG0019	LEG0023	LEG0014	LEG0014	HKOP_L2B1	HKOP_L2B2	HKOP_L2B3	HKOP_L2B4	D0V3V	HKOP_L2B16	D0D0

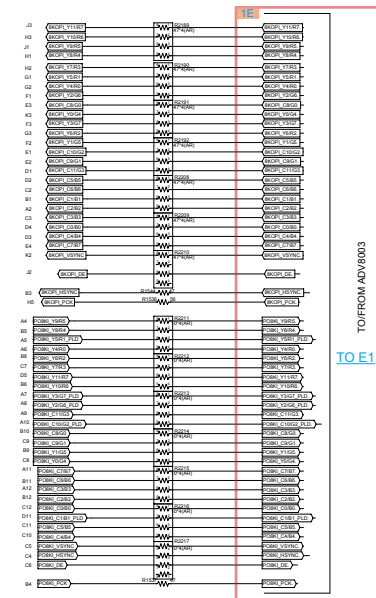


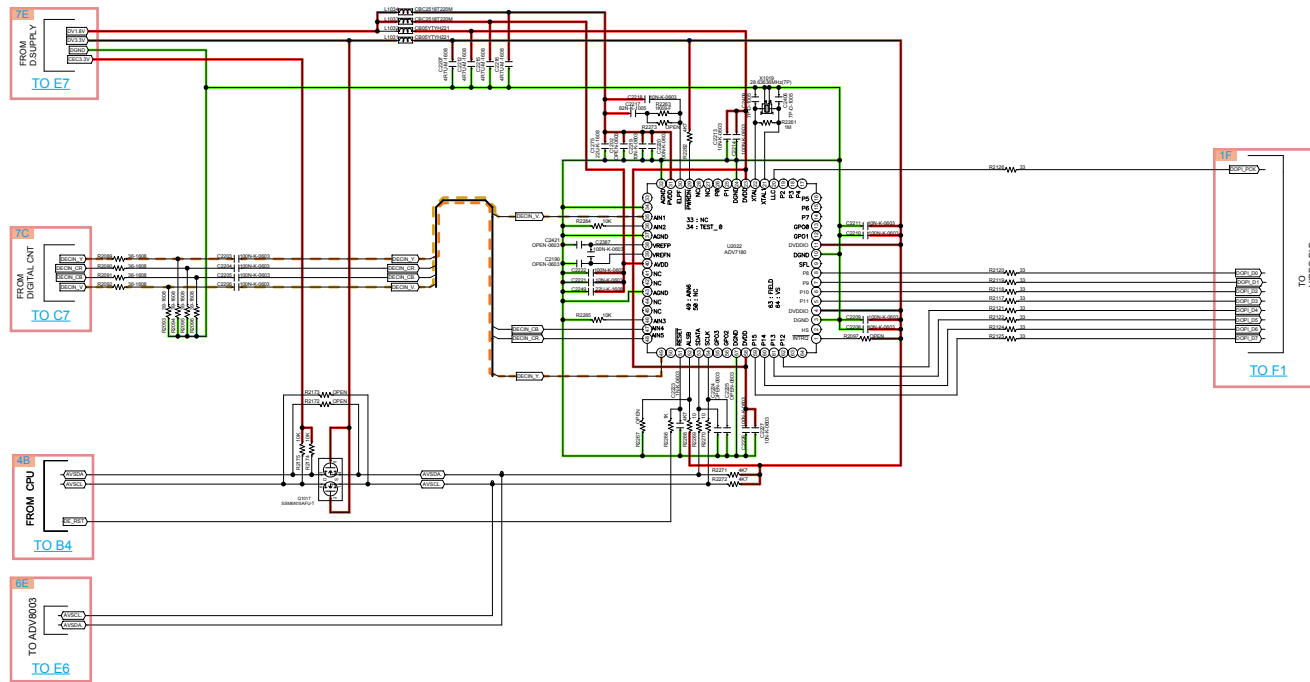


— GND LINE
 — POWER+ LINE
 — POWER- LINE
 — ANALOG AUDIO
 — DIGITAL AUDIO
 — TMDS SIGNAL
 — VIDEO SIGNAL
 — COMPONENT(Y)

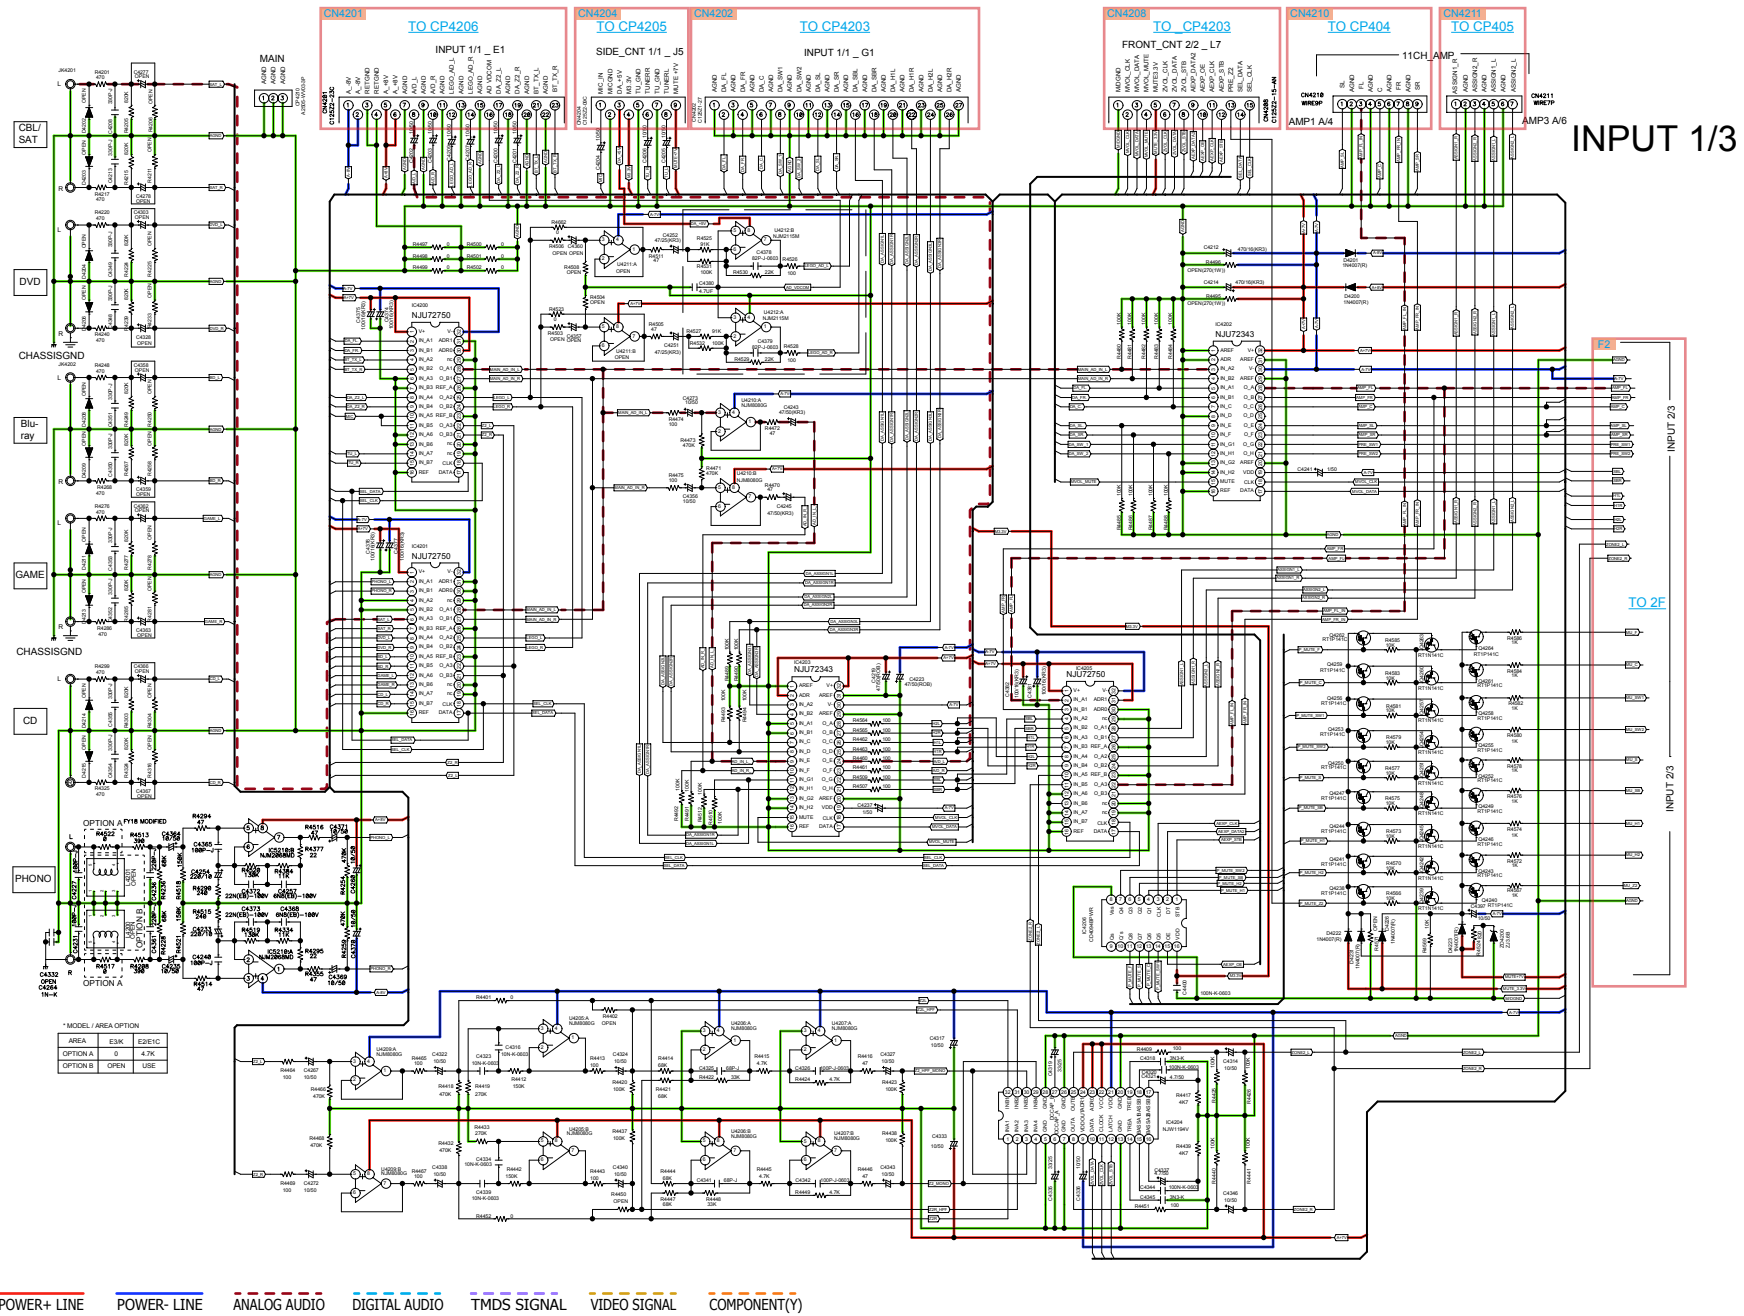

INPUT 1/3

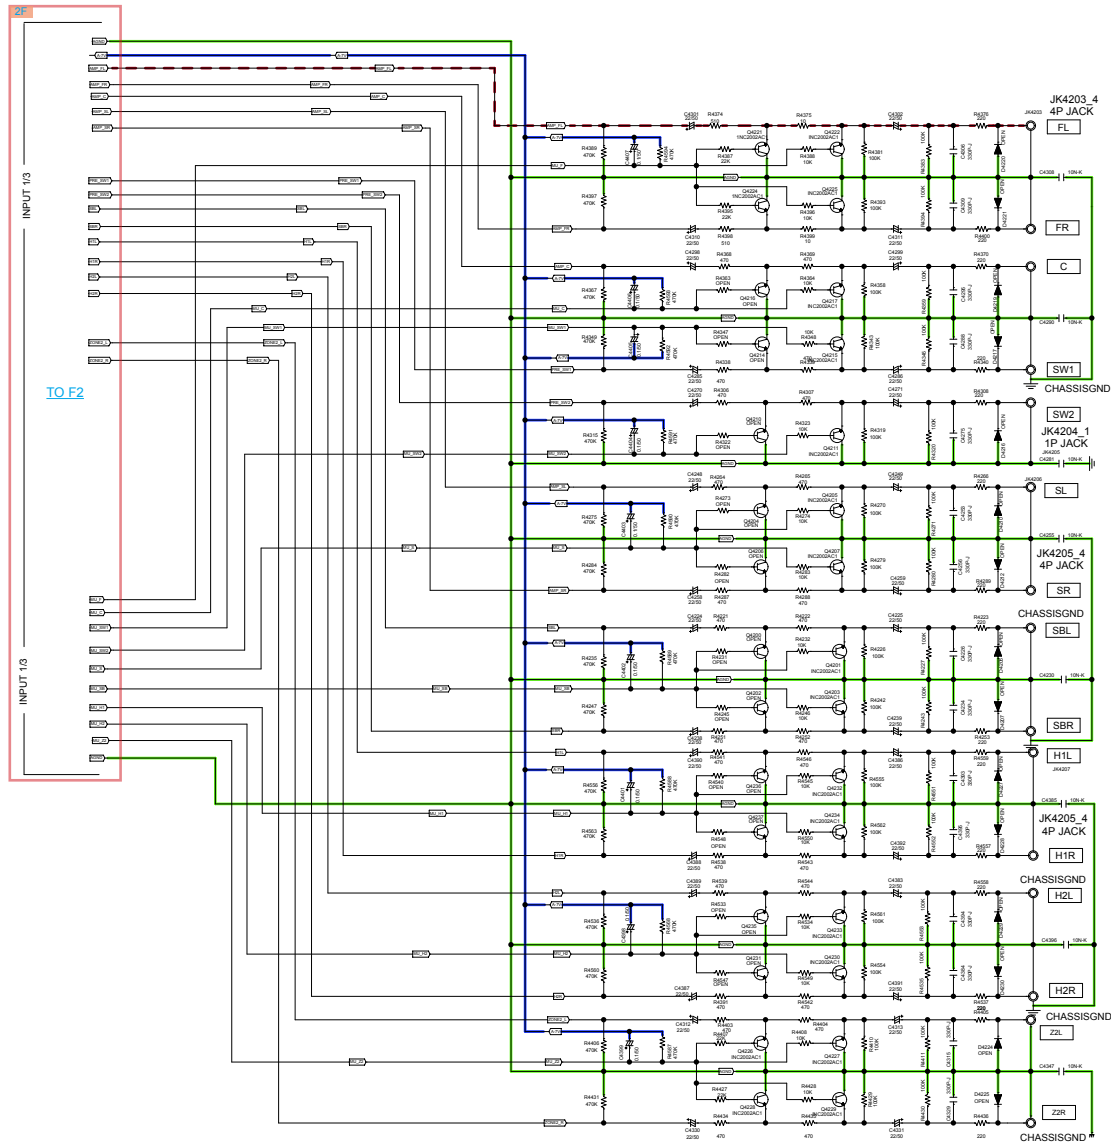


— GND LINE
 — POWER+ LINE
 — POWER- LINE
 — ANALOG AUDIO
 — DIGITAL AUDIO
 — TMDS SIGNAL
 — VIDEO SIGNAL
 — COMPONENT(Y)

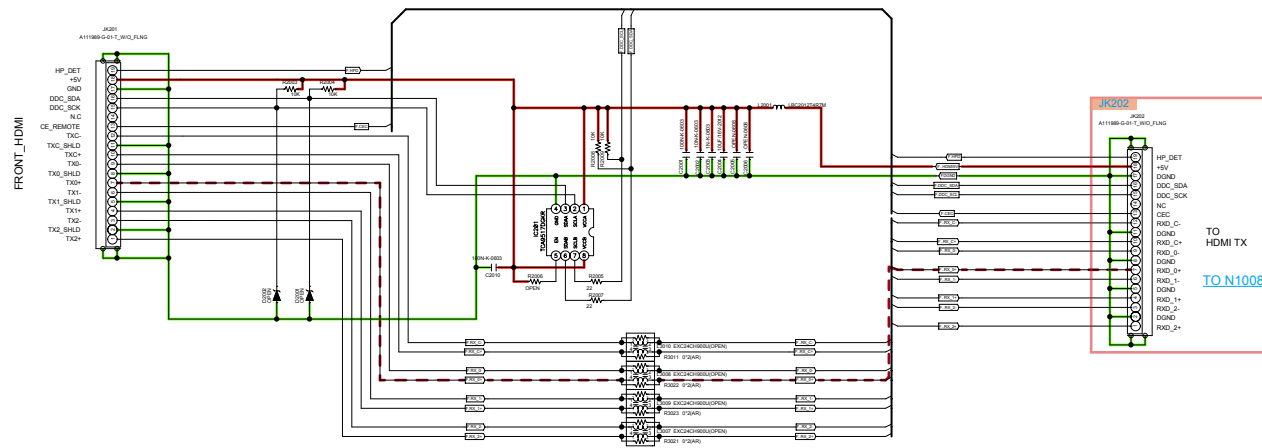

— GND LINE
 — POWER+ LINE
 — POWER- LINE
 — ANALOG AUDIO
 — DIGITAL AUDIO
 — TMDS SIGNAL
 — VIDEO SIGNAL
 — COMPONENT(Y)


SIDE_CNT 1/1

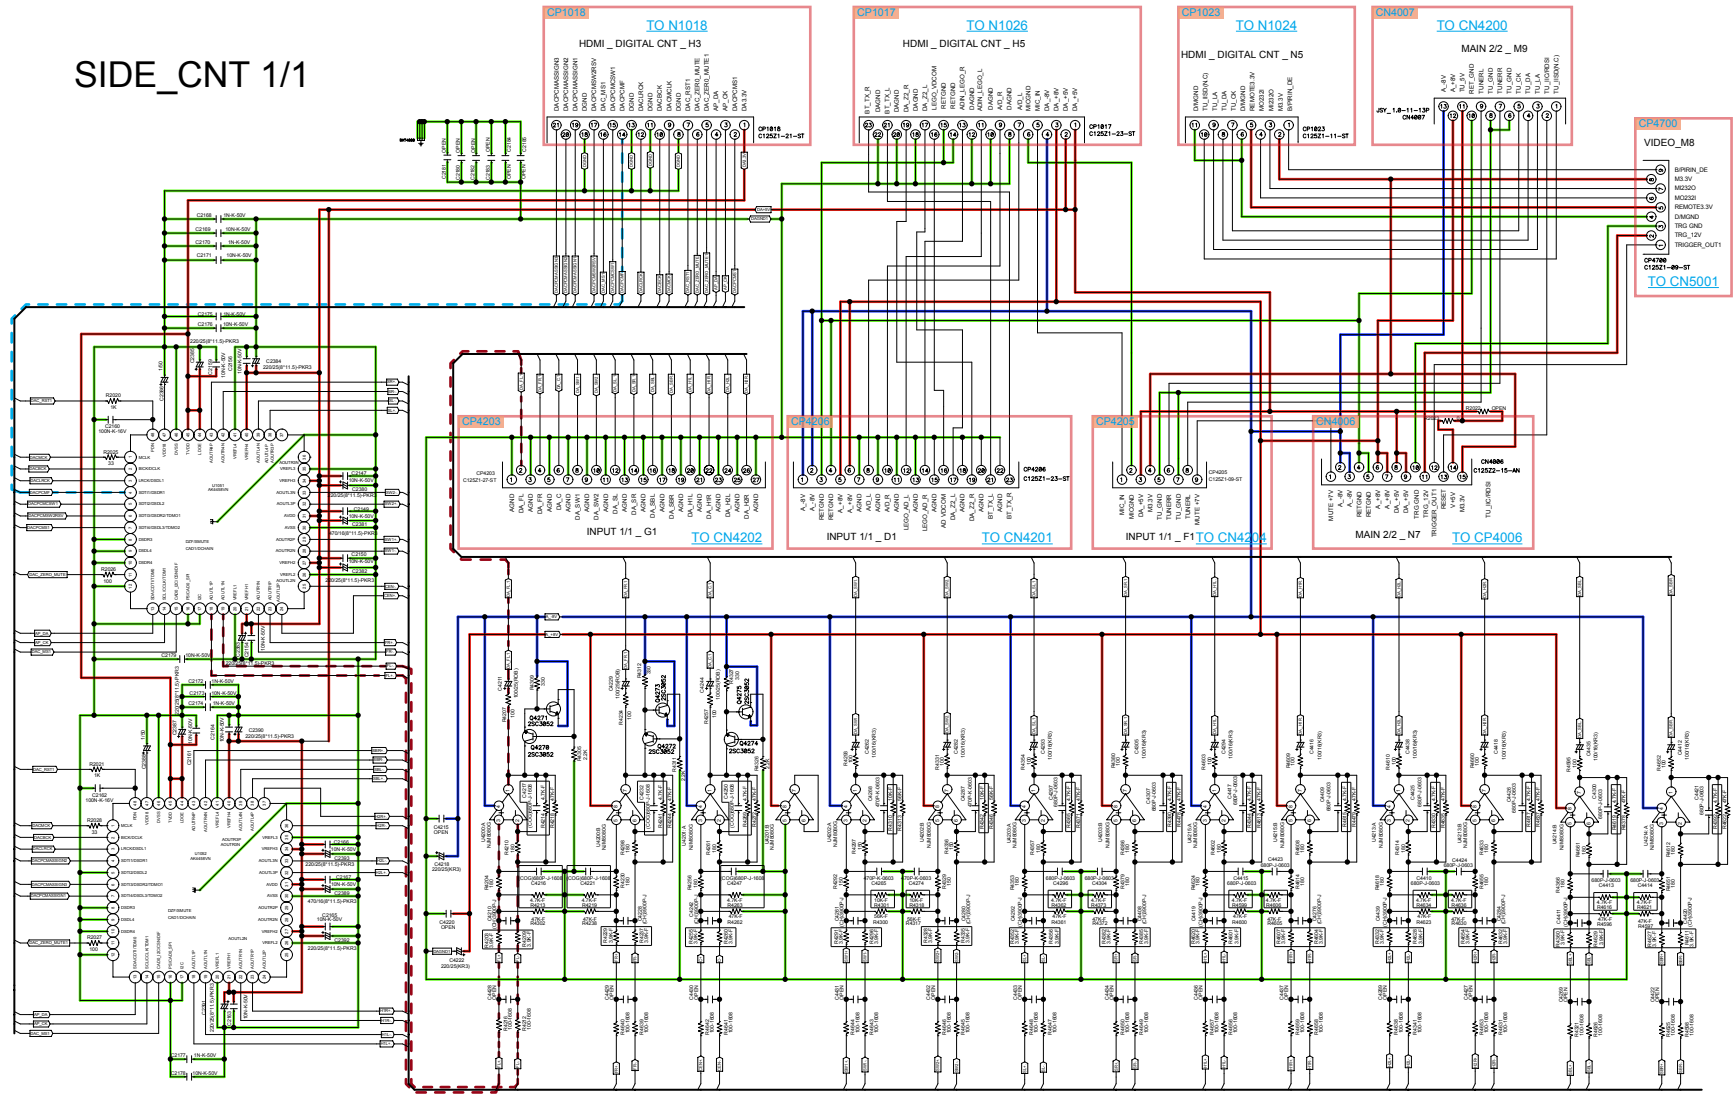

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)


VIDEO&RS232C PART

VIDEO_F/CNT 1/2




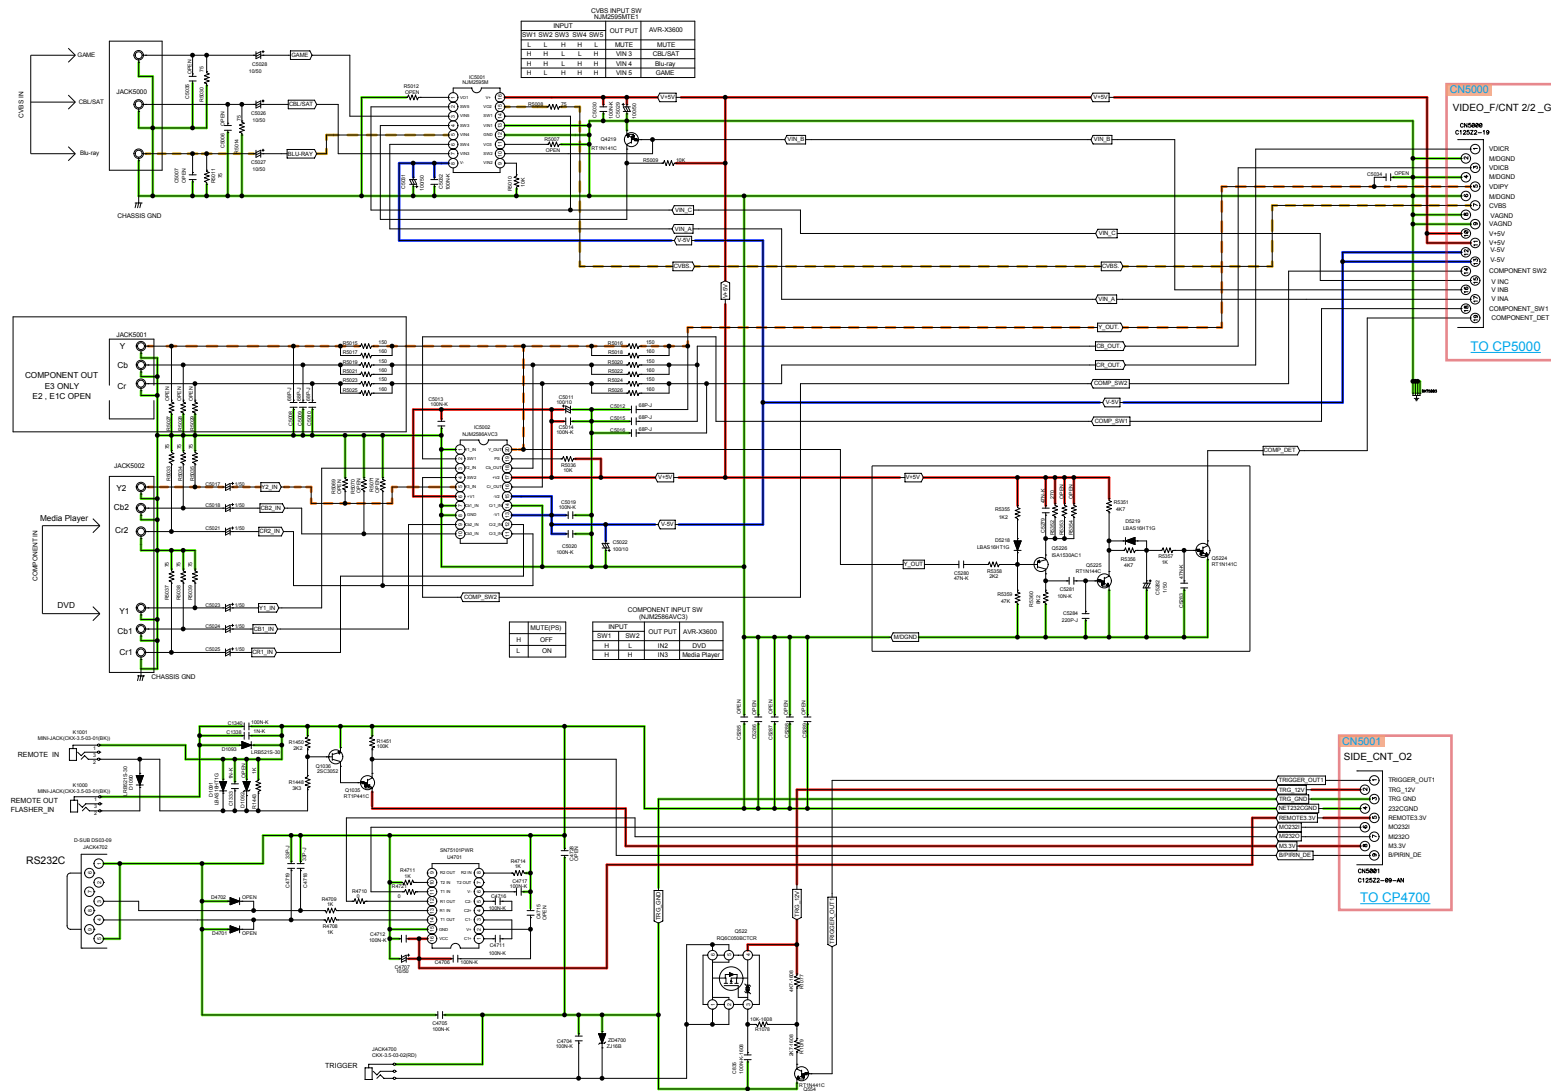


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)

FRONT_CNT PART

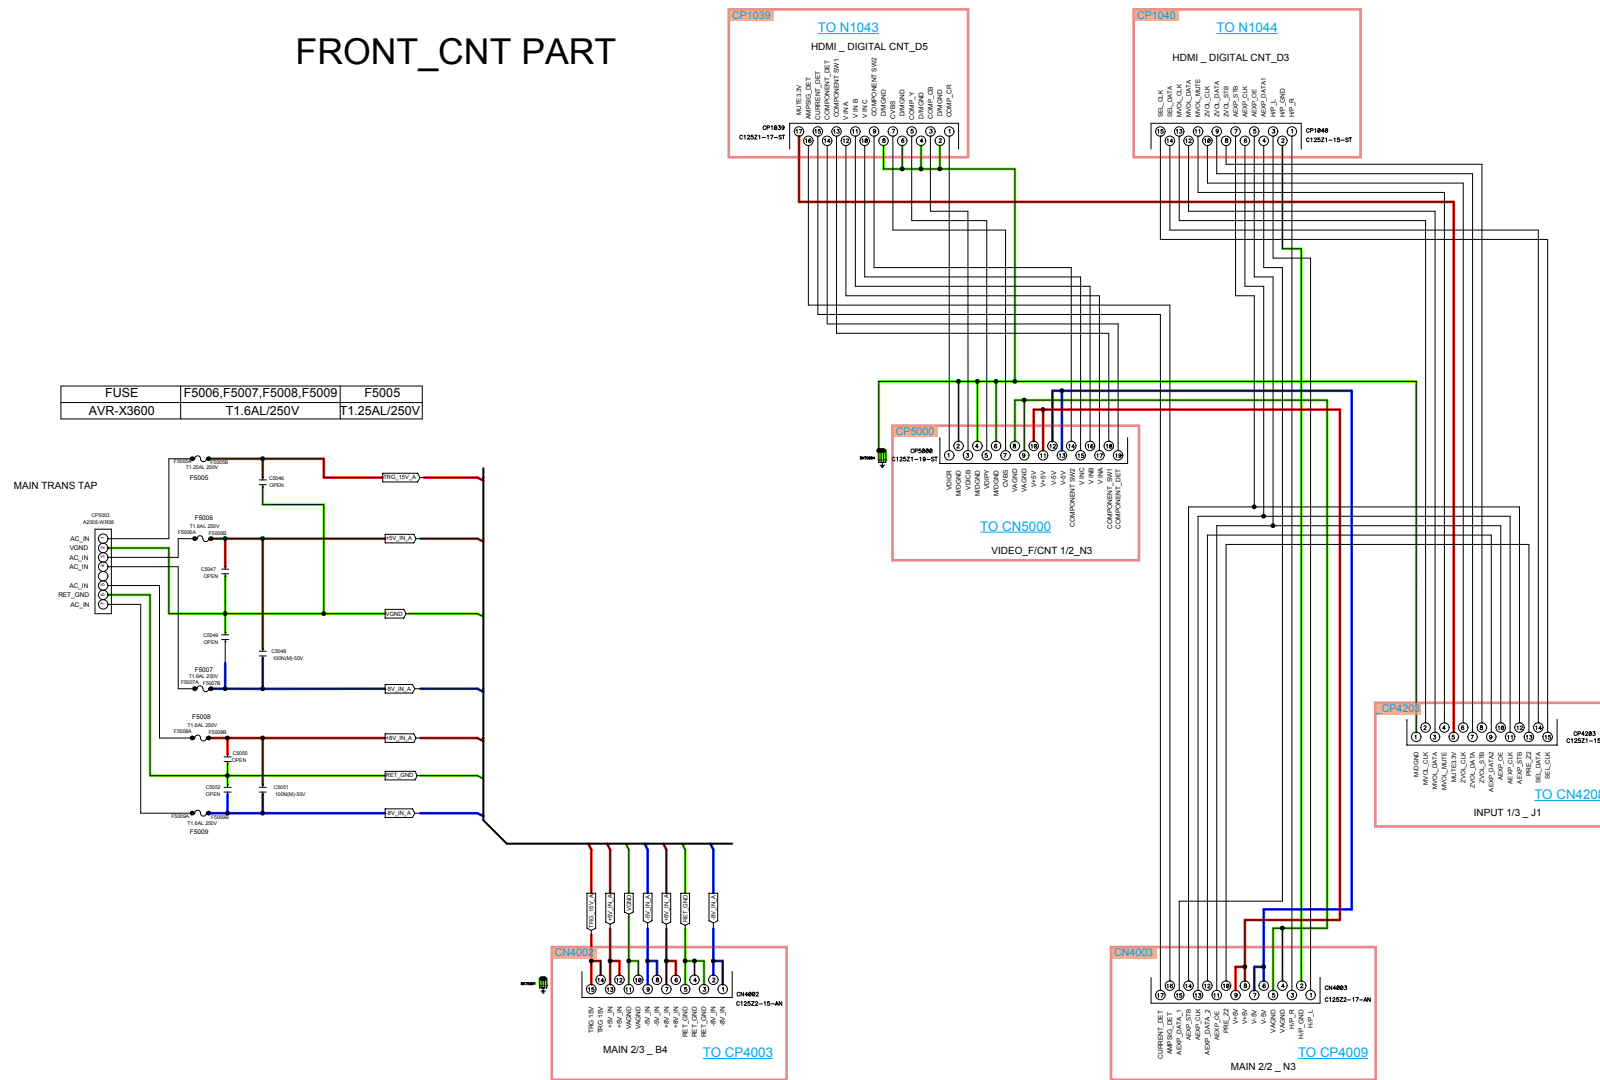


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)

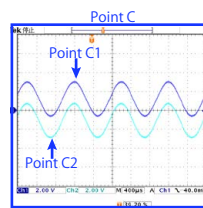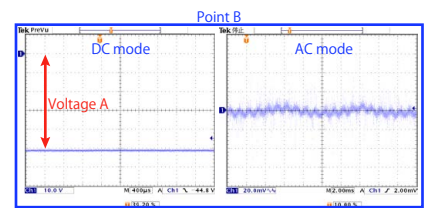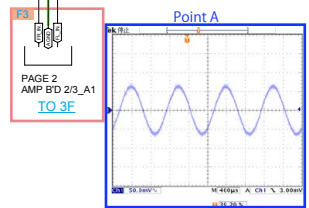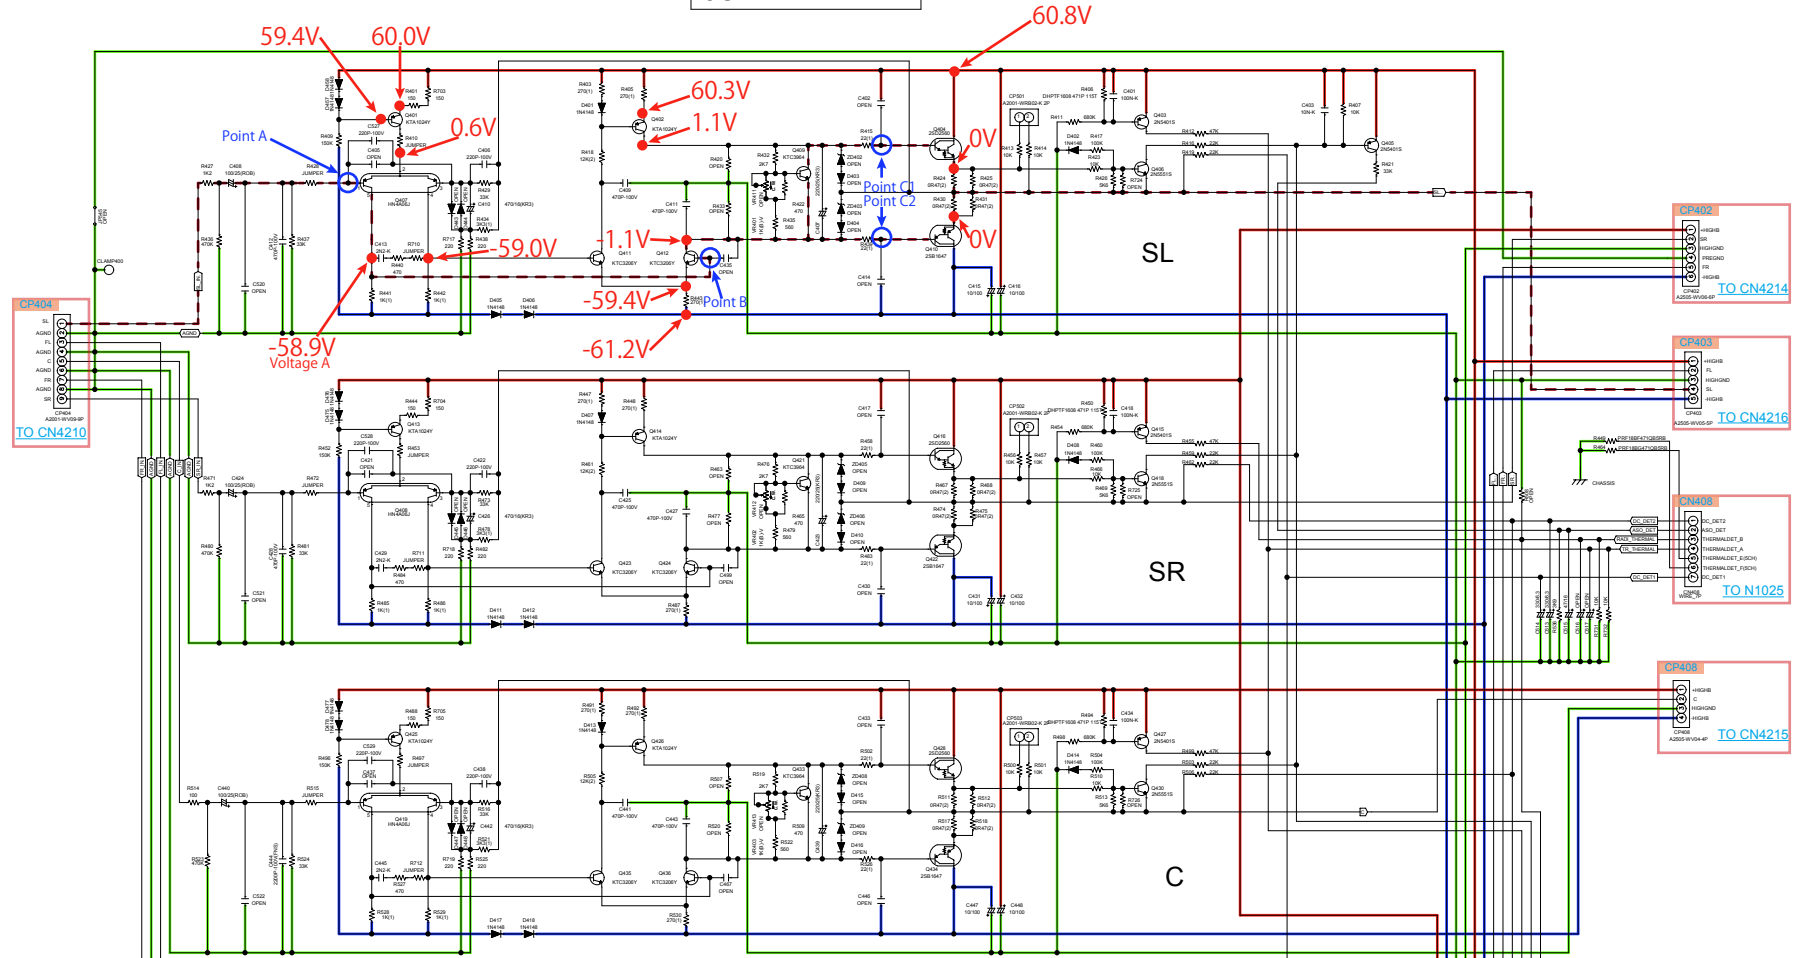

Measurement condition
 • Voltage measurement
 • No signal
 • Waveform measurement
 INPUT: 200mVrms / 1KHz (ANALOG)
 Surround mode: MCh Stereo
 VOL: 70
 Speaker load: 8ohms

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMSD SIGNAL VIDEO SIGNAL COMPONENT(Y)



PAGE 2 AMP B'D 2/3_M1 TO 4F

Before Servicing This Unit


Electrical

Mechanical


Repair Information

Updating

5CH-AMP B'D 2/2

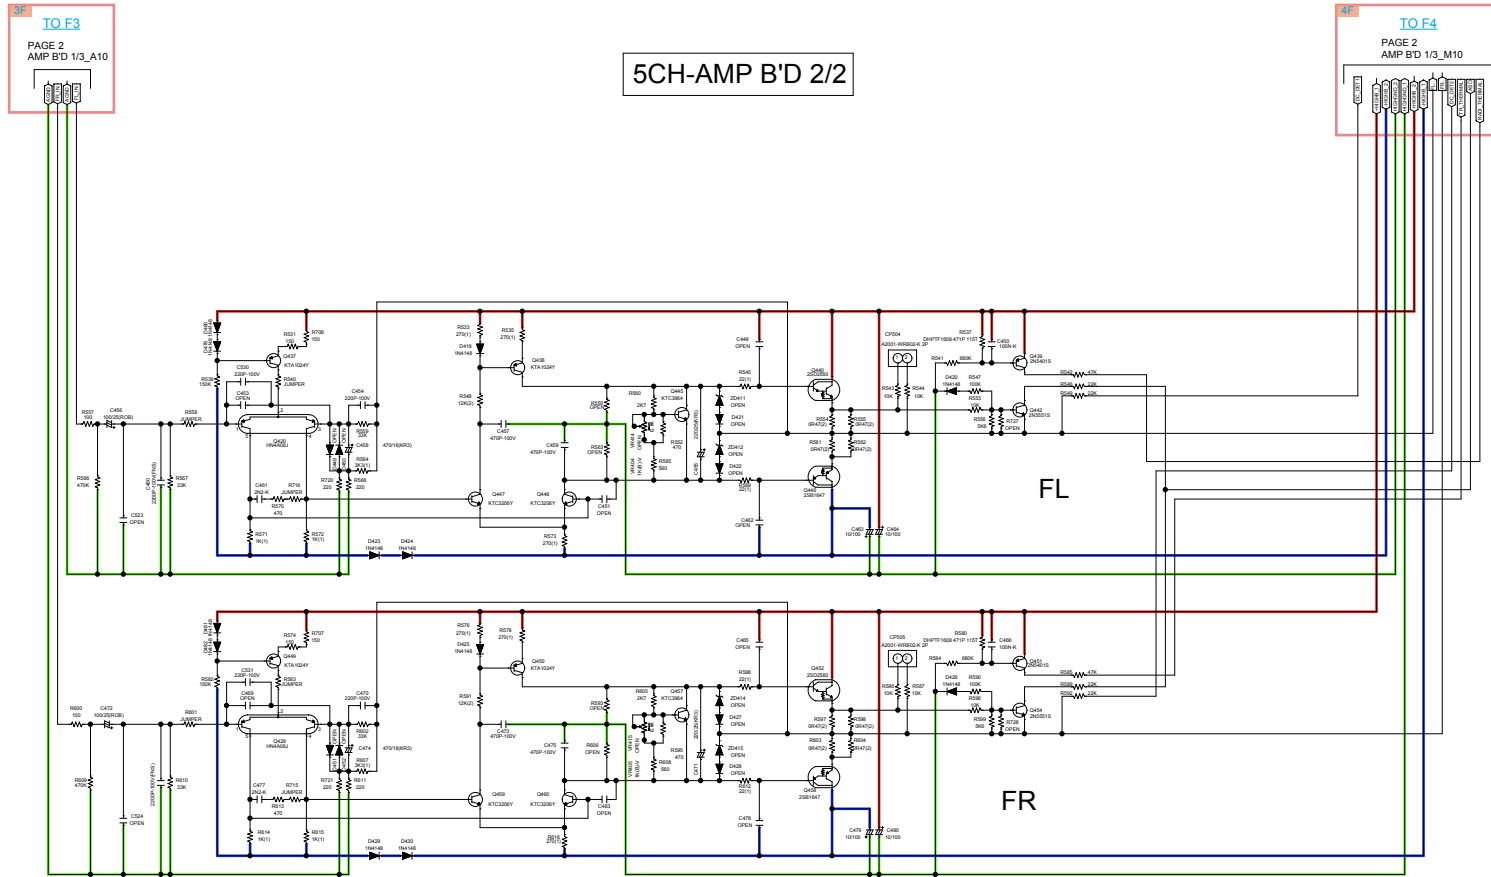

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)

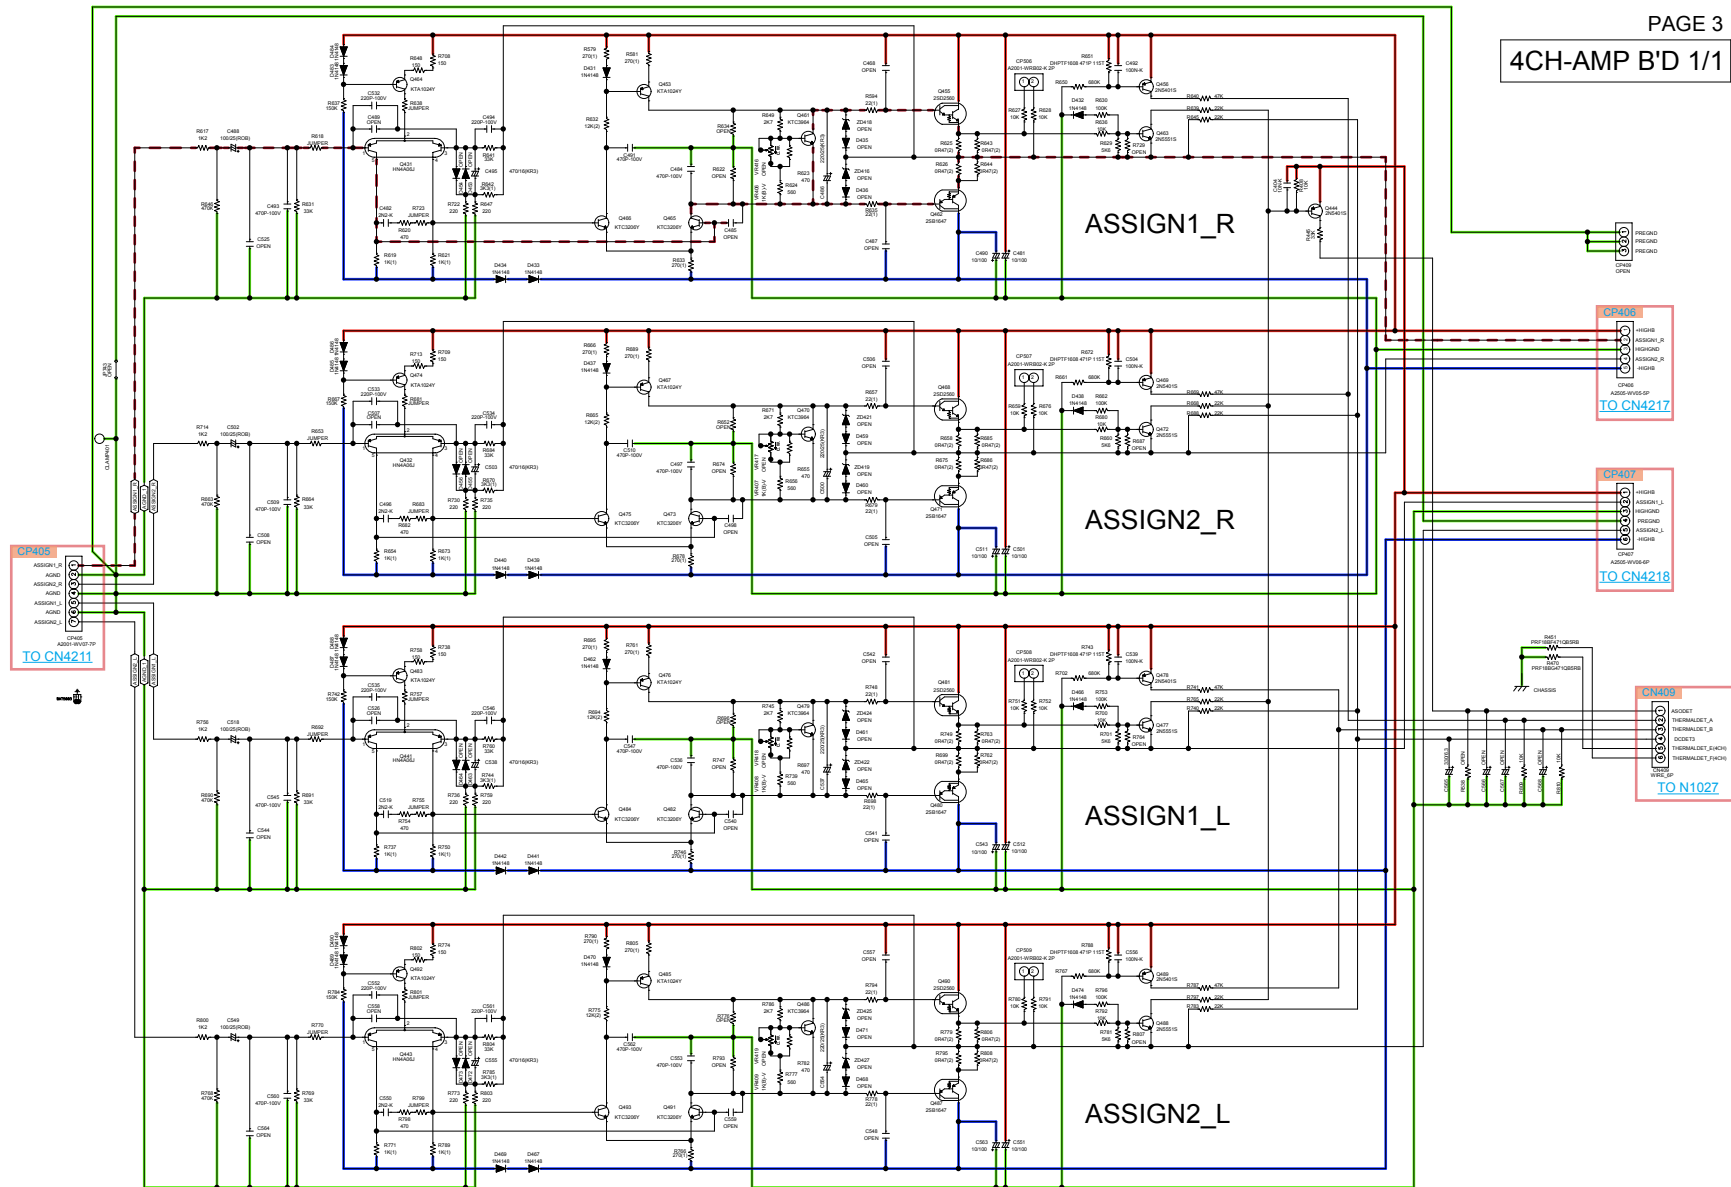


Before Servicing
This Unit

Electrical

Mechanical

Repair Information

Updating

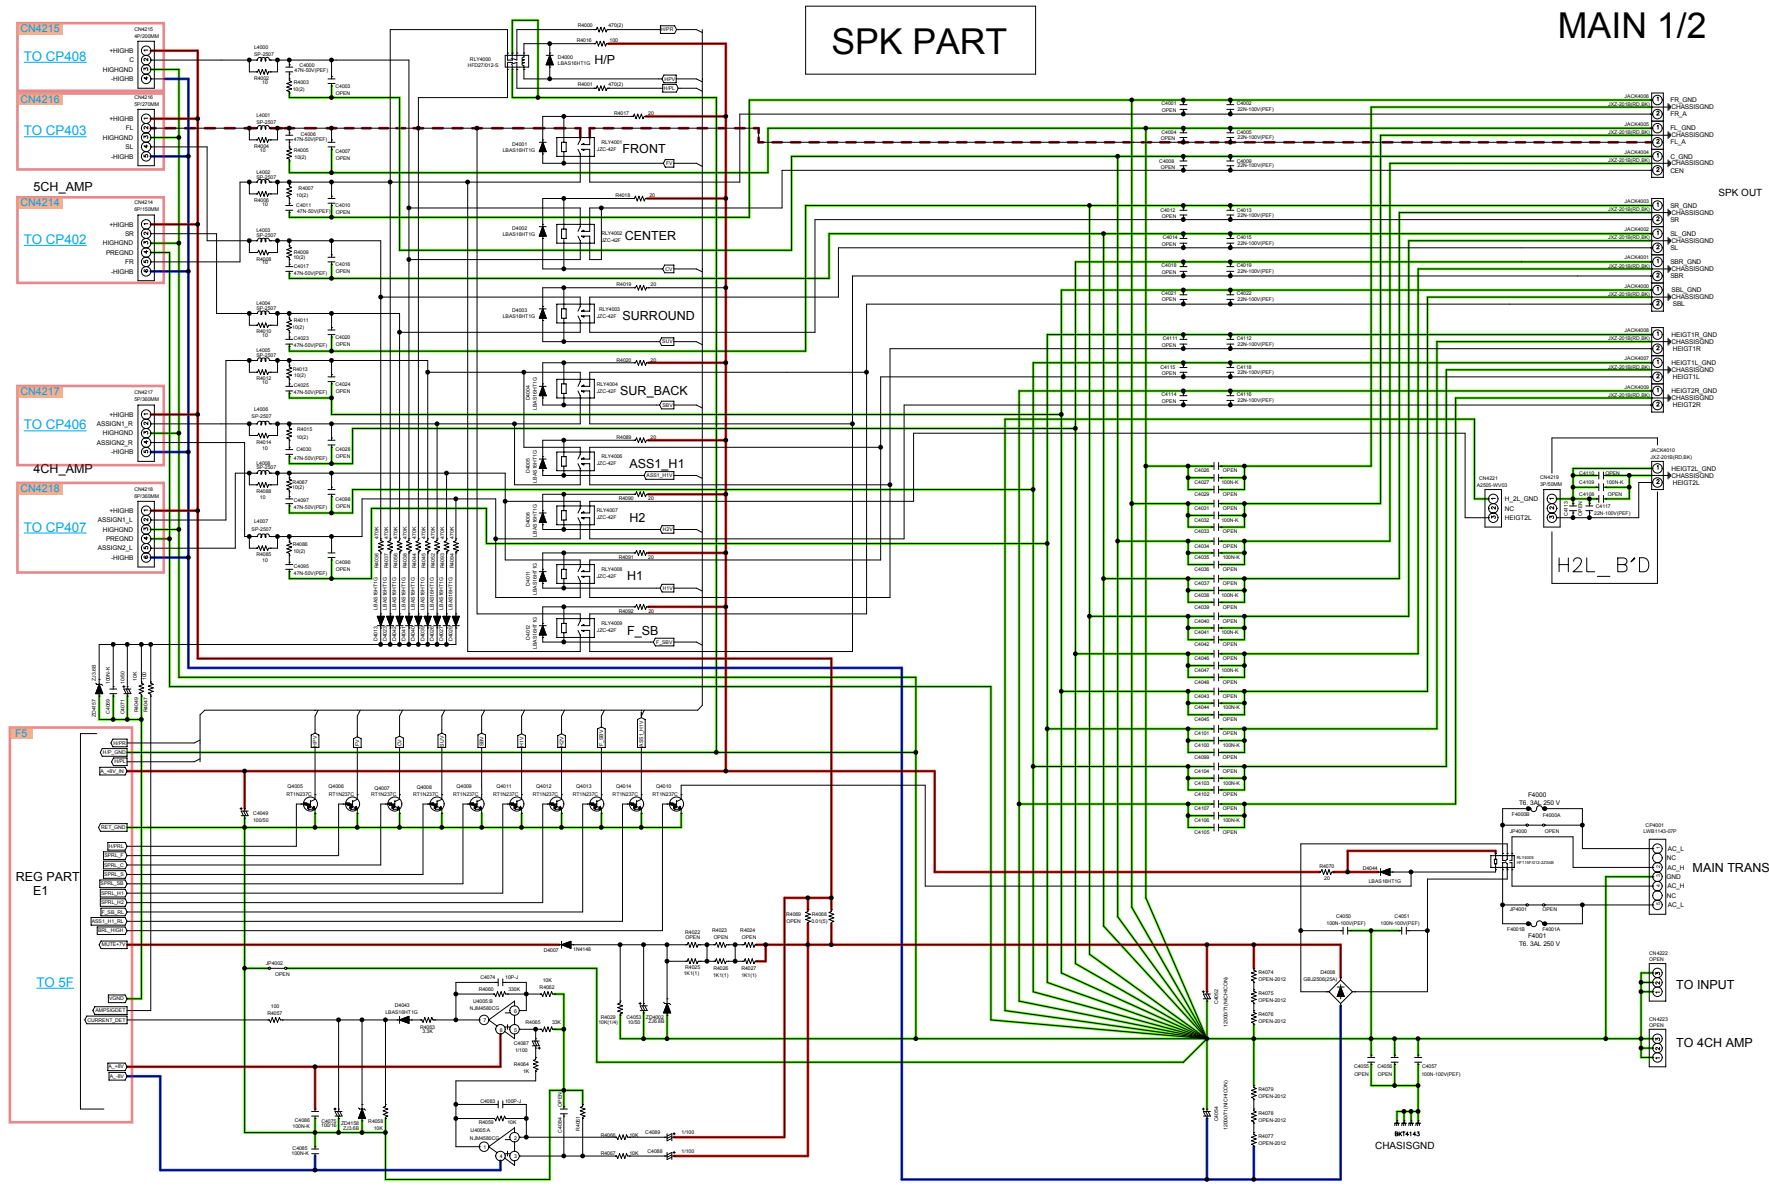

— GND LINE
 — POWER+ LINE
 — POWER- LINE
 — ANALOG AUDIO
 — DIGITAL AUDIO
 — TMDS SIGNAL
 — VIDEO SIGNAL
 — COMPONENT(Y)


Before Servicing This Unit

Electrical

Mechanical

Repair Information

Updating

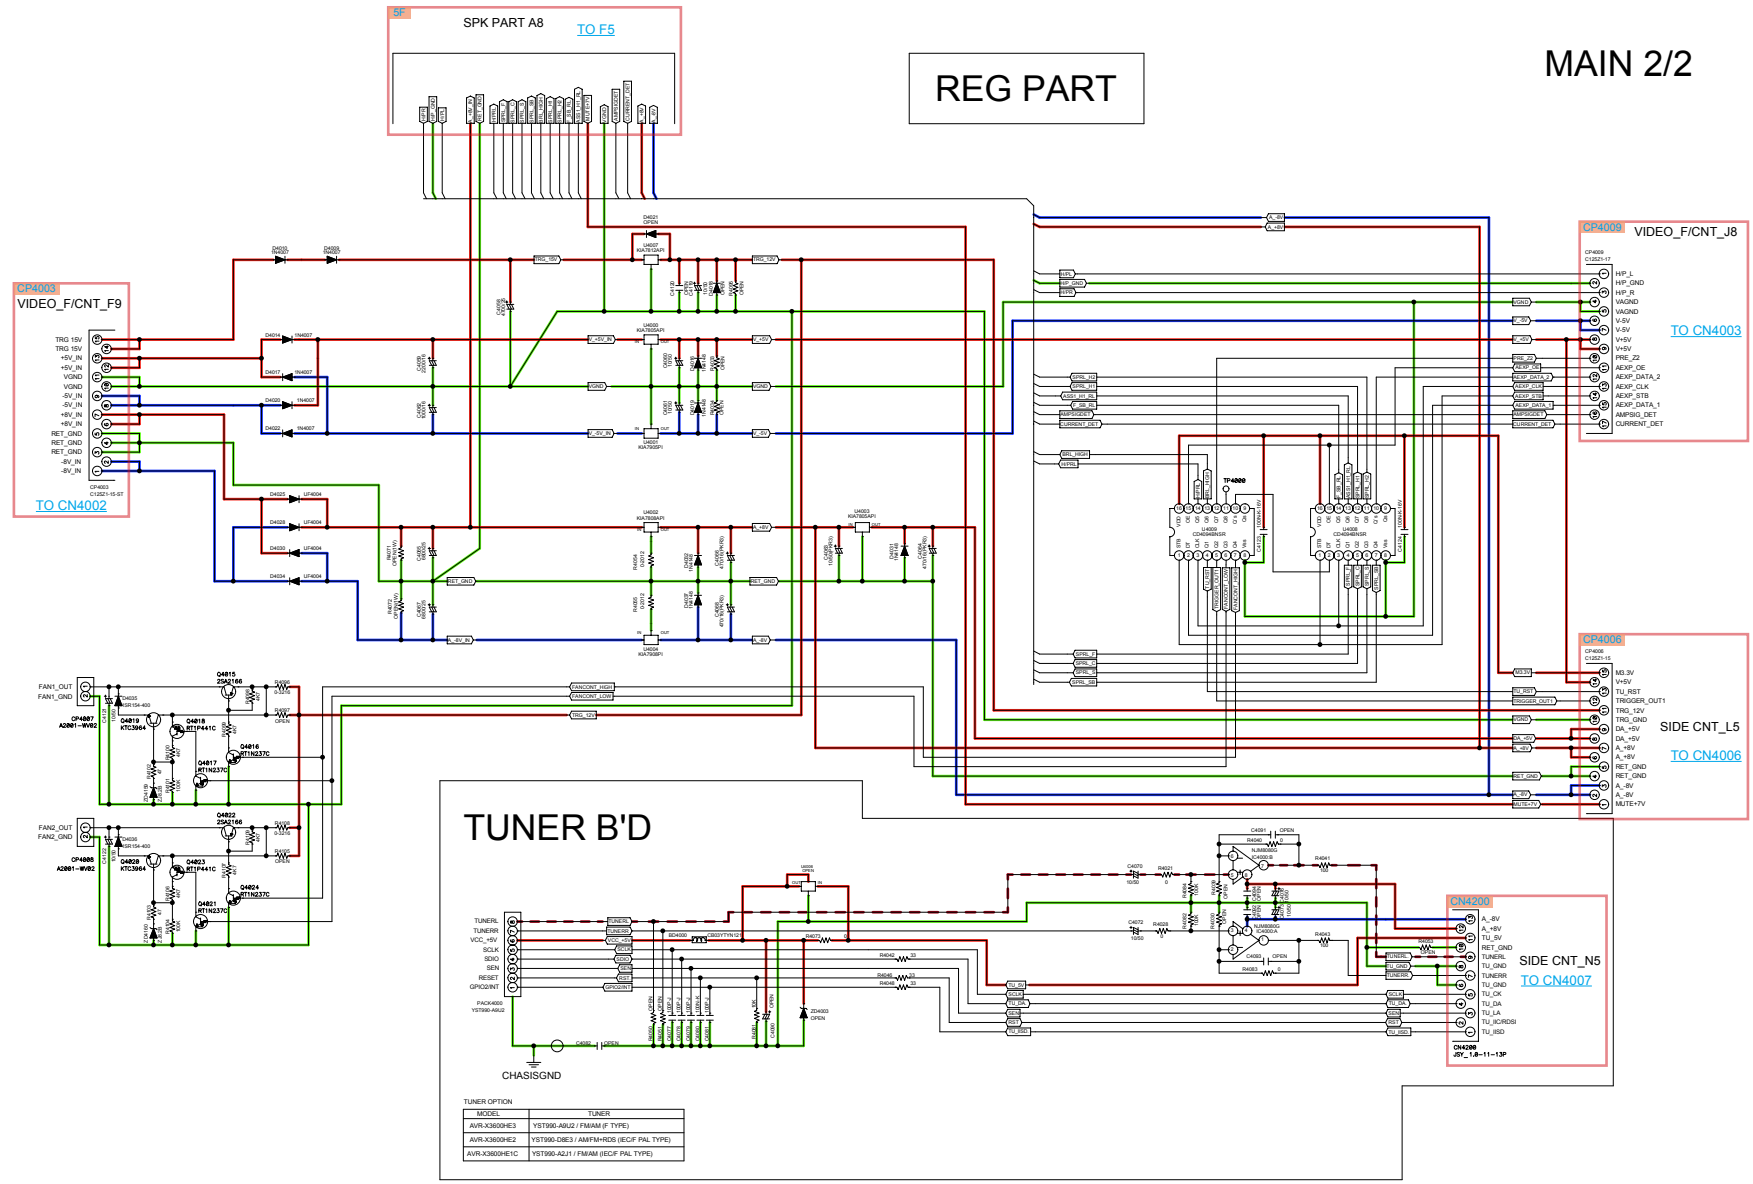


TUNER B'D

TUNER OPTION	TUNER
AVR-X600HE3	YST990-A0L2 / FMAM (F TYPE)
AVR-X600HE2	YST990-0E03 / AMFM-HDS (ECF PAL TYPE)
AVR-X600HEC	YST990-A211 / FMAM (ECF PAL TYPE)

AVR_S950_X2600_X3600 FRONT


FRONT 1/2

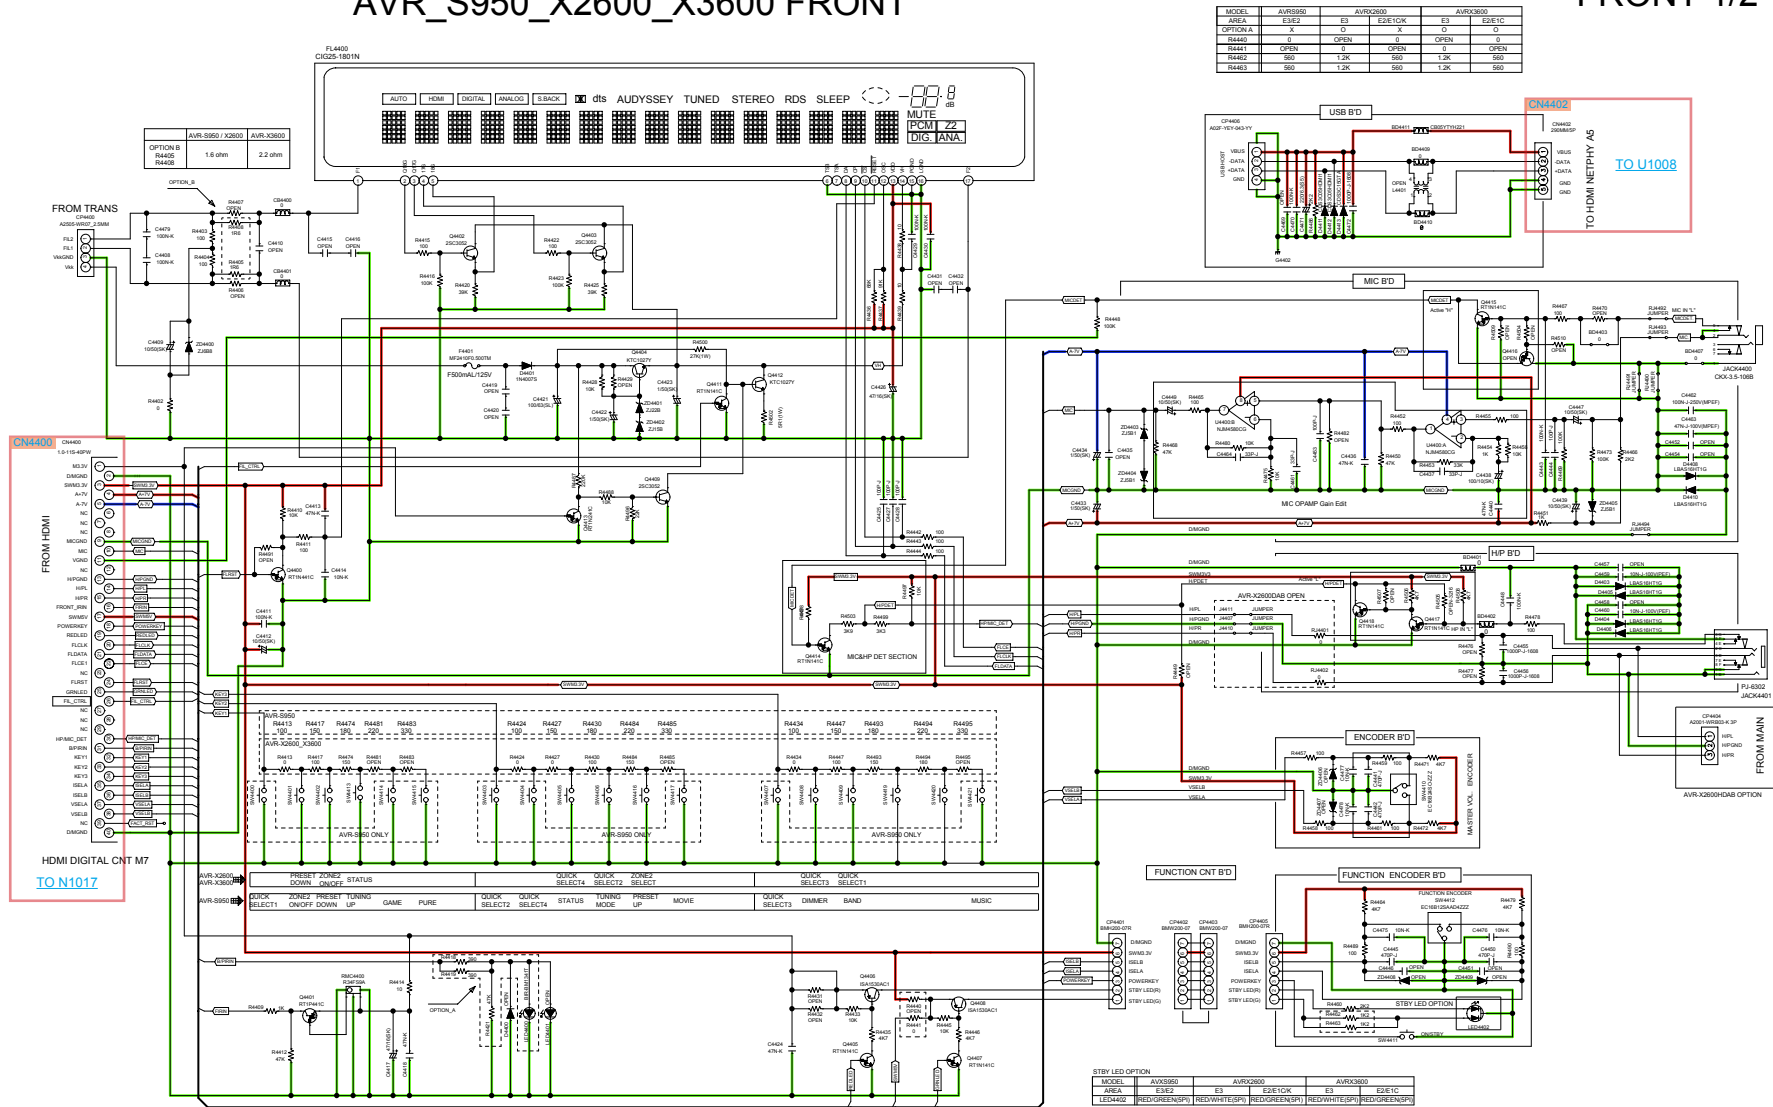

MODEL	AVR950	AVR2600	AVR3600
AREA	E3E2	E3	E3E1C
OPTICAL	X	Q	Q
R4440	0	OPEN	OPEN
R4441	OPEN	0	OPEN
R4442	500	1.2K	500
R4443	500	1.2K	500

MODEL	AVR950	AVR2600	AVR3600
AREA	E3E2	E3	E3E1C
LED4402	RED/GREEN/SP	RED/WHITE/GP	RED/WHITE/GP
LED4403	RED/GREEN/SP	RED/WHITE/GP	RED/WHITE/GP

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL VIDEO SIGNAL COMPONENT(Y)

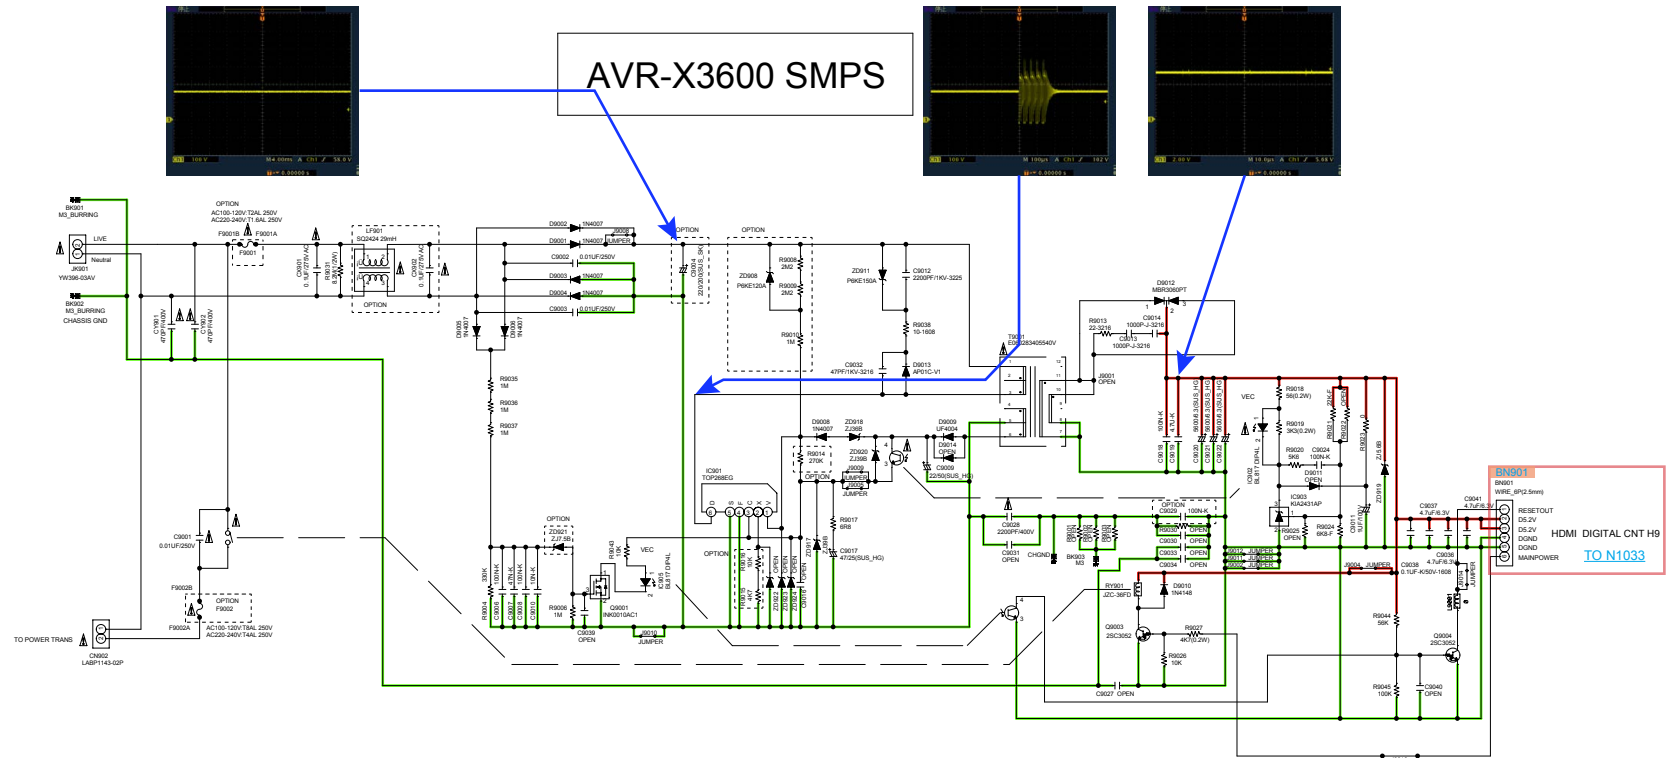

AVR-X3600 SMPS

(A) OPTION TABLE

ZD001	ZD008	R9008	R9009	R9010	R9014	R9015	R9016	C9008	C9009	LF901	F9001	F9002	C9002	C9004	C9009	
E3	Z17.5K	PK6E100A	2M2	2M2	1M	270K	4.7K	10K	100N	100N	25WH	T2AL	T8AL	CT7144Y19V103M25V6u6	220NF/200V	100N
E2	E1C	Z17.5B	OPEN	OPEN	OPEN	58K	6.8K	10K	100N	100N	65WH	T1.8AL	T4AL	OPEN	100NF/400V	1U

(B) PCB OPTION

E2	CHANGCHUN_CCP-340X(BT), CT1.600
----	---------------------------------

(C) FUSE OPTION




E3	F9001	F9002
E2	T2AL/250V	T8AL/250V
E2	T1.8AL/250V	T4AL/250V

⚠ INDICATES SAFETY CRITICAL COMPONENTS. TO REDUCE THE RISK OF ELECTRIC SHOCK, LEAKAGE CURRENT OR RESISTANCE MEASUREMENTS SHALL BE CARRIED OUT (EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT) BEFORE THE APPLIANCE RETURNED TO THE CUSTOMER.

PRINTED CIRCUIT BOARDS

DIGITAL, F HDMI

Lead-free Solder
When soldering, use the Lead-free Solder (Sn-Ag-Cu).

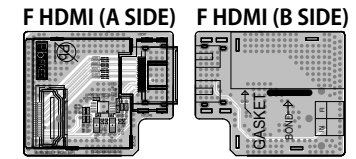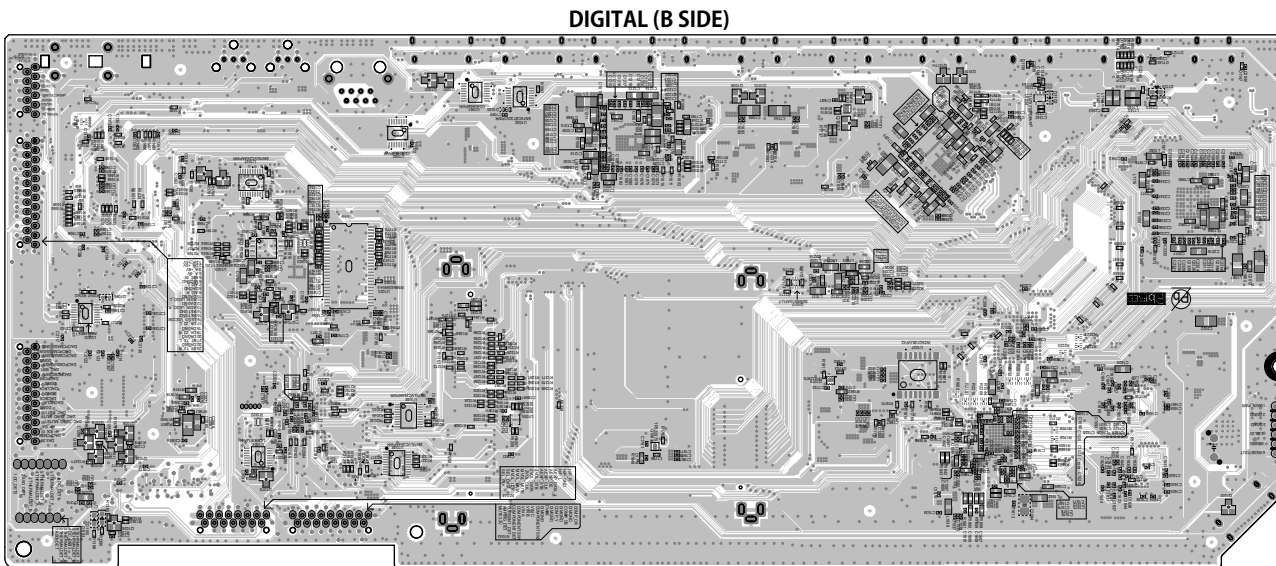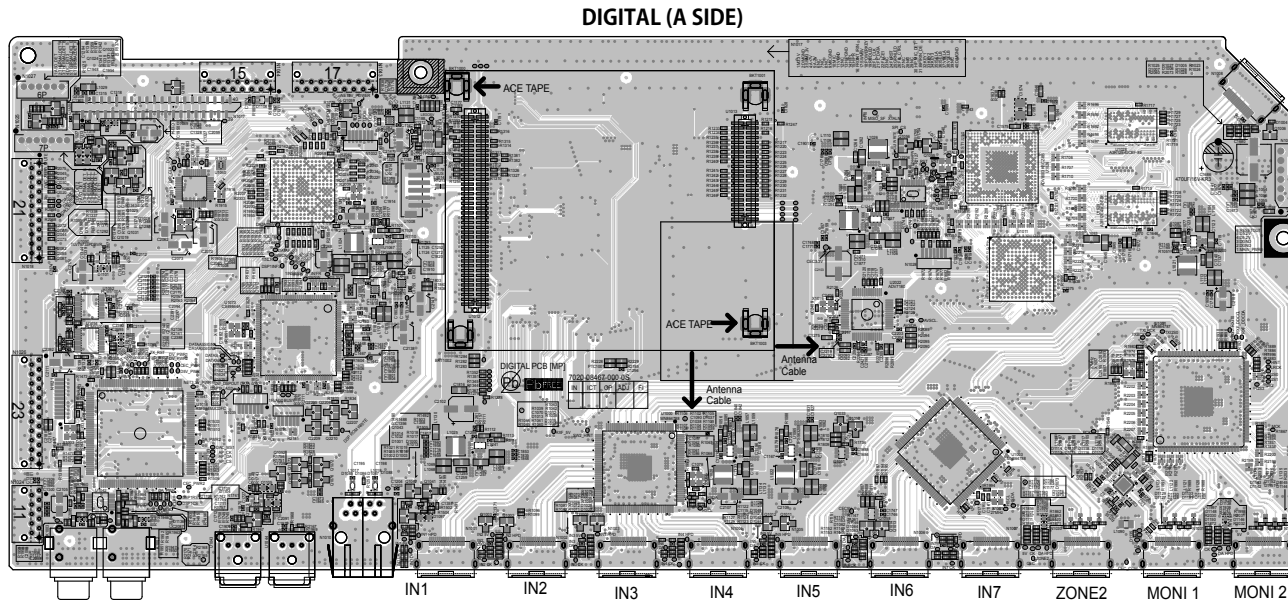

Before Servicing
This Unit



Electrical

Mechanical

Repair Information

Updating

INPUT, FRONT CNT

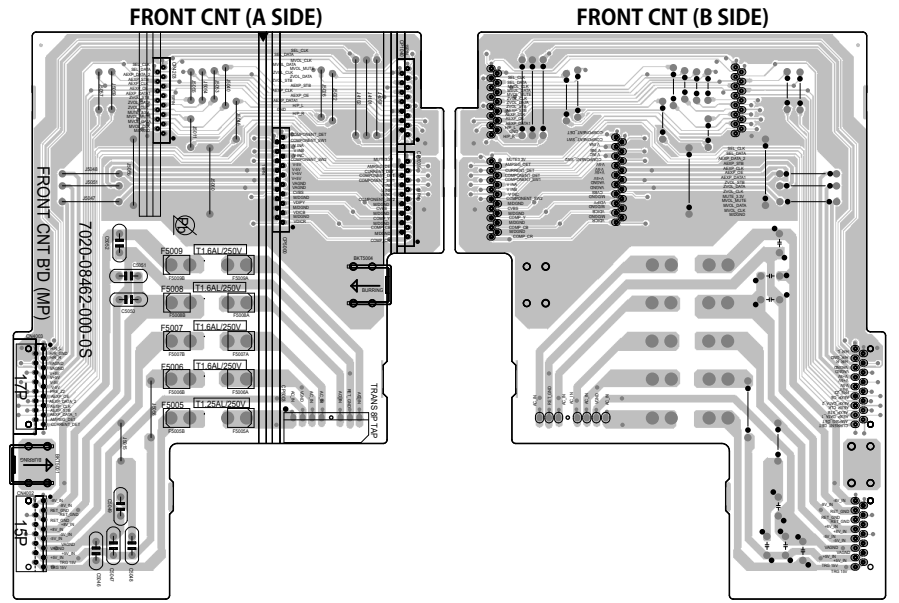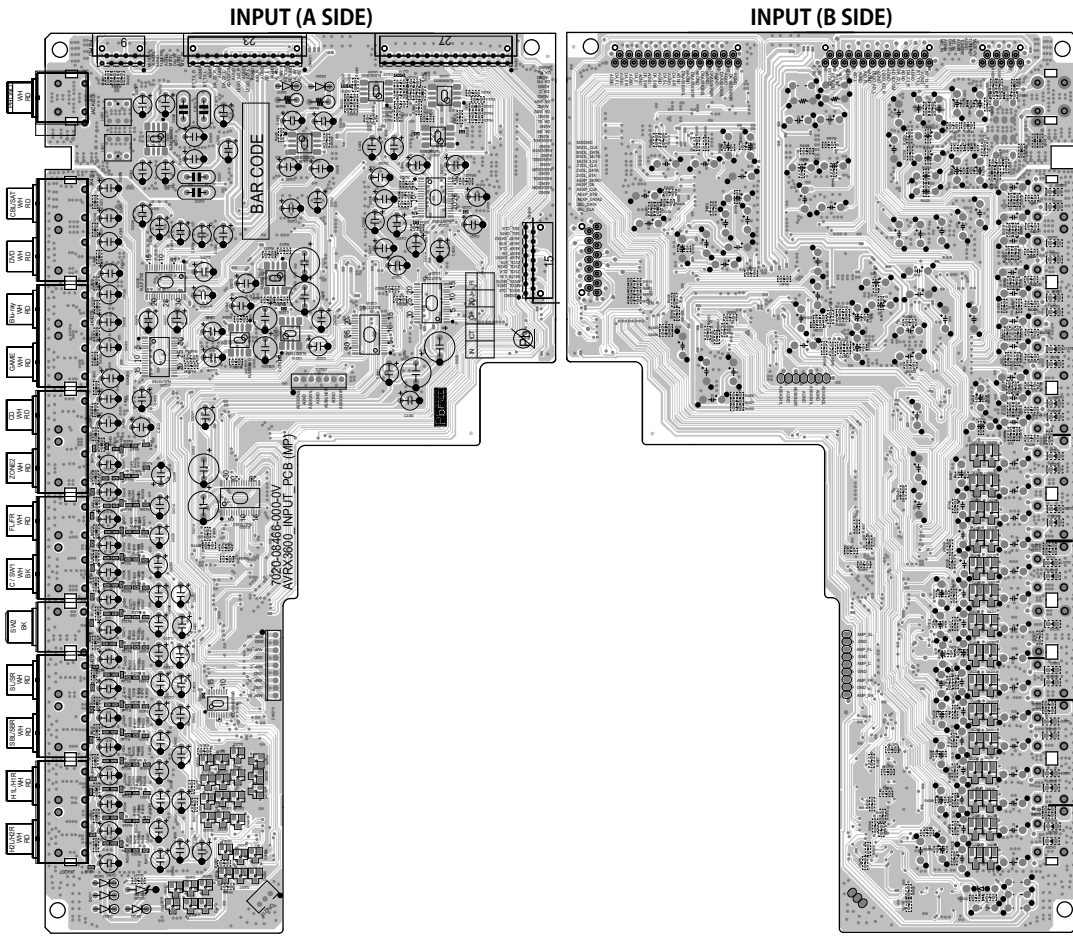





Before Servicing
This Unit







Electrical

Mechanical

Repair Information

Updating

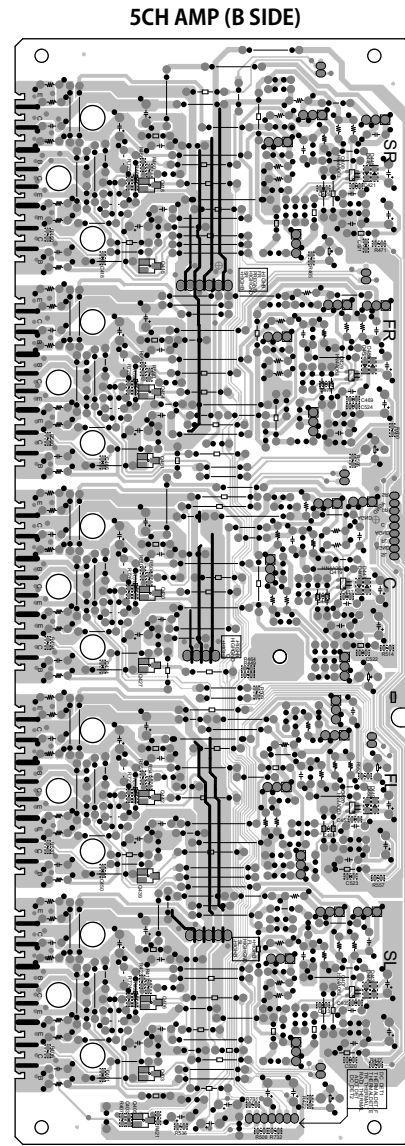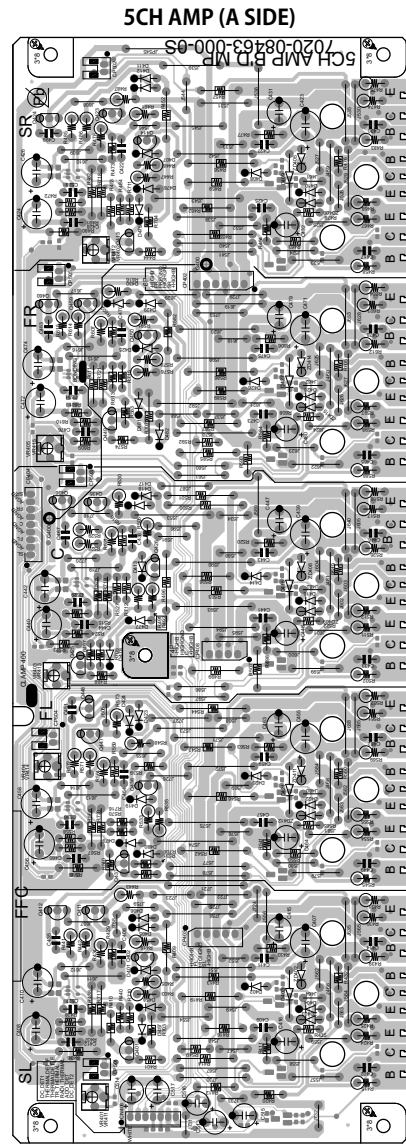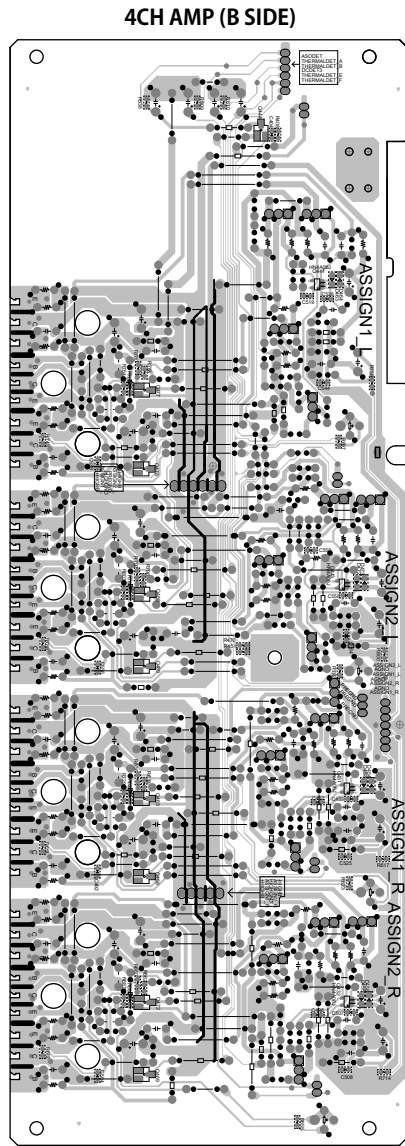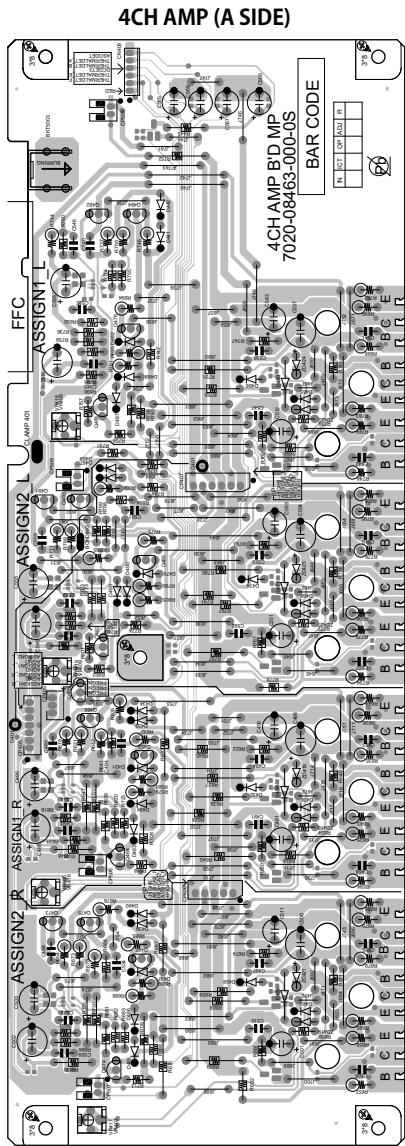

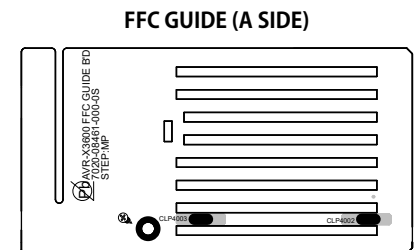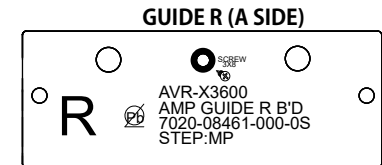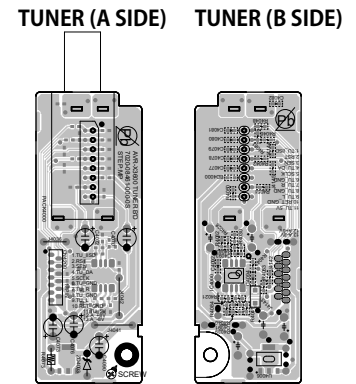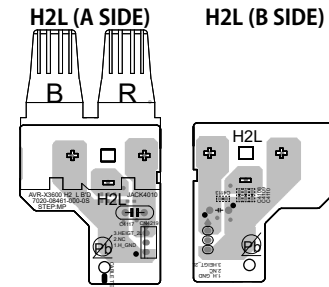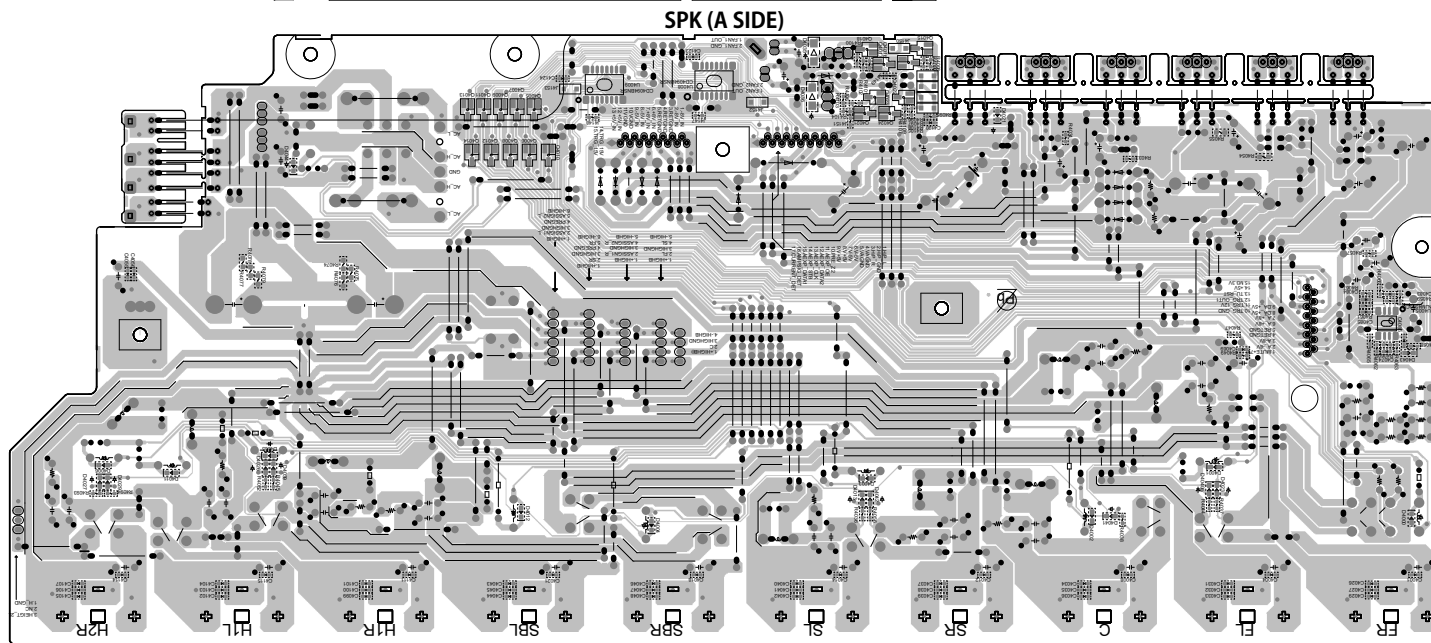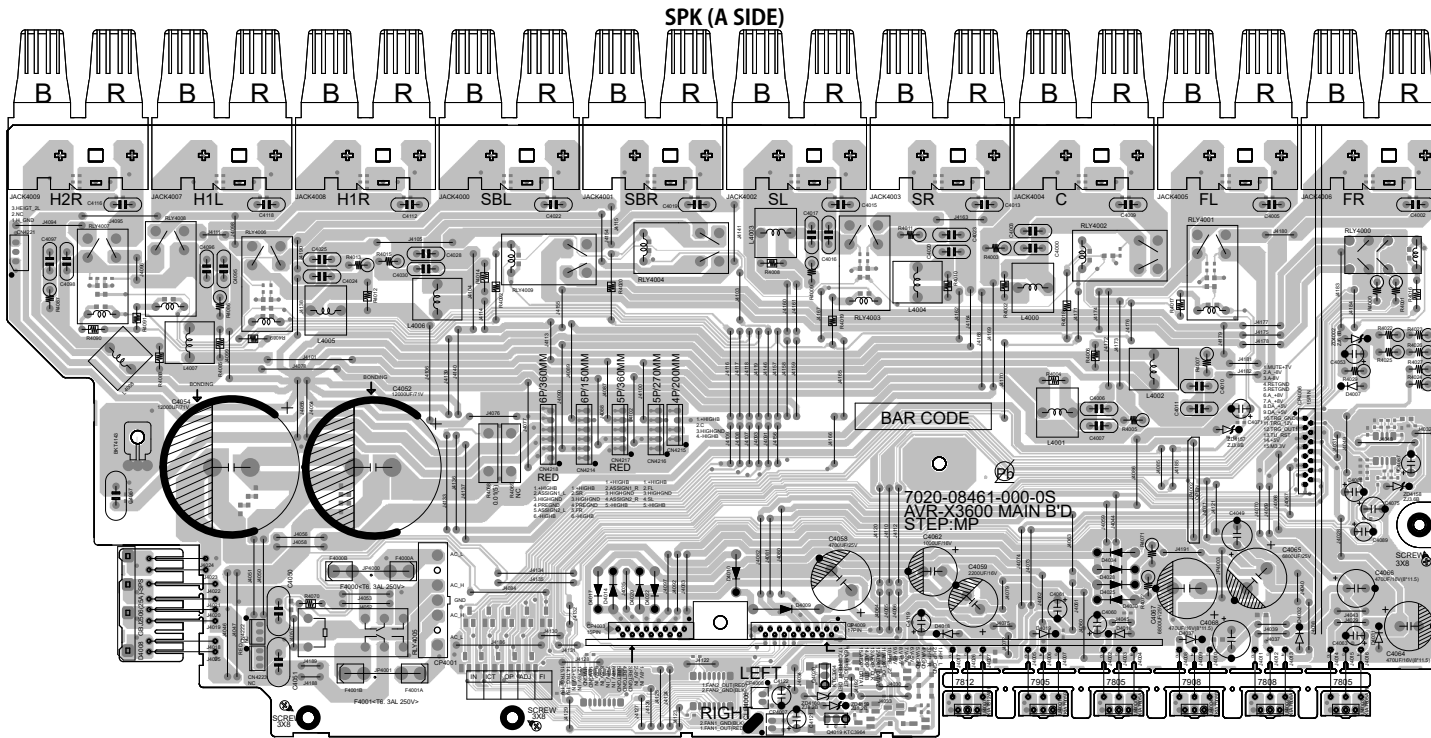








Before Servicing
This Unit

Electrical

Mechanical


Repair Information

Updating

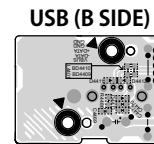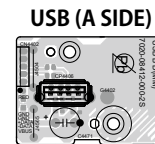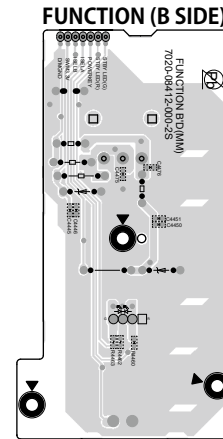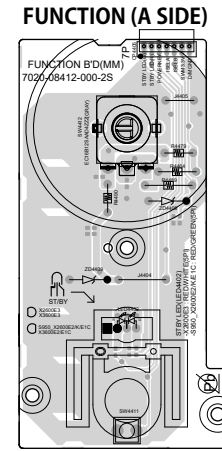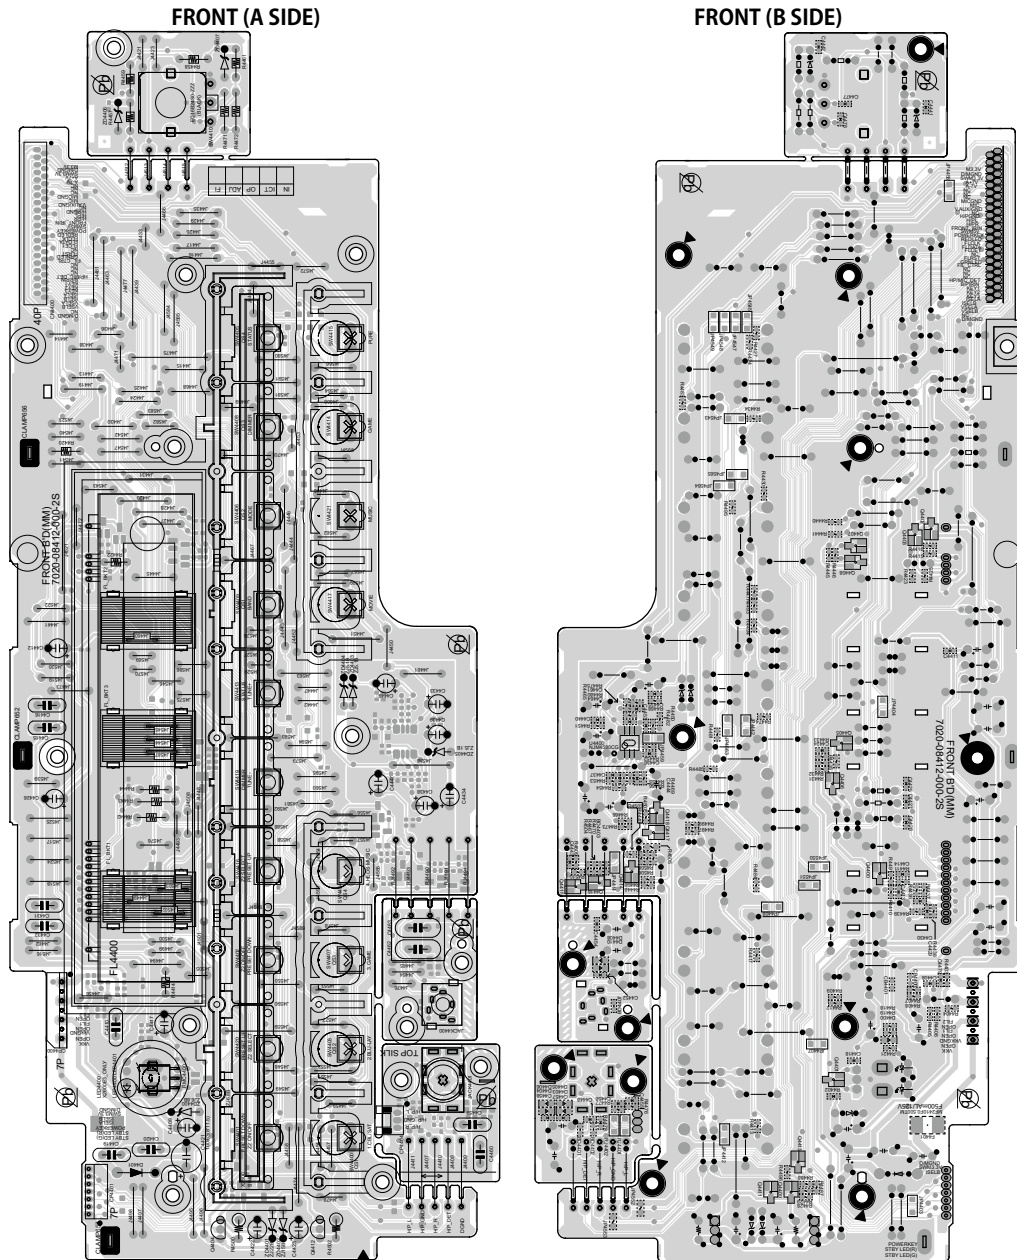


VIDEO (A SIDE)

VIDEO (B SIDE)

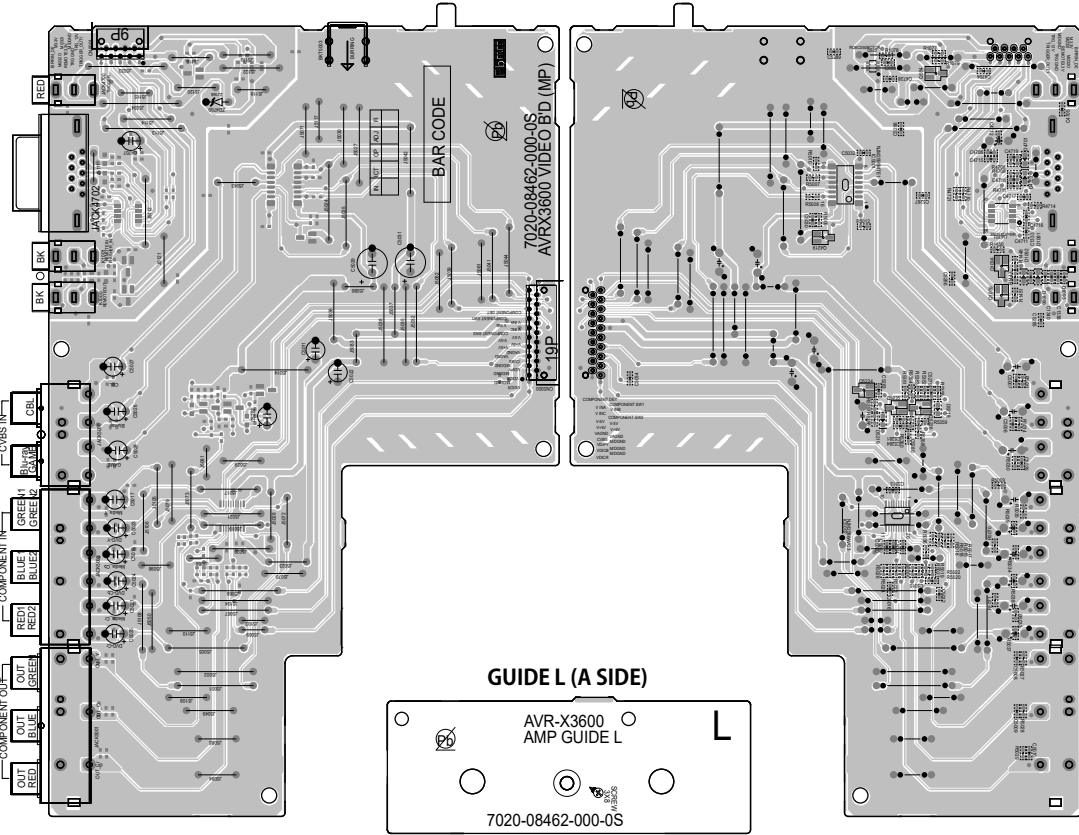


SMPS (A SIDE)

SMPS (B SIDE)

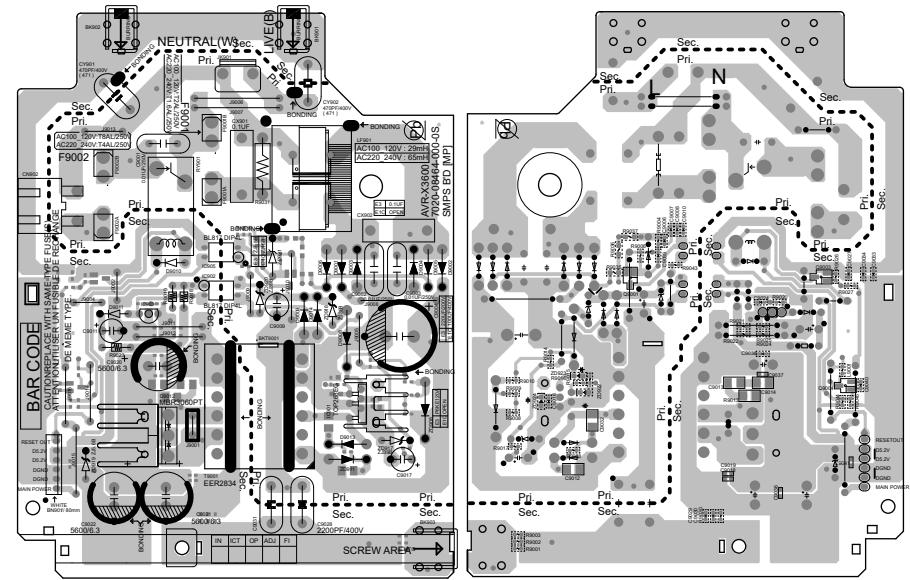

SIDE CNT (A SIDE)



SIDE CNT (B SIDE)

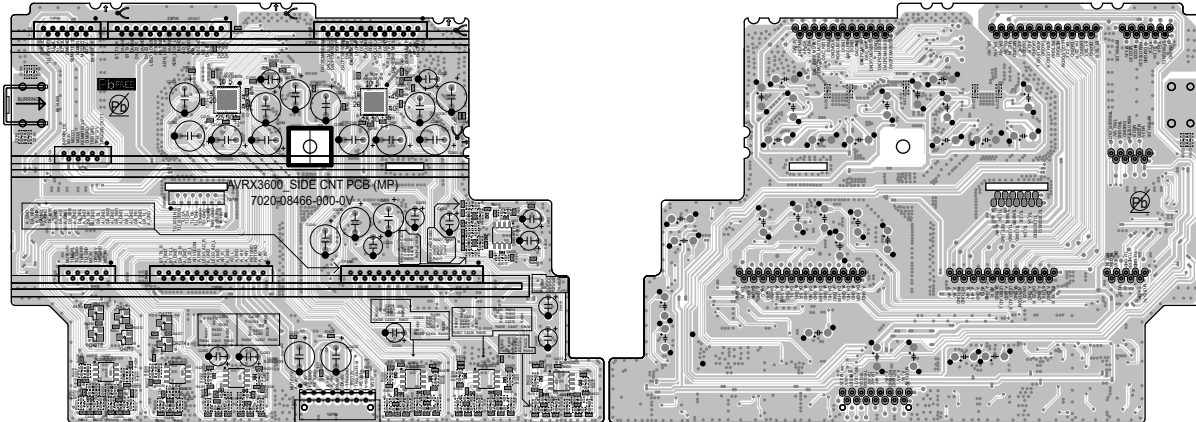



LEVEL DIAGRAM

FRONT ch



AVR-X3600H LEVEL DIAGRAM FRONT ch

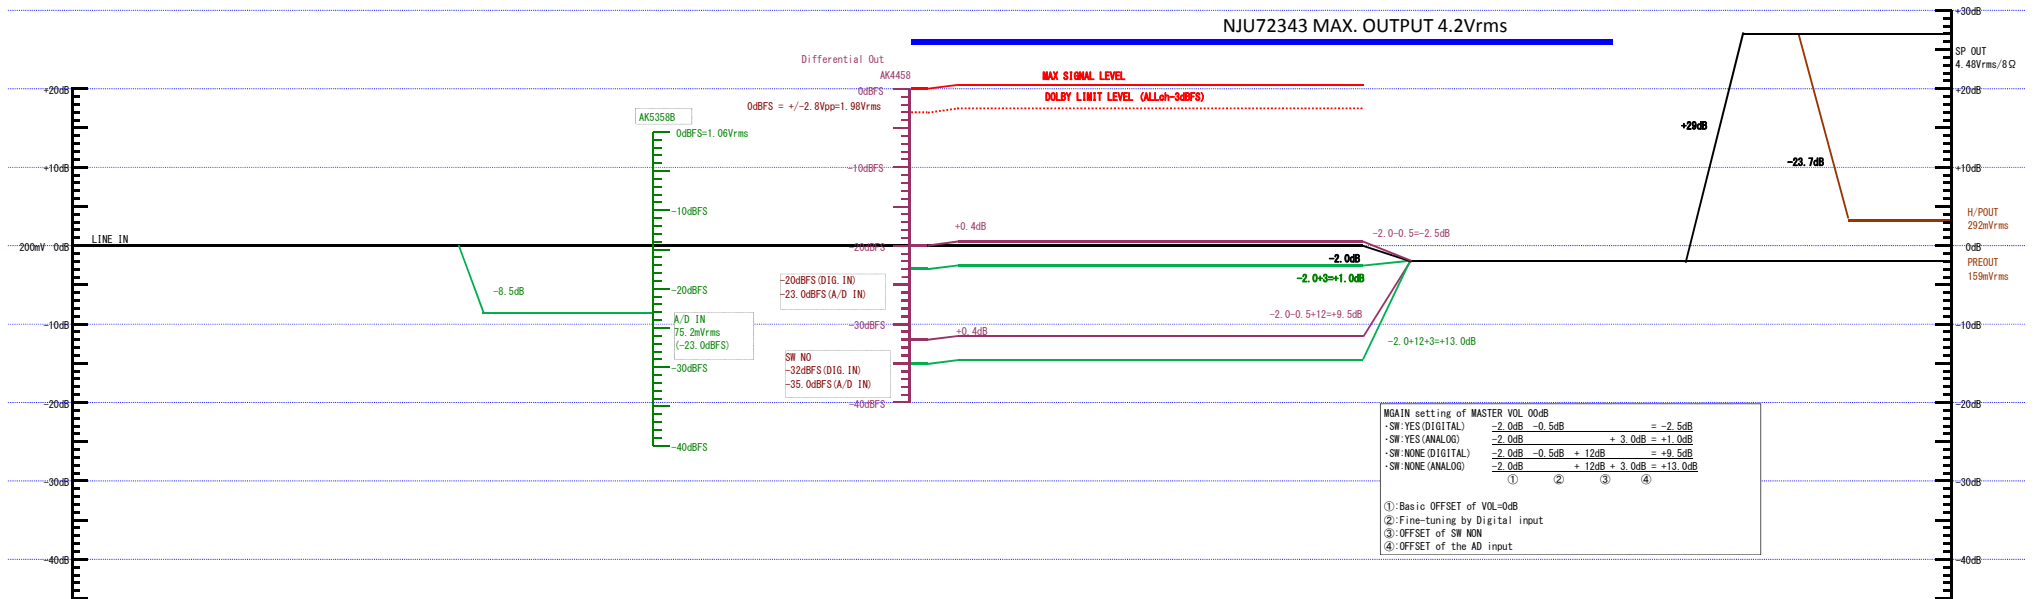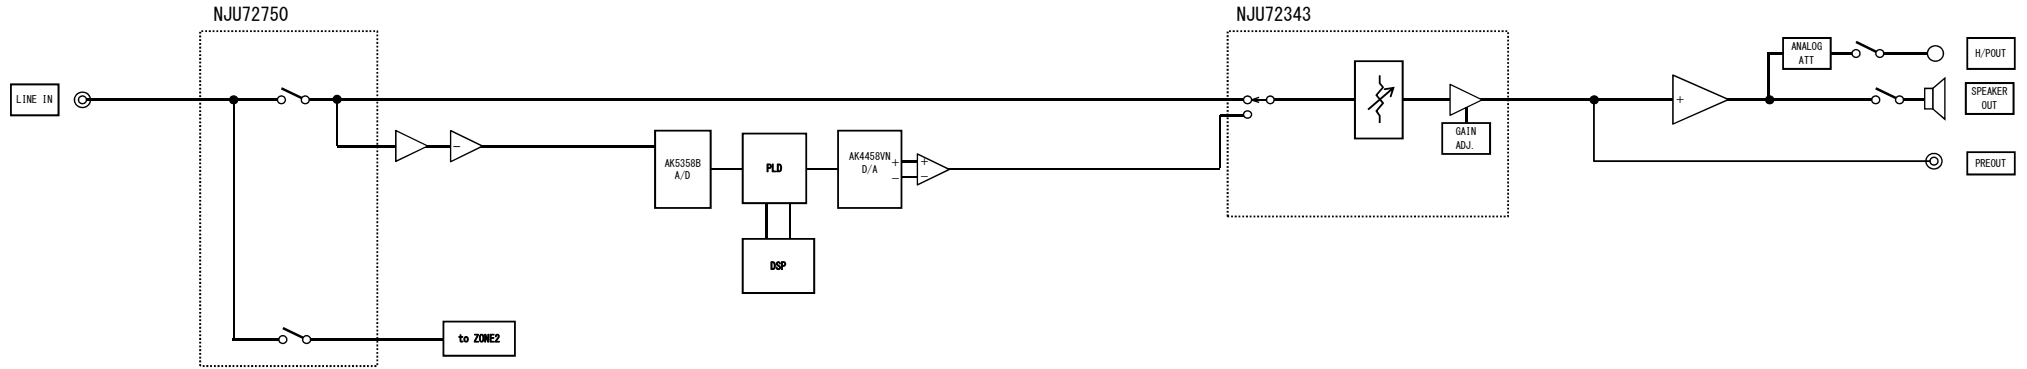



AVR-X3600H
LEVEL DIAGRAM
CENTER ch
SURROUND ch

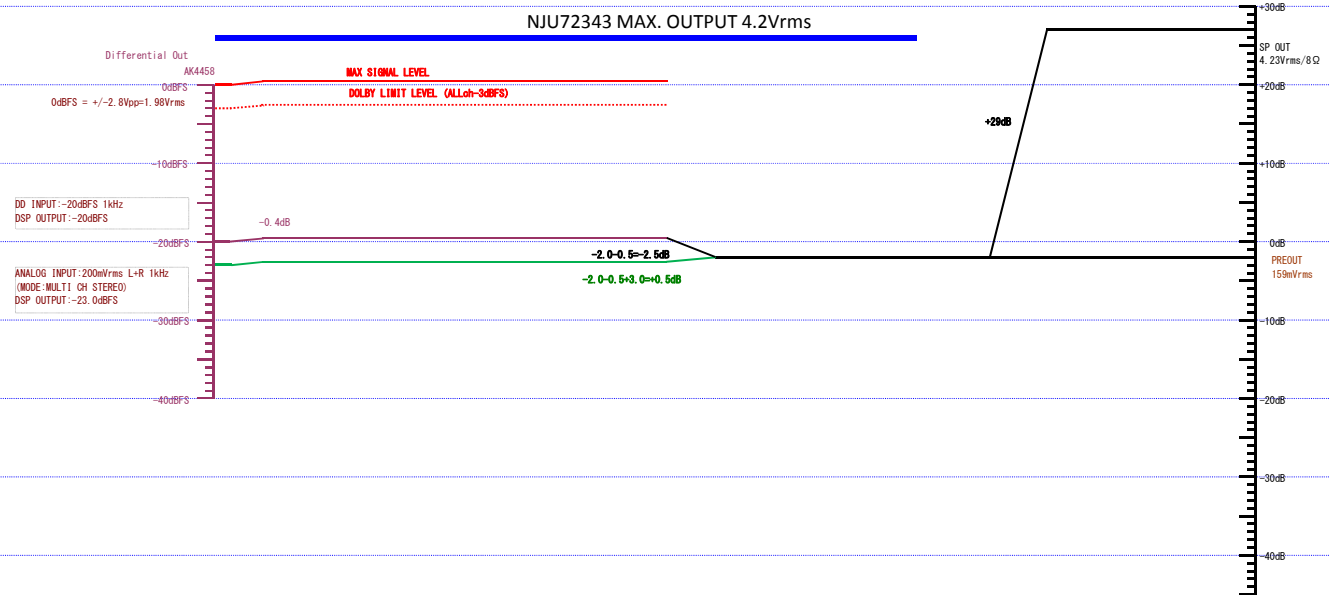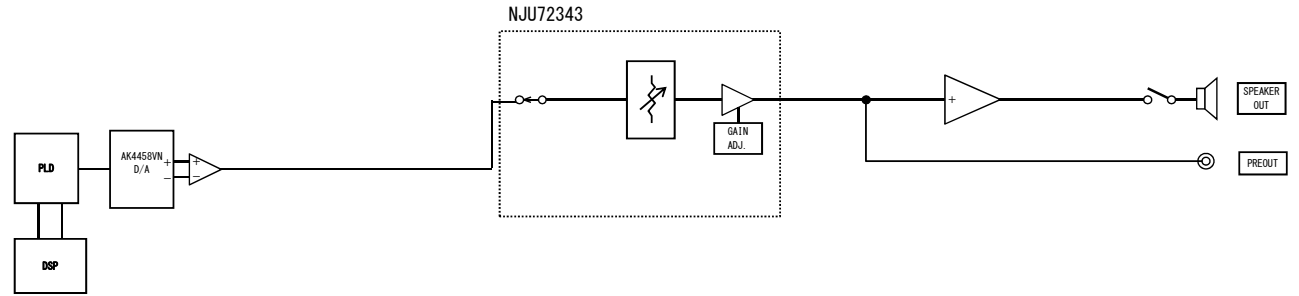



**AVR-X3600H
LEVEL DIAGRAM
SUBWOOFER ch**

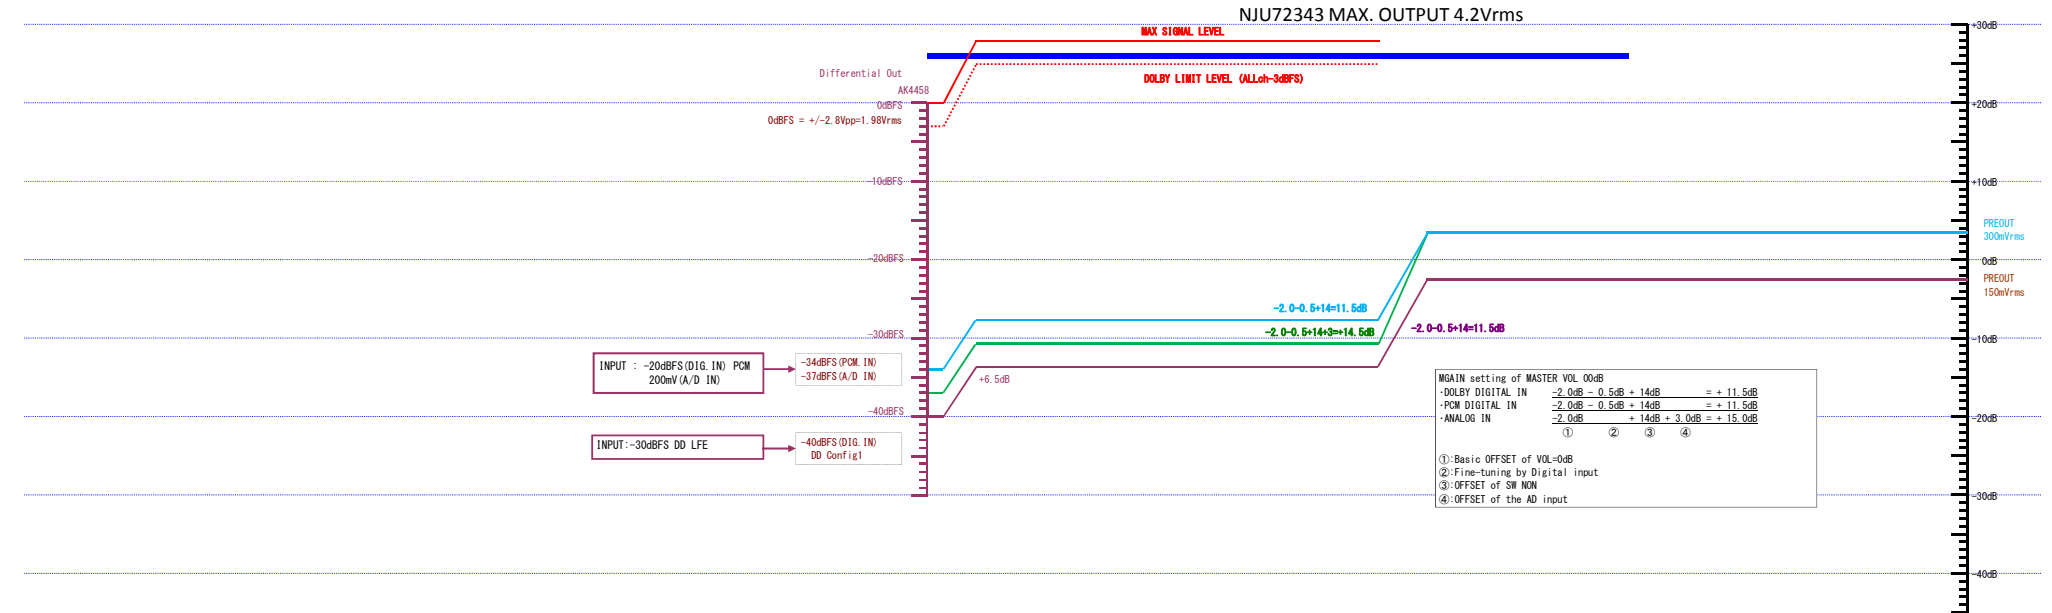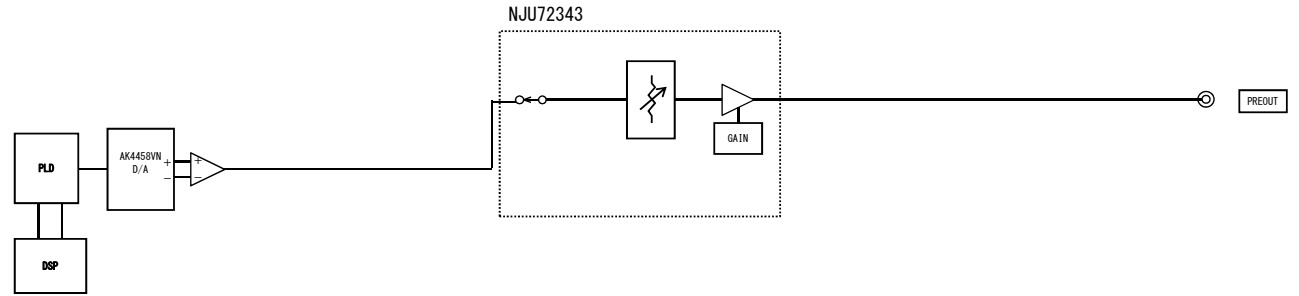



**AVR-X3600H
LEVEL DIAGRAM**
ASSIGN1/2 (SURROUND BACK/HEIGHT1/HEIGHT2) ch

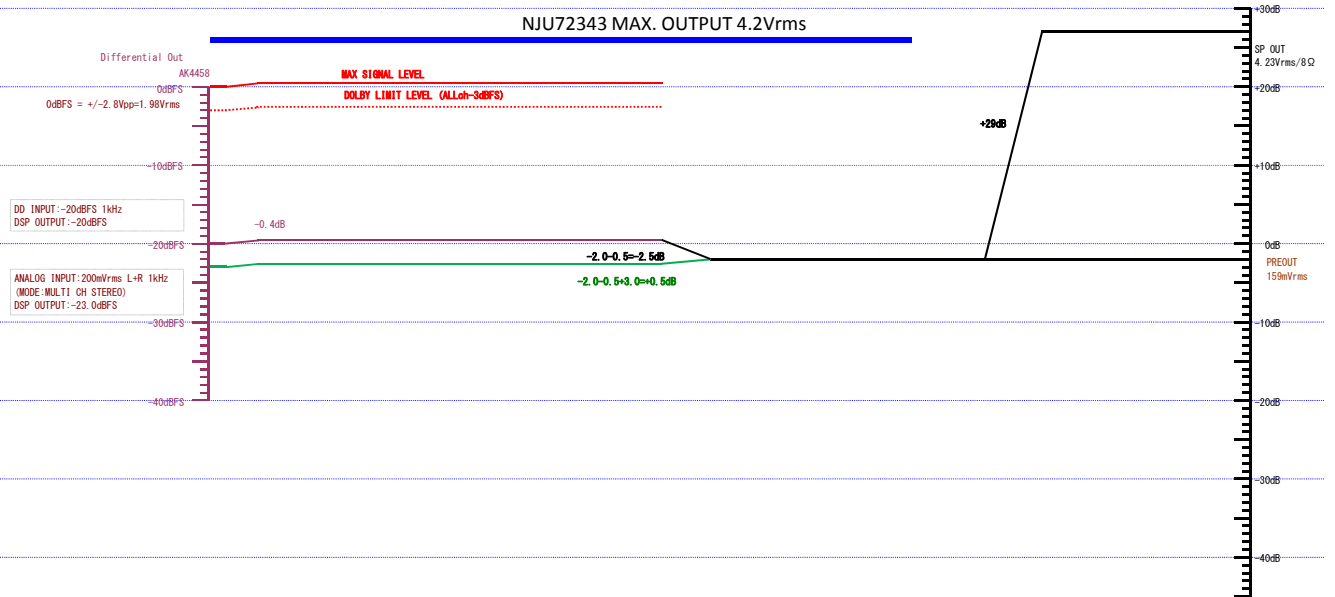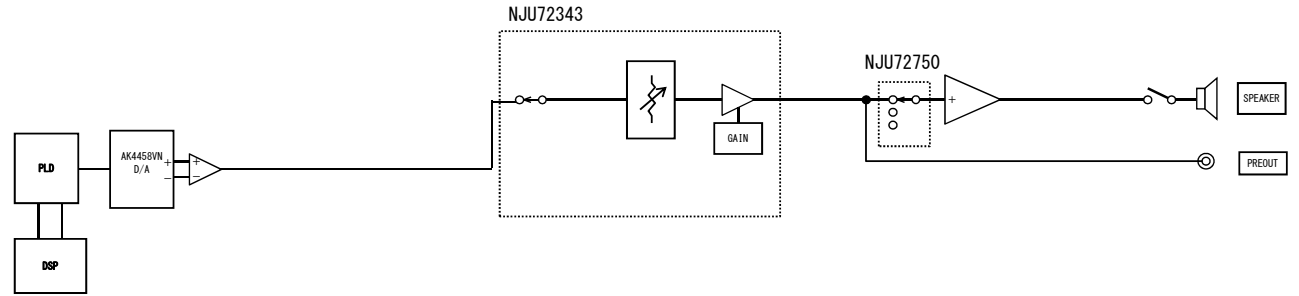


**AVR-X3600H
LEVEL DIAGRAM
Distribution
ZONE2(w/ Source)**

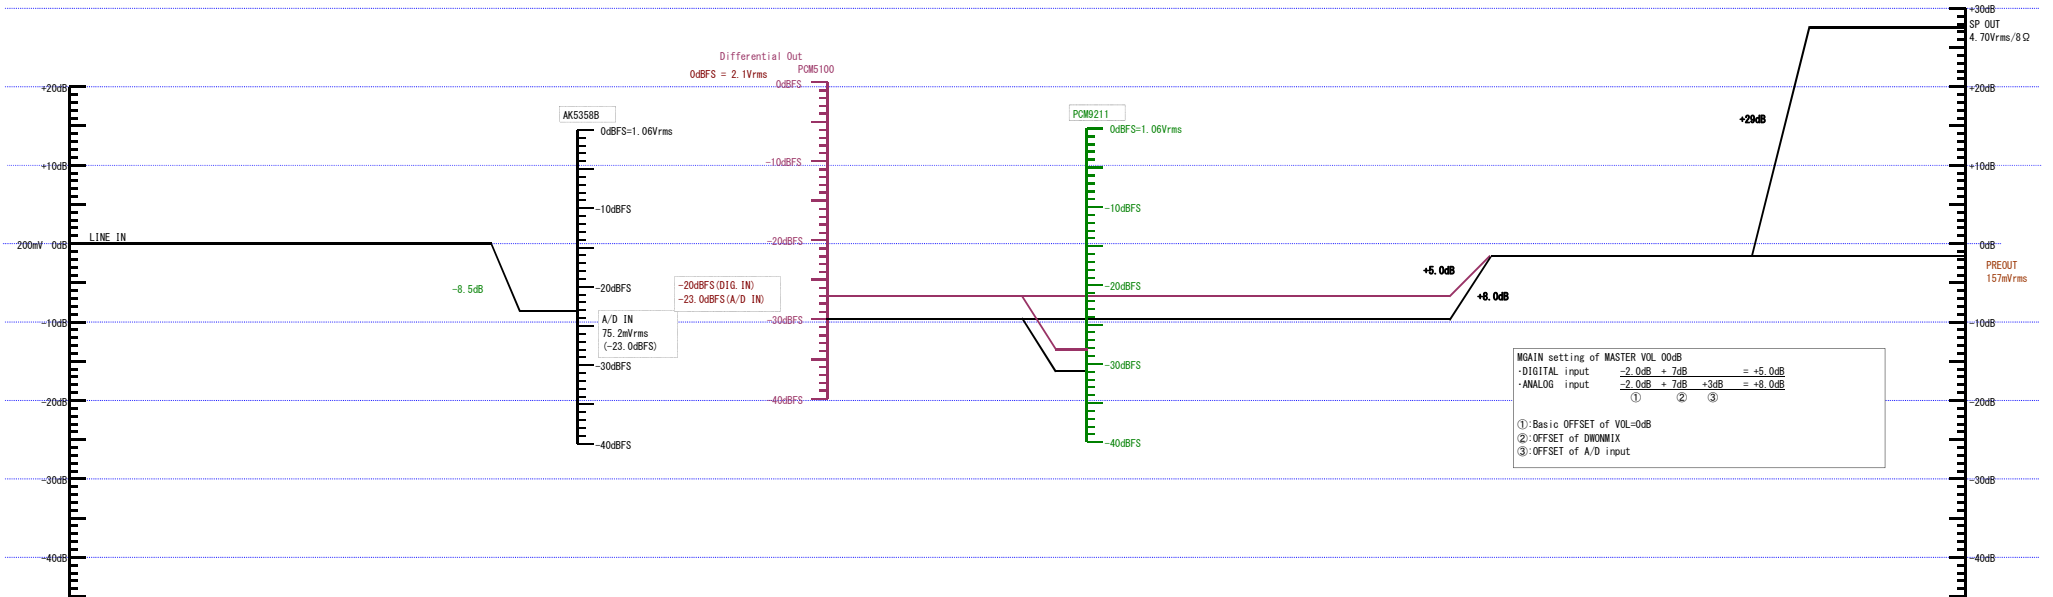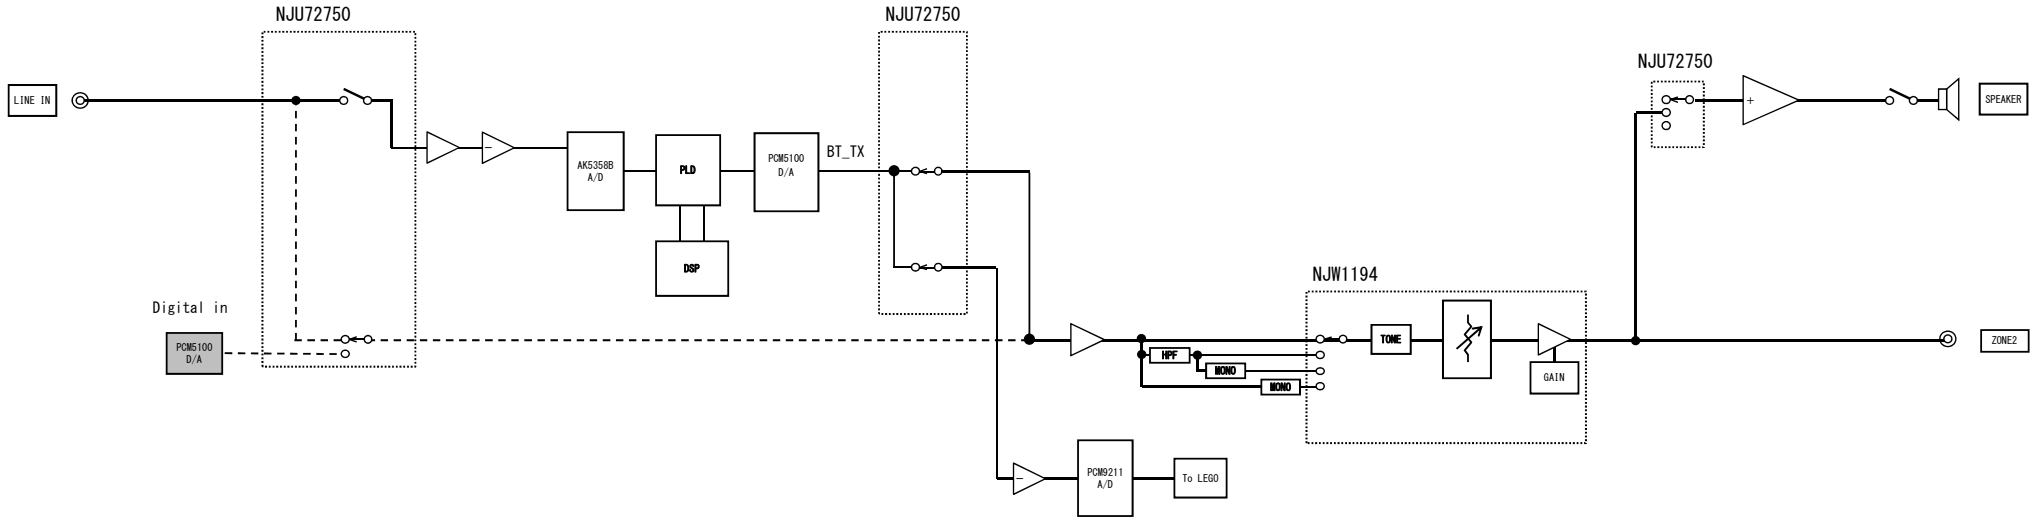


**AVR-X3600H
LEVEL DIAGRAM
Distribution
ZONE2(w/o Source)**

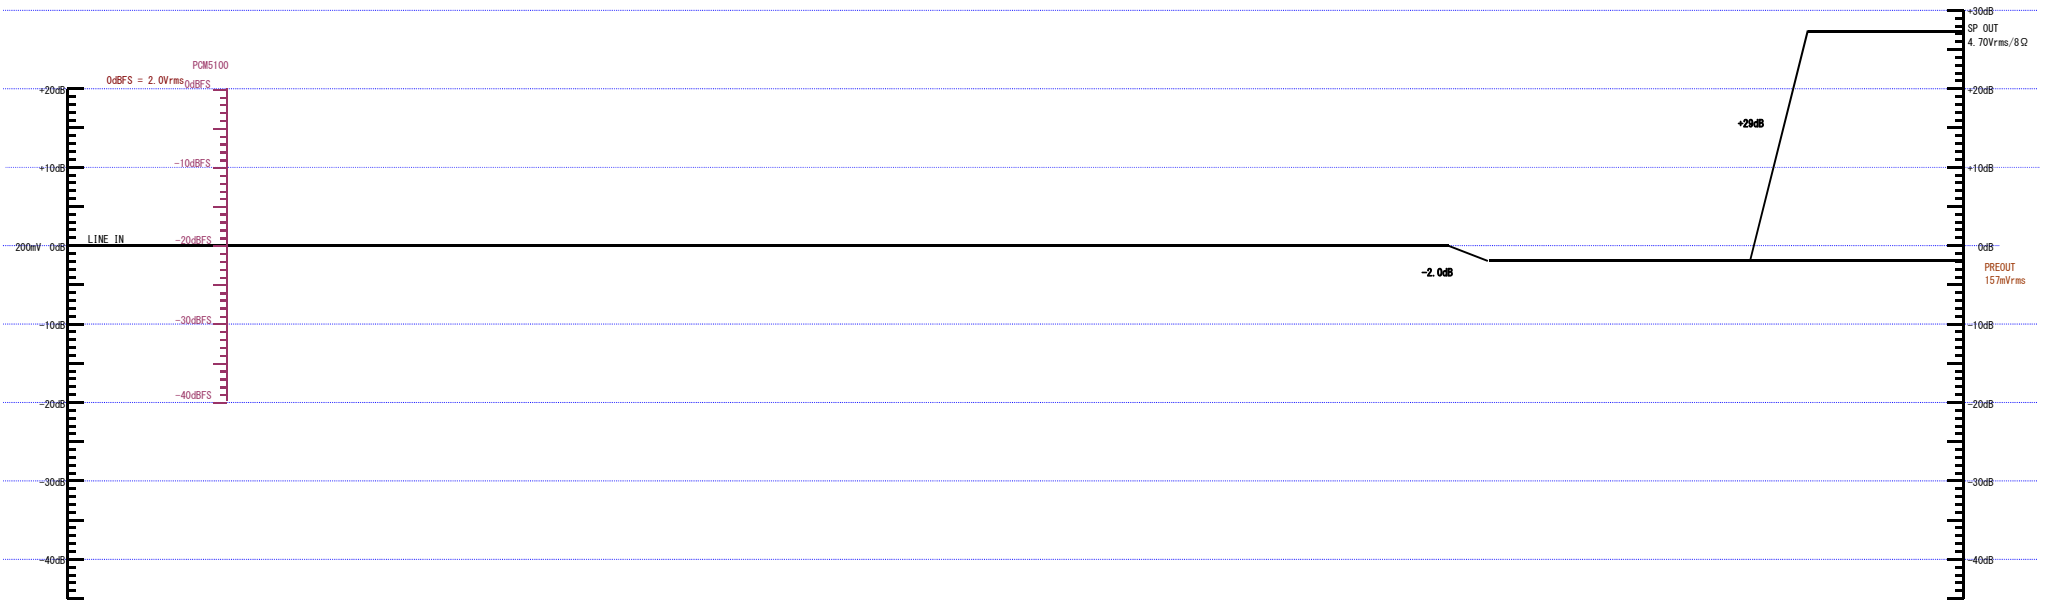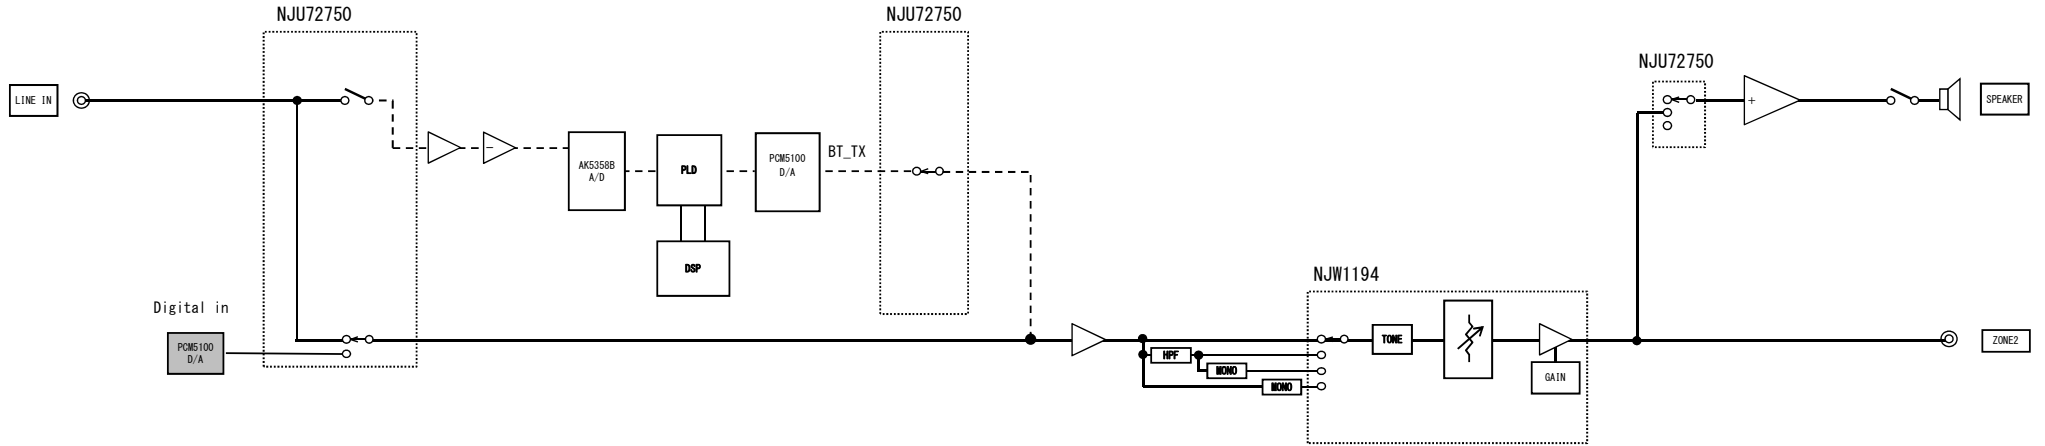


AVR_X360 ANALOG AUDIO DIAGRAM

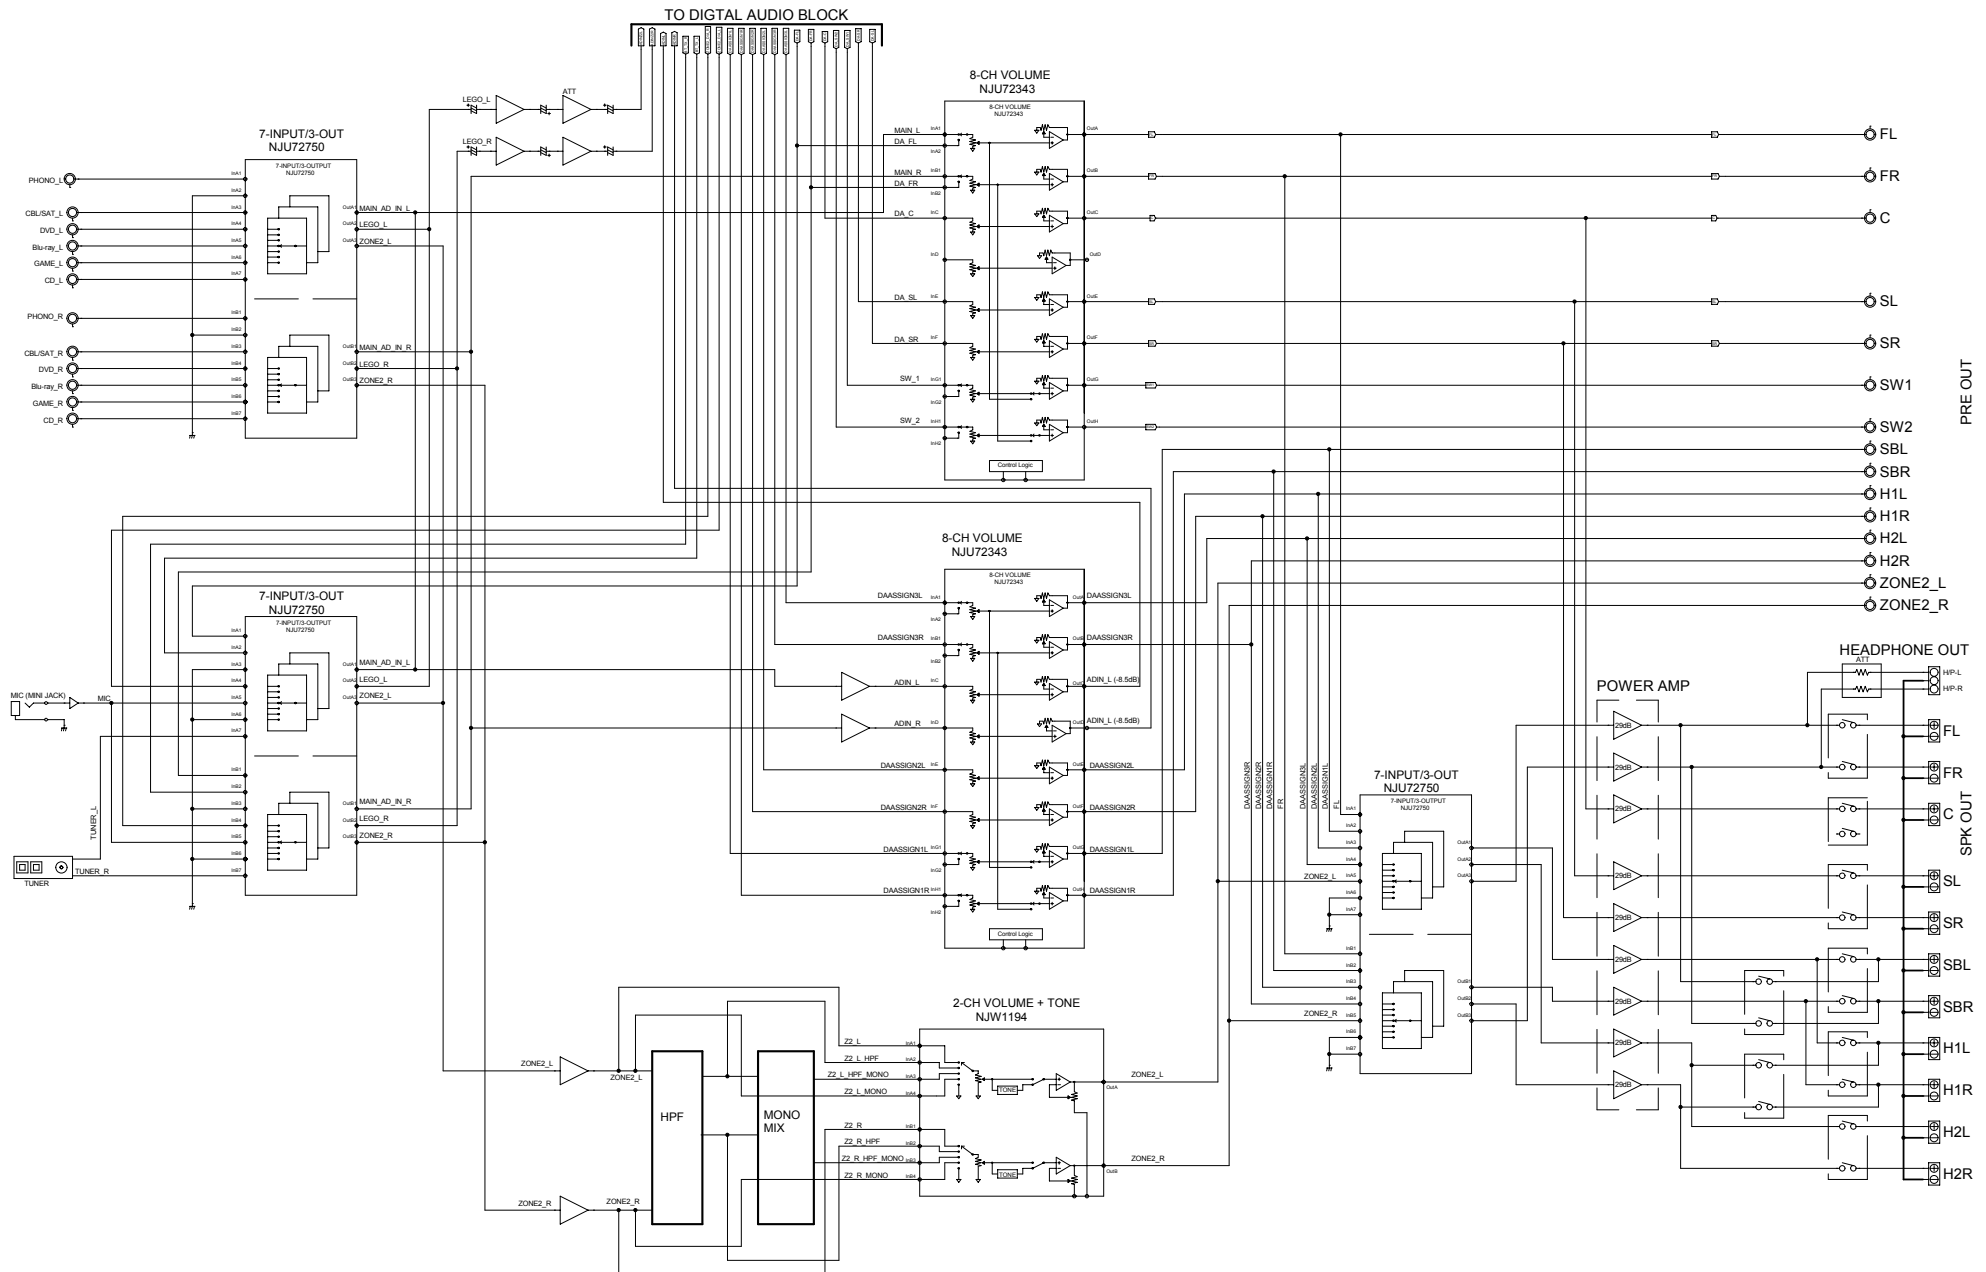


AVR_X360 DIGITAL AUDIO DIAGRAM

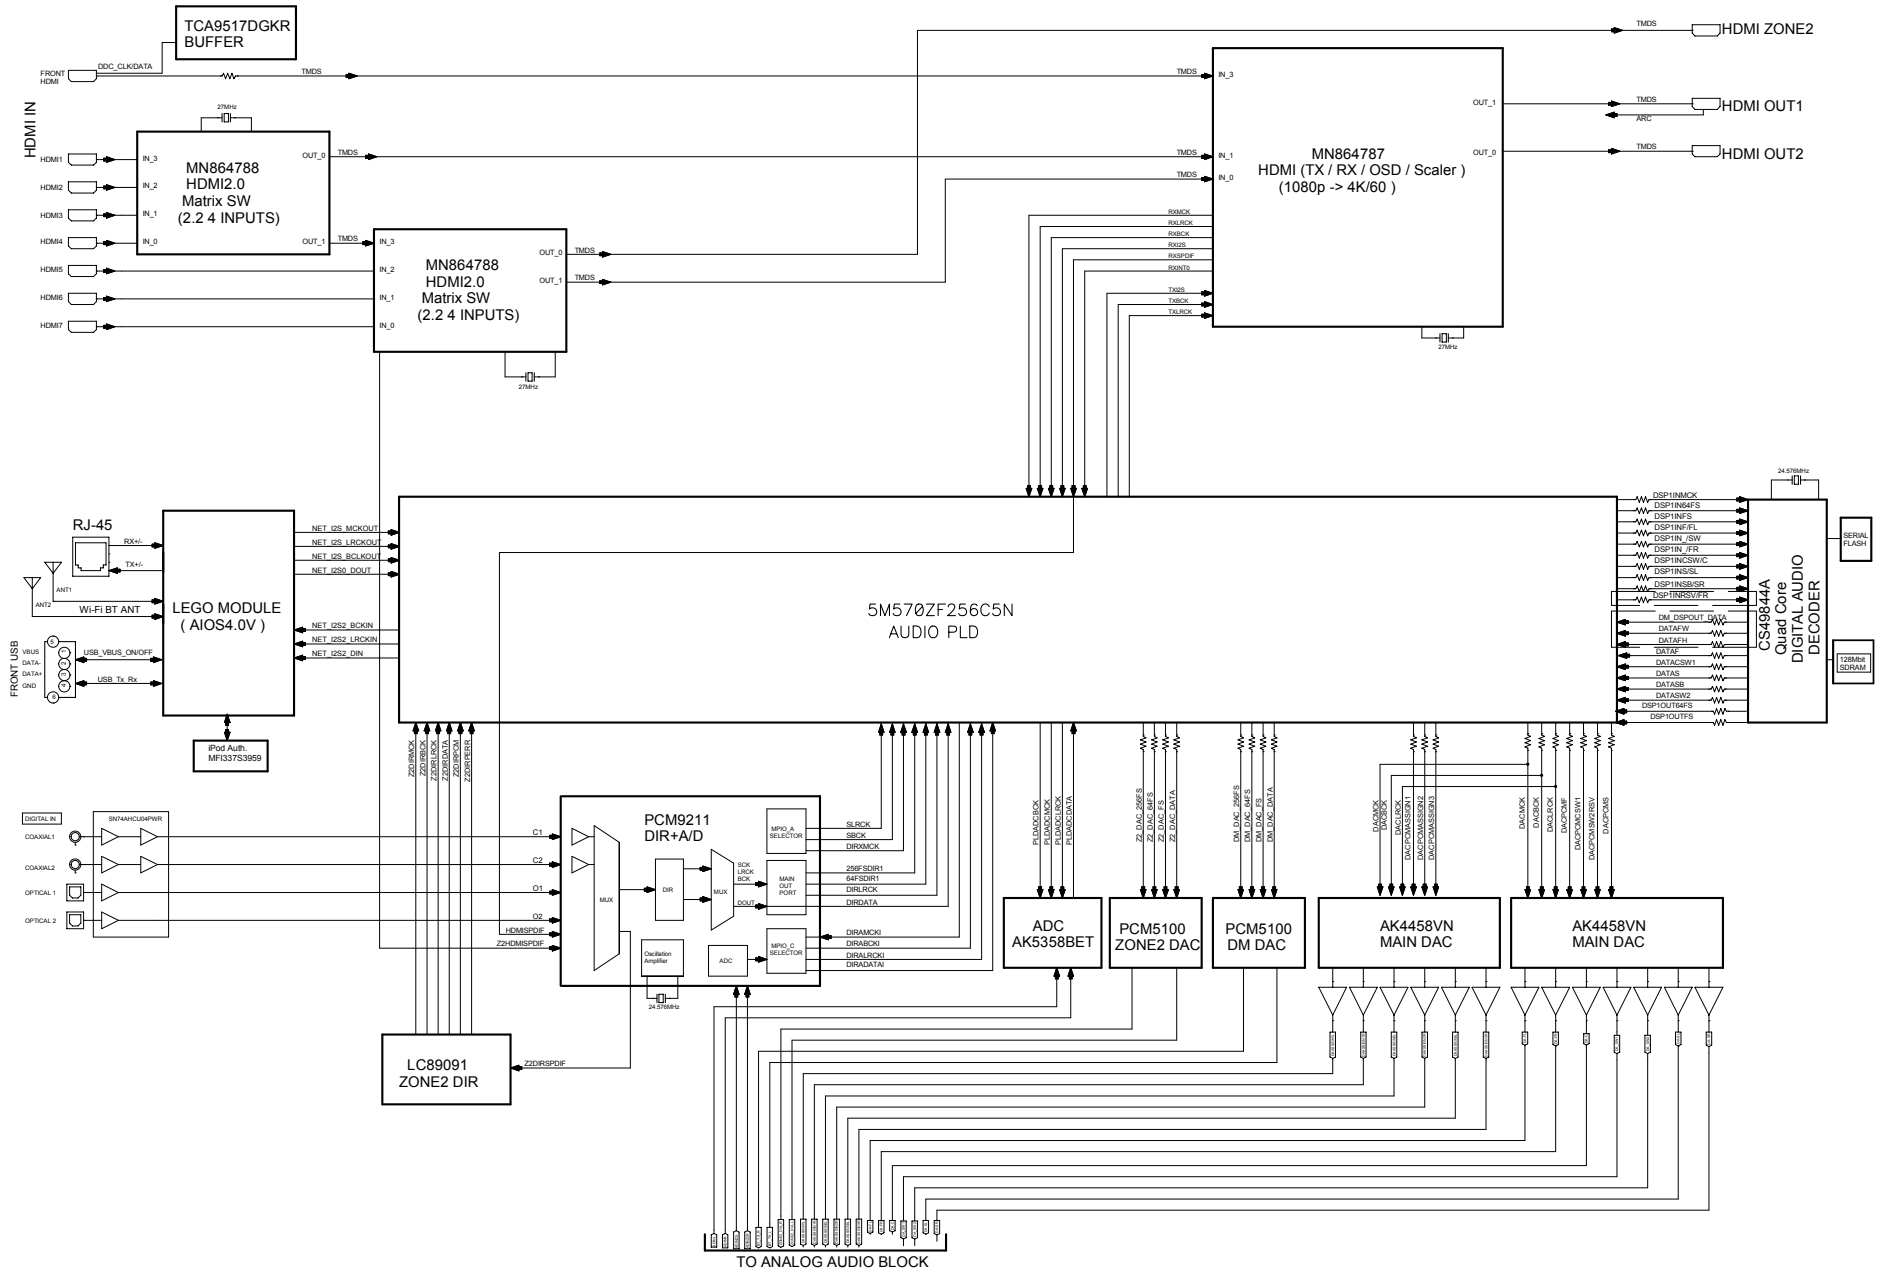


AVR_X3600 VIDEO DIAGRAM

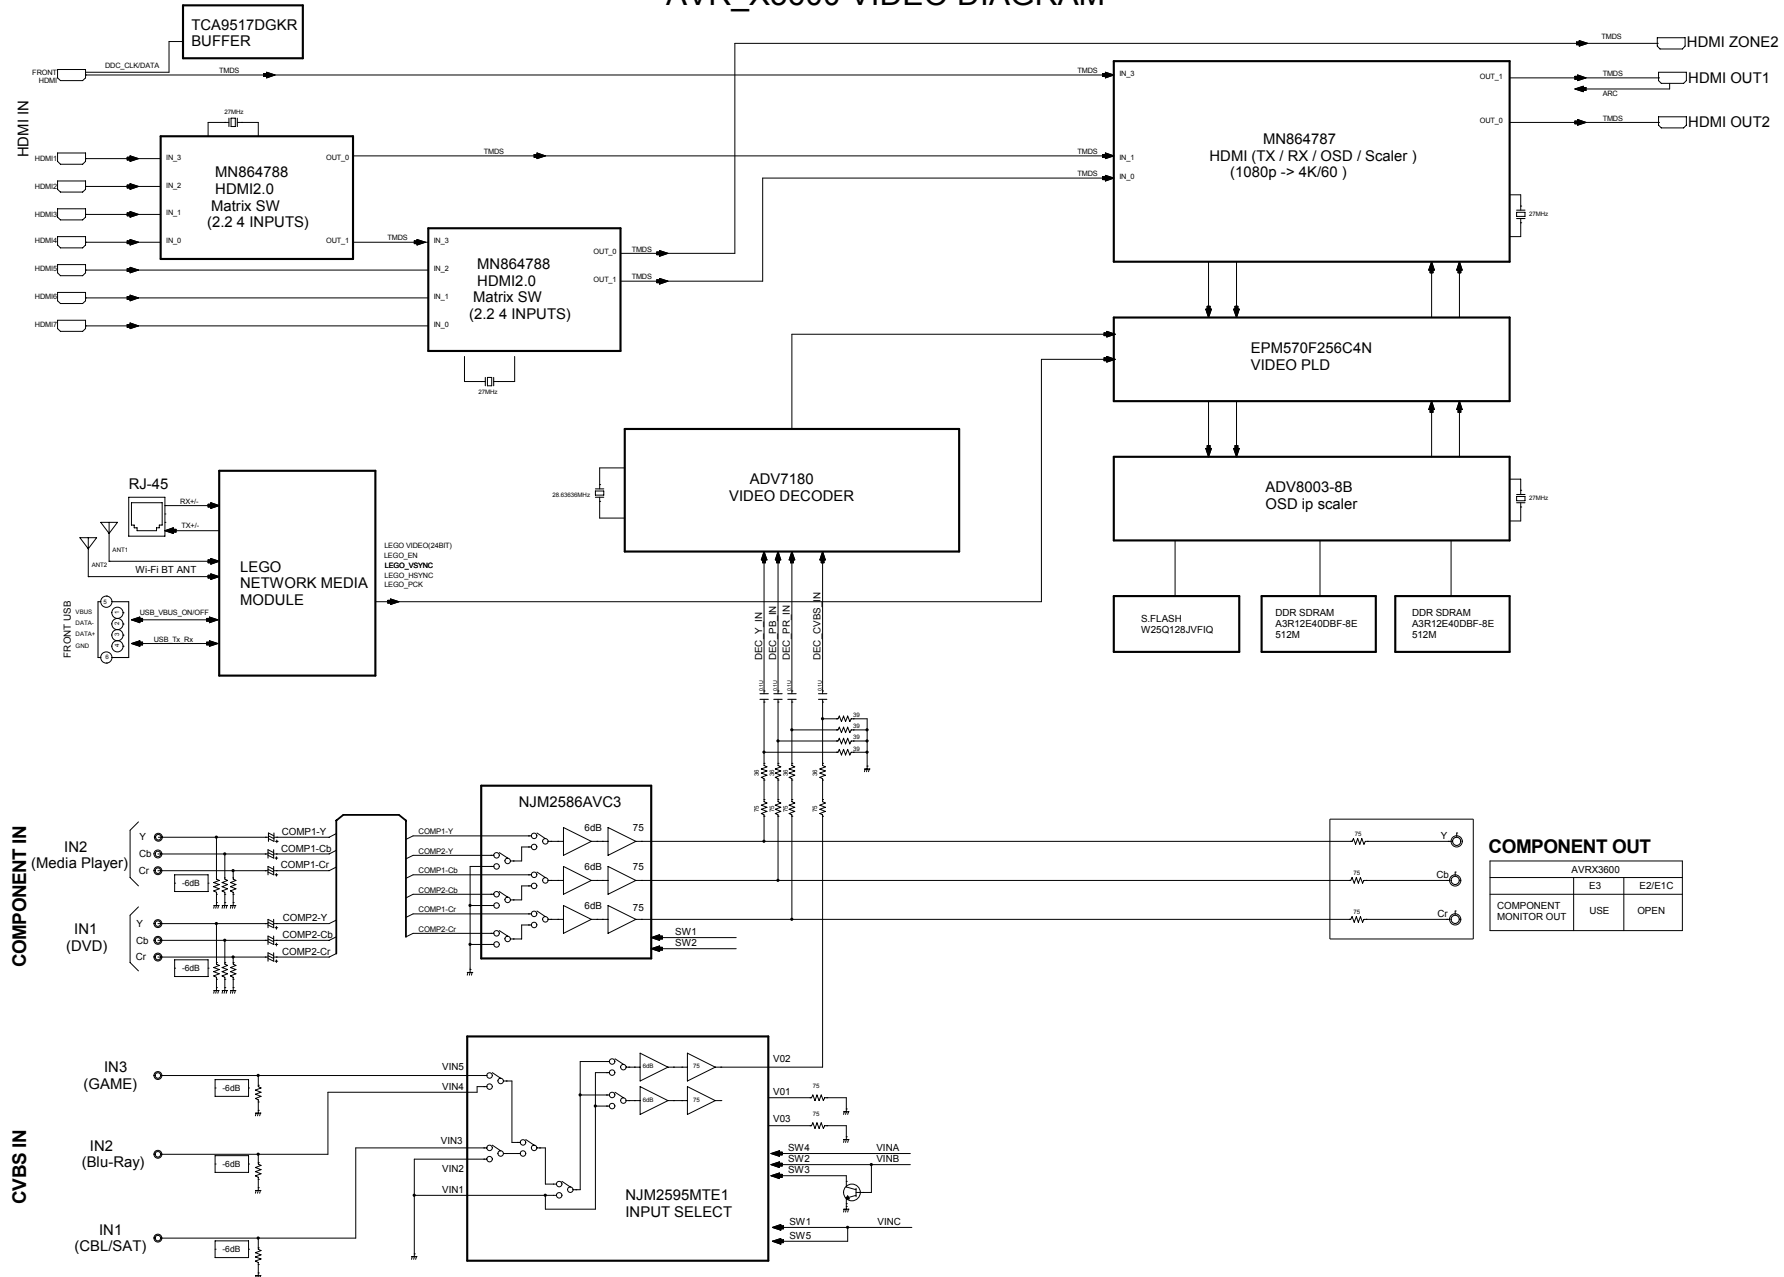

AVR-X3600 VCC DIAGRAM

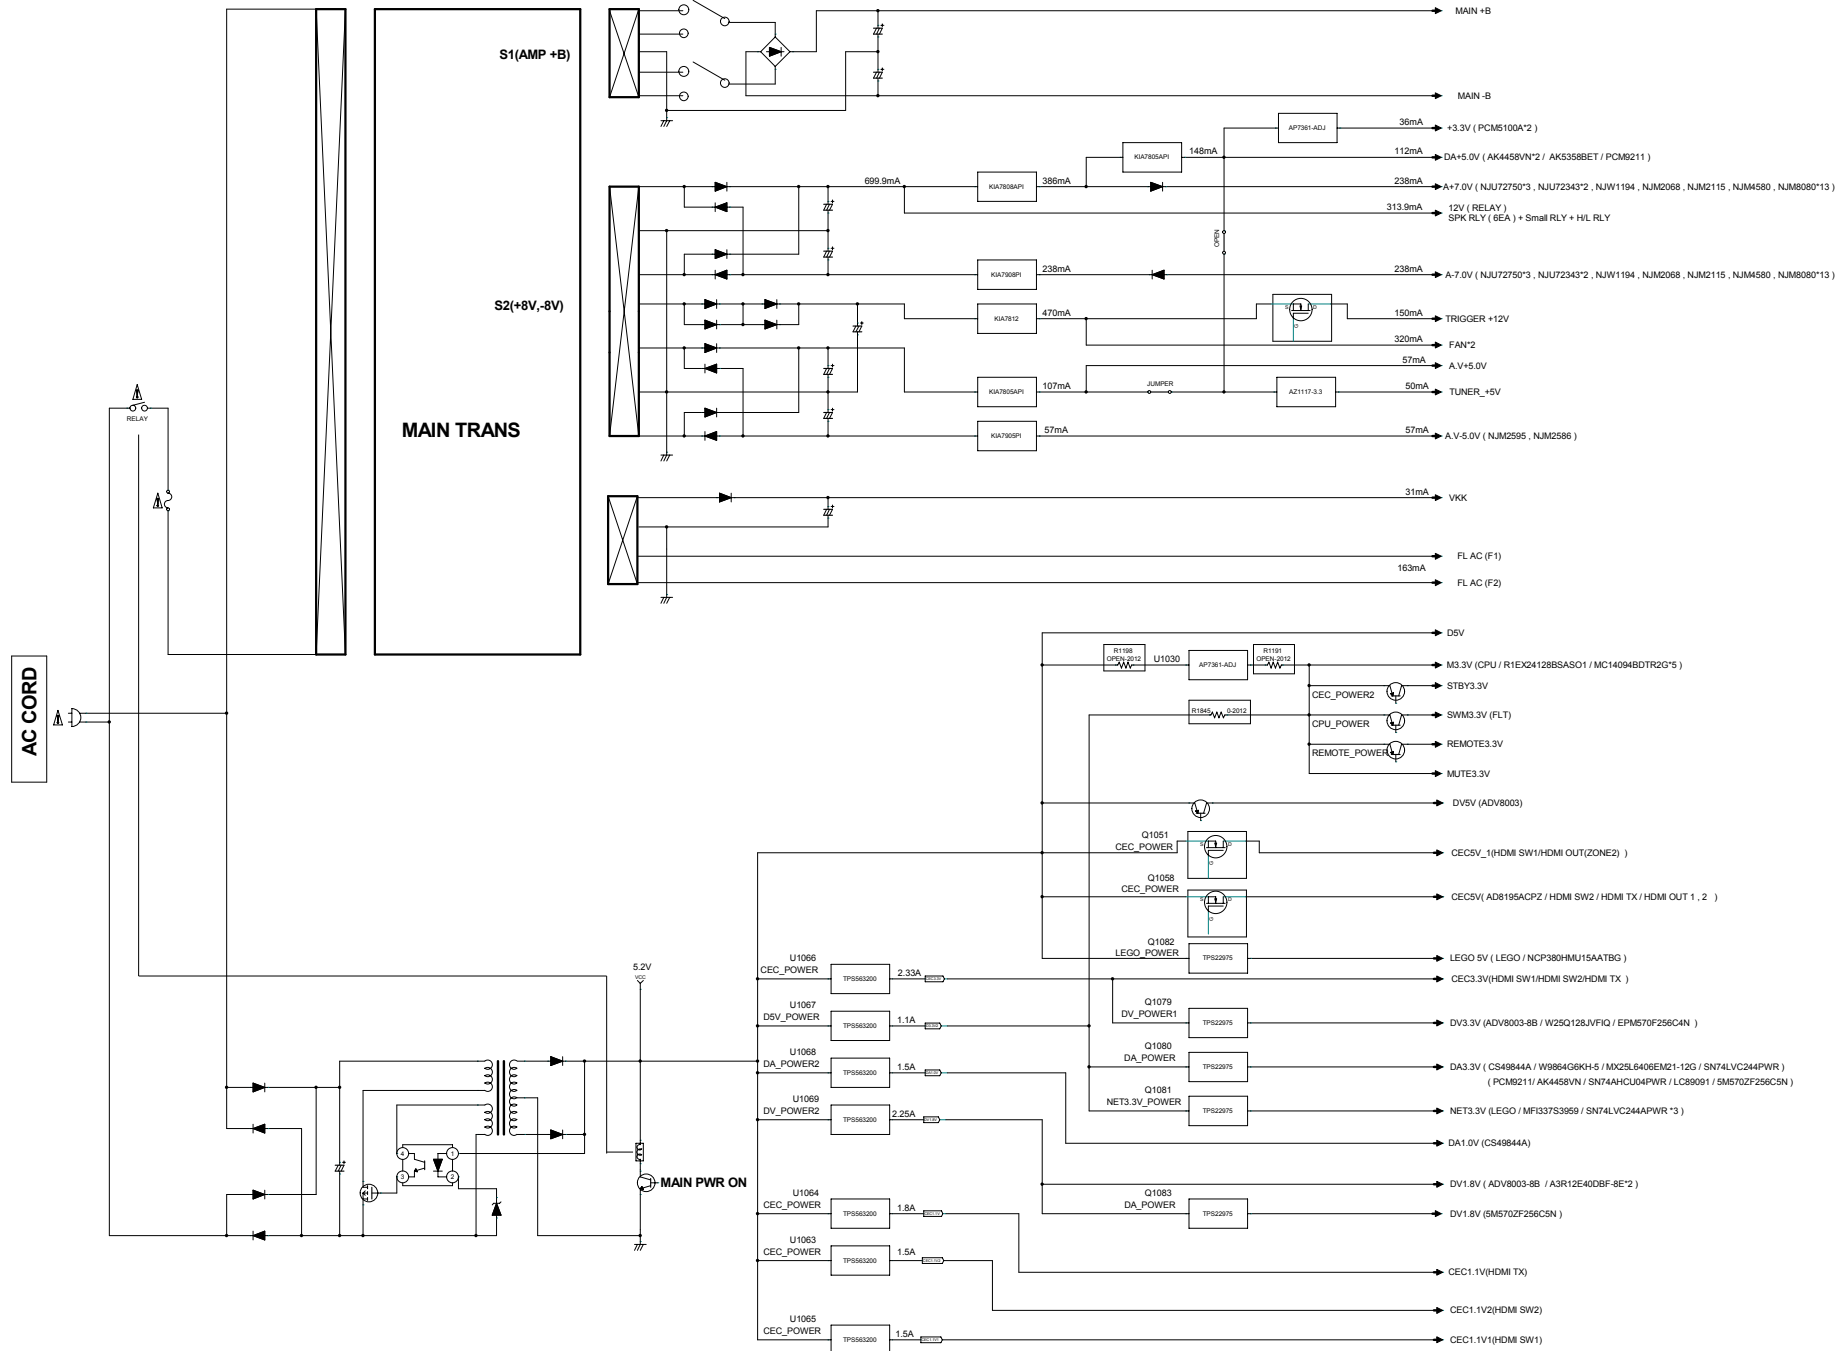


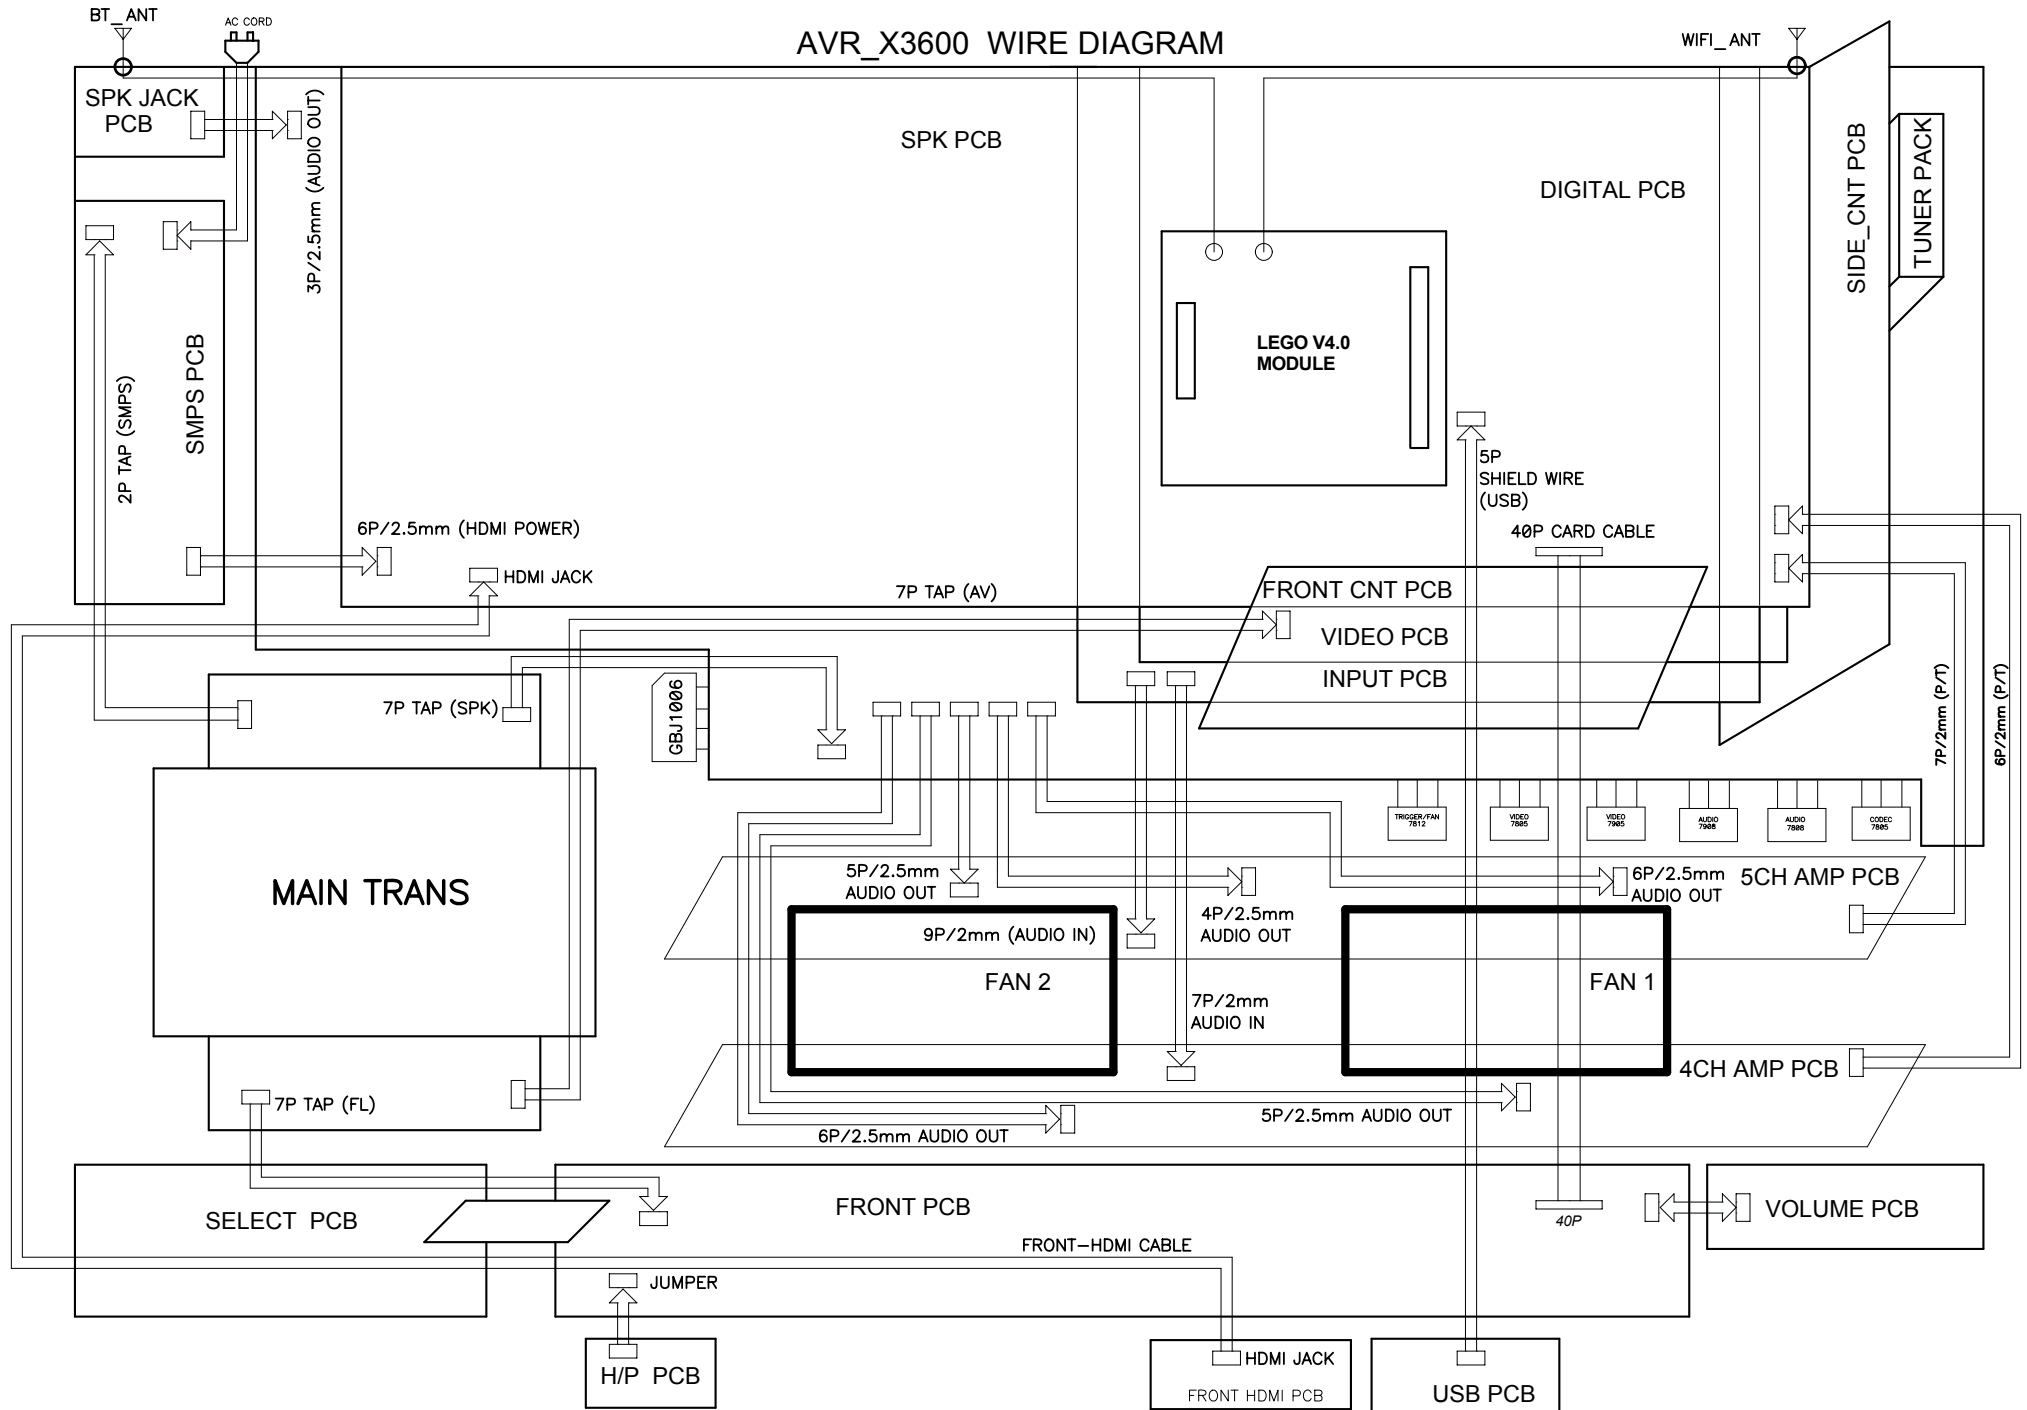

Only major semiconductors are shown, general semiconductors etc. are omitted to list.
The semiconductor which described a detailed drawing in a schematic diagram are omitted to list.

1. IC's

R5F564MJCDFC (DIGITAL : U1018)

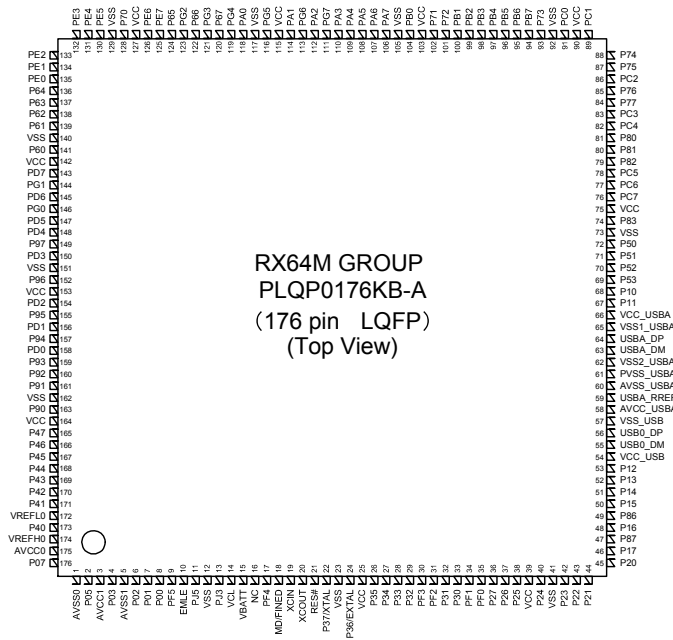

RX64M GROUP
PLQP0176KB-A
(176 pin LQFP)
(Top View)

Terminal Functions


Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
1	AVSS0	AVSS0	-	-	-	-	-	Ground pin
2	P05/IRQ13	POWER_KEY	I	M3VPu	I	I	I	Detect Power switch (Release from Wait Mode,Set to interrupt)
3	AVCC1	AVCC1	-	-	-	-	-	Power supply pin
4	P03/IRQ11	RED_LED	O	-	L/H	L	H	POWER/STANDBY LED control pin
5	AVSS1	AVSS1	-	-	-	-	-	Ground pin
6	P02/SCK6/IRQ10/AN120	NC	O	-	L	L	L	NC
7	P01/RXD6/IRQ9/AN119	RXD_MI2320	I	Pd	I	I	I	External data input port (for AMX/FW update via 232C) :Connector is FFC
8	P00/TXD6/IRQ8/AN118	TXD_MO2321	O	-	L	L	L	External data output port (for AMX/FW update via 232C) :Connector is FFC
9	PF5/IRQ4	WHITE_LED(NA)/GREEN_LED(EU/CH)	O	-	L	L	L	POWER LED control pin
10	EMLE	EMLE	I	Pd	-	-	-	E20 Emulator control pin (On chip Emulator is used,this pin should be High. Not used,it should be Low)
11	PJ5	VSEL_A	I	SW3VPu	I	I	I	Master Volume (Rotary encoder) signal input pin
12	VSS	VSS	-	-	-	-	-	Ground pin
13	PJ3	VSEL_B	I	SW3VPu	I	I	I	Master volume (Rotary encoder) signal input pin
14	VCL	VCL	I	-	-	-	-	Smoothing capacitor connection pin
15	VBATT	VBATT	-	-	-	-	-	Power supply pin
16	NC	NC	I	Pd	-	-	-	NC(Pull down)
17	TRST#/PF4	TRST#/NC(NORMAL)	I/O	Pd	I/O	I/O	I/O	E20 Emulator control pin/When normal operating mode,set to input.
18	MD/FINED	MD	I	M3VPu	I	I	I	Pins for setting the operating mode(select the Boot Mode or User Boot Mode,Single Chip Mode)

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
19	XCIN	XCIN	I	Pd	-	-	-	NC(Pull down)
20	XCOUT	XCOUT	I	-	-	-	-	NC(open)
21	RES#	RESET	I	M3VPu	-	-	-	Reset signal input pin
22	XTAL/P37	XTAL	I	-	-	-	-	Pins for a crystal resonator (Xin=12MHz × 10)
23	VSS	VSS	-	-	-	-	-	Ground pin
24	EXTAL/P36	EXTAL	-	-	-	-	-	Pins for a crystal resonator (Xin=12MHz × 10)
25	VCC	VCC	-	-	-	-	-	Power supply pin
26	UPSEL/P35(IN)/NMI	COMP_DET	I	SW3VPu	I	I	I	Component video signal detect pin
27	P34/SCK6/SCK0/IRQ4	BDOWN	I	M3VPu	I	I	I	Detect power down
28	P33/TIOCD0/RXD6/RXD0/IRQ3-DS	RC_IN	I	M3VPu	I	I	I	Remote input
29	P32/TIOCC0/TXD6/TXD0/IRQ2-DS	NC	O	-	L	L	L	NC
30	TMS/PF3	TMS/NC(NORMAL)	I/O	M3VPu	-/I	-/I	I	E20 Emulator control pin/When normal operating mode,set to input.
31	TDI/PF2/RXD1	TDI/RXD_MIT-SUBISHI	I/O/I	M3VPu	-/I	-/I	I	E20 Emulator control pin/Mitsubishi writer control pin/When normal operating mode,set to input.
32	P31/IRQ1-DS	TU_INT	I	SW3VPu	L	L	L	TUNER control
33	P30/RXD1	TU_DA	I/O	SW3VPu	L	L	L	TUNER control
34	TCK/FINEC/PF1/SCK1	TCK/NC(NORMAL)	I/O	M3VPu	-/I	-/I	I	E20 Emulator control pin/When normal operating mode,set to input.
35	TD0/TXD1/PF0	TDO/TXD_MIT-SUBISHI	O/O/I	M3VPu	-/I	-/I	I	E20 Emulator control pin/Mitsubishi writer control pin/When normal operating mode,set to input.
36	P27/SCK1	TU_LA	O	-	L	L	L	TUNER control
37	P26/TXD1	TU_CK	O	SW3VPu	L	L	L	TUNER control
38	P25/RXD3	VOL_DATA	O	-	L	L	L	Volume control pin (NJU72343)
39	VCC	VCC	-	-	-	-	-	Power supply pin
40	P24/SCK3	NC	O	-	L	L	L	NC
41	VSS	VSS	-	-	-	-	-	Ground pin
42	P23/TXD3	E_RTS_MOEI	O	Pd (BCM58305 Internal Pd)	L	L	L	Ethernet(Network Module) control pin
43	P22/SCK0	E_CTS_MIEO	I	Pd (onboard +BCM58305 Internal Pd)	I	I	I	Ethernet(Network Module) control pin
44	P21/RXD0/IRQ9	E_RXD_MIEO	I	Pd (onboard +BCM58305 Internal Pd)	I	L	I	Ethernet(Network Module) control pin
45	P20/TXD0/IRQ8	E_TXD_MOEI	O	Pd (BCM58305 Internal Pd)	L	L	L	Ethernet(Network Module) control pin
46	P17/SCK1/TXD3/IRQ7	NET_FACT_RST	O(ODR)	Pu (BCM58305 Internal Pd)	Z	Z	Z	Ethernet(Network Module) control pin
47	P87/TXD10/TIOCA2	NC	O	-	L	L	L	NC
48	P16/TXD1/RXD3/IRQ6	NETSV_POWER	O	-	L	L	L	Ethernet power supply (Net5V) control pin/
49	P86/RXD10	SEL_DATA	O	-	L	L	L	Audio selector control pin (NJU72750)
50	P15/RXD1/SCK3/IRQ5	AEXP_STB	O	-	L	L	L	Expander (MC14094) control pin
51	P14/IRQ4	AEXP_OE	O	Pd	L	L	L	Expander (MC14094) control pin
52	P13/TXD2/IRQ3	AEXP_CLK	O	-	L	L	L	Expander (MC14094) control pin
53	P12/RXD2/IRQ2	AEXP_DATA	O	-	L	L	L	Expander (MC14094) control pin
54	VCC_USB	VCC_USB	-	-	-	-	-	Power supply pin
55	USB0_DM	USB0_DM	-	-	-	-	-	NC(open)
56	USB0_DP	USB0_DP	-	-	-	-	-	NC(open)
57	VSS_USB	VSS_USB	-	-	-	-	-	Ground pin
58	AVCC_USBA	AVCC_USBA	-	-	-	-	-	Power supply pin
59	USBA_PREF	USBA_PREF	-	-	-	-	-	NC(open)
60	AVSS_USBA	AVSS_USBA	-	-	-	-	-	Ground pin
61	PVSS_USBA	PVSS_USBA	-	-	-	-	-	Ground pin
62	VSS2_USBA	VSS2_USBA	-	-	-	-	-	Ground pin
63	USBA_DM	USBA_DM	-	-	-	-	-	NC(open)
64	USBA_DP	USBA_DP	-	-	-	-	-	NC(open)
65	VSS1_USBA	VSS1_USBA	-	-	-	-	-	Ground pin
66	VCC_USBA	VCC_USBA	-	-	-	-	-	Power supply pin
67	P11/SCK2/IRQ1	CEC_OUT	O	-	L	L	-	CEC-D control pin

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
68	P10/IRQ0	CEC_IN	I	5T-BY3VPu	I	I	I	CEC-D control pin
69	P53	ADV8003_SPI_CS	O	DV3VPu	L	L	L	GUI control pin(ADV8003)
70	P52/RXD2	ADV8003_SPI_MI	I		L	L	L	GUI control pin(ADV8003)
71	P51/SCK2	ADV8003_SPI_CLK	O		L	L	L	GUI control pin(ADV8003)
72	P50/TXD2	ADV8003_SPI_MO	O		L	L	L	GUI control pin(ADV8003)
73	VSS	VSS	-		-	-	-	Ground pin
74	P83/SCK10	IP_RST	O	Pd	I	I	L	Scaler w/ GUI (ADV8003) Reset control pin
75	VCC	VCC	-		-	-	-	Power supply pin
76	UB/PC7/TXD8/IRQ14	UB	I	Pd	-	-	-	Pins for setting the boot mode(select the Boot Mode or User Boot Mode)
77	PC6/RXD8/IRQ13	AVSDA	I/O	CEC3VPu	O/L	O/L	L	VIDEO I2C control pin for ADV8003/ ADV7180/ ARC IC
78	PC5/SCK8	AVSCL	I/O	CEC3VPu	O/L	O/L	L	VIDEO I2C control pin for ADV8003/ ADV7180/ ARC IC
79	P82/TXD10	DSP_MOSI	O	DA3VPu	L	L	L	DSP(CS49844A) control pin
80	P81/RXD10	DSP_MISO	I	DA3VPu	L	L	L	DSP(CS49844A) control pin
81	P80/SCK10	DSP_CLK	O	DA3VPu	L	L	L	DSP(CS49844A) control pin
82	PC4/SCK5	DSP_CS	O	DA3VPu	L	L	L	DSP(CS49844A) control pin
83	PC3/TXD5	DSP_FLAG0	I	DA3VPu	L	L	L	DSP(CS49844A) interrupt signal input pin
84	P77/TXD11	DSP_RST	O	Pd	L	L	L	DSP(CS49844A) reset control pin
85	P76/RXD11	DSP_BUSY	I	DA3VPu	L	L	L	DSP BUSY signal input
86	PC2/RXD5	H5VOUT_POWER	O		L	L	L	HDMI 5V power supply control pin
87	P75/SCK11	CEC_POWER2	O	L	L	H		CEC standby power control (for CEC Standby Mode 3)
88	P74	DSP_ROM_WRITE	O		L	L	L	DSP ROM writing control(When writing,set to High)
89	PC1/SCK5/IRQ12	DAC_PLD_ERR	I		L	L	L	Detect PLD error (from Audio PLD)
90	VCC	VCC	-		-	-	-	Power supply pin
91	PC0/IRQ14	TTL_SEL_A	O	-	L	L	L	Video PLD control pin(select for A to H/NET/HDMI)
92	VSS	VSS	-		-	-	-	Ground pin
93	P73	TTL_SEL_B	O		L	L	L	Video PLD control pin(select for A to H/NET/HDMI)
94	P87/TXD9	HSDA	I/O	CEC3VPu	L	L	L	HDMI I2C control pin for MN864787/MN864788
95	P86/RXD9	HSCAL	I/O	CEC3VPu	L	L	L	HDMI I2C control pin for MN864787/MN864788
96	P85/SCK9	THERMAL_F	I	SW3VPu	I	L	I	Protection detect signal input pin (for power TR)
97	P84	APLD_CS	O	Pd	L	L	L	Audio PLD (5M570ZF256C5N) control pin
98	P83/SCK4/SCK6	APLD_DATA/DAC_DATA	O	Pd	L	L	L	Audio PLD (5M570ZF256C5N) control pin/DAC (AK4458VN) control pin
99	P82	APLD_CLK/DAC_CLK	O	Pd	L	L	L	Audio PLD (5M570ZF256C5N) control pin/DAC (AK4458VN) control pin
100	P81/TXD4/TXD6/IRQ4-DS	DAC_MS	O		L	L	L	DAC (AK4458VN) control pin
101	P72	DAC_RST	O	Pd	L	L	L	DAC (AK4458VN) control pin
102	P71	Z2PLD_ERR	I	-	L	L	L	Detect ZONE2 DIR error (from Audio PLD)
103	VCC	VCC	-		-	-	-	Power supply pin
104	P80/RXD4/RXD6/IRQ12	NC	O		L	L	L	NC
105	VSS	VSS	-		-	-	-	Ground pin
106	PA7	ISEL_A	I	SW3VPu	I	I	I	Input selector (Rotary encoder) signal input pin
107	PA6	ISEL_B	I	SW3VPu	I	I	I	Input selector (Rotary encoder) signal input pin
108	PA5	VOL_CLK	O		L	L	L	Volume control pin (NJU72343)
109	PA4/TXD5/SSDA5/IRQ5-DS	NC	O		L	L	L	NC
110	PA3/RXD5/SSCL5	MVOL_MUTE	O	Pd	L	L	L	Volume control pin (NJU72343)
111	TRDATA3/PG7	REMOTE_POWER(232C)	O		L	L	L	232C power supply (REMOTE 3.3V) control pin
112	PA2/RXD5	DA_POWER2	O	Pd	L	L	L	Digital audio power supply (DA1.0V) control pin
113	TRDATA2/PG6	ZVOL_DATA	O		L	L	L	ZONE2 volume control pin (NJW1194)
114	PA1/SCK5/IRQ11	ZVOL_CLK	O		L	L	L	ZONE2 volume control pin (NJW1194)
115	VCC	VCC	-		-	-	-	Power supply pin
116	TRCLK/PG5	ZVOL_STB	O		L	L	L	ZONE2 volume control pin (NJW1194)
117	VSS	VSS	-		-	-	-	Ground pin
118	PA0	H5V_DET	I	Pd	I	I	I	HDMI IN 5V detect signal pin
119	TRSYNC/PG4	FL_RST	O		L	L	L	FL display control pin
120	P67/IRQ15	FL_CE	O		L	L	L	FL display control pin
121	TRDATA1/PG3	FL_CLK	O		L	L	L	FL display control pin
122	P66	FL_DATA	O		L	L	L	FL display control pin
123	TRDATA0/PG2	V_PLD_TRANS1	O		L	L	L	Video PLD control pin (for setting of GUI transmittance)
124	P65	NC	O		L	L	L	NC
125	PE7/IRQ7/AN105	ASO/DC_DET	I	SW3VPu	I	I	I	Protection detect signal input pin (for ASO and DC) (A/D converter)

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
126	PE6/IRQ6/AN104	MIC_DET/_H/P/_DET	I	SW3VPu	I	I	I	Headphone insert detect pin/Microphone insert detect pin (A/D converter)
127	VCC	VCC	-		-	-	-	Power supply pin
128	P70	ADC_RST	O	Pd	I	L	I	A/D convertor(AK5358) reset control pin
129	VSS	VSS	-		-	-	-	Ground pin
130	PE5/IRQ5/AN103	MAIN_POWER	O		L	L	L	Power supply control pin
131	PE4/AN102	CPU_POWER	O		L	L	L	CPU power supply control pin
132	PE3/AN101	AIOS4_WAKEUP	O		L	L	L	same as NET5V_POWER,NET3.3V_POWER (This port use to control for Network Module standby mode in the future(Low : Deep Standby, High : normal))
133	PE2/RXD12/IRQ7-DS/AN100	AIOS4_STBY_STATUS	I	-	I	I	I	Not used (This port use to detect for Network Module standby status in the future (Low : normal, High : Deep Standby))
134	PE1/TXD12	GUI_WRITE	O		L	L	L	GUI flash rom writing control
135	PE0/SCK12	NET3.3V_POWER	O		L	L	L	Ethernet power supply control(NET3.3V)
136	P64	D5V_POWER	O		L	L	H	Digital 5V power supply control pin(3.3V and 1.8V generate from 5V) (When CEC standby mode3,set to Low)
137	P63	CEC_POWER	O		L	L	H	CEC standby power supply control(CEC5V,CEC3.3V,CEC1.8V)(When CEC standby mode3,set to Low)
138	P62	DV_POWER1	O		L	L	L	Digital video power supply (DV5V,DV3.3V) control pin
139	P61	DV_POWER2	O		L	L	L	Digital video power supply (DV1.8V) control pin
140	VSS	VSS	-		-	-	-	Ground pin
141	P60	DIR_DIN	O		L	L	L	DIR (PCM9211) control pin
142	VCC	VCC	-		-	-	-	Power supply pin
143	PD7/IRQ7/AN107	DIR_CE	O		L	L	L	DIR (PCM9211) control pin
144	PG1	DIR_DOUT	I	DA3.3Pu	I	I	I	DIR (PCM9211) control pin
145	PD6/IRQ6/AN106	DIR_CLK	O		L	L	L	DIR (PCM9211) control pin
146	PG0	DIR_RST	O	Pd	L	L	L	DIR (PCM9211) control pin
147	PD5/IRQ5/AN113	787_HAINT	I	CEC3VPu	Z	-	-	HDMI Rx (MN864787) audio interrupt signal det
148	PD4/IRQ4/AN112	V_PLD_TRANS2	O		L	L	L	Video PLD control pin (for setting of GUI transmittance)
149	P97	DE_RST	O	Pd	Z	-	L	Video decoder (ADV7180) reset control pin
150	PD3/IRQ3/AN111	787_HINT	I	CEC3VPu	Z	-	-	HDMI Tx (MN864787) interrupt signal input pin
151	VSS	VSS	-		-	-	-	Ground pin
152	P96	787_RST	O	Pd	Z	-	H	HDMI Tx (MN864787) reset control pin (When CEC standby mode3,set to reset)
153	VCC	VCC	-		-	-	-	Power supply pin
154	PD2/IRQ2/AN110	788_2_HINT	I	CEC3VPu	Z	-	-	HDMI Rx (MN864788) interrupt signal input pin
155	P95	788_2_RST	O	Pd	Z	-	H	HDMI Rx (MN864788) reset control pin (When CEC standby mode3,set to reset)
156	PD1/IRQ1/AN109	788_1_HINT	I	CEC3VPu	Z	-	-	HDMI Rx (MN864788) interrupt signal input pin
157	P94	788_1_RST	O	Pd	Z	-	H	HDMI Rx (MN864788) reset control pin (When CEC standby mode3,set to reset)
158	PD0/IRQ0/AN108	ARC_RST	O		L	L	L	Reset control pin for ARC IC
159	P93/AN117	THERMAL_A	I	SW3VPu	I	L	I	Protection detect signal input pin (for power TR)
160	P92/RXD7/AN116	DA_POWER1	O		L	L	L	Digital audio power supply (DA3.3V,DA1.2V) control pin
161	P91/AN115	THERMAL_E	I	SW3VPu	I	L	I	Protection detect signal input pin (for Heat sink)
162	VSS	VSS	-		-	-	-	Ground pin
163	P90/TXD7/AN114	TEMP_SENSOR	I	NET3.3VPu	I	L	I	Temperature sensor input pin (for SRM)
164	VCC	VCC	-		-	-	-	Power supply pin
165	P47/IRQ15-DS/AN007	ARC_INT	I	CEC3VPu	L	L	L	ARC IC interrupt signal input pin
166	P46/IRQ14-DS/AN006	CURRENT_DET	I	Pd	I	L	I	Current level monitor pin (A/D converter)
167	P45/IRQ13-DS/AN005	AMPSIGDET	I	Pd	I	L	I	Signal level monitor pin (AD converter)
168	P44/IRQ12-DS/AN004	MODE	I		I	I	I	Region setting pin
169	P43/IRQ11-DS/AN003	KEY3	I	M3VPu	I	I	I	Key control signalinput pin (When standby mode,set to interrupt)
170	P42/IRQ10-DS/AN002	KEY2	I	M3VPu	I	I	I	Key control signalinput pin (When standby mode,set to interrupt)
171	P41/IRQ9-DS/AN001	KEY1	I	M3VPu	I	I	I	Key control signalinput pin (When standby mode,set to interrupt)
172	VREFL0	VREFL0	-		-	-	-	Ground pin
173	P40	SEL_CLK	O		L	L	L	Audio selector control pin (NJU72750)
174	VREFH0	VREFH0	-		-	-	-	Power supply pin
175	AVCC0	AVCC0	-		-	-	-	Power supply pin
176	P07/IRQ15	V_PLD_TRANS0	O		L	L	L	Video PLD control pin (for setting of GUI transmittance)

PCM9211 (DIGITAL : U1040)


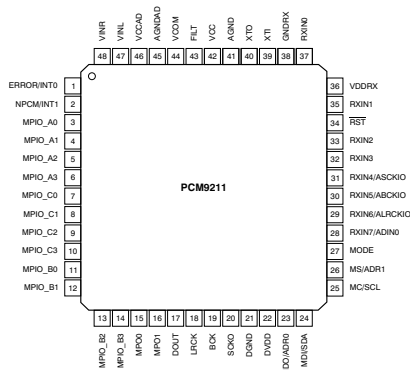


PIN Functions

PIN				DESCRIPTION
NO.	NAME	I/O	5-V TOLERANT	
1	ERROR/INT0	O	No	DIR Error detection output / Interrupt0 output
2	NPCM/INT1	O	No	DIR Non-PCM detection output / Interrupt1 output
3	MPIO_A0	I/O	Yes	Multipurpose I/O, Group A(1)
4	MPIO_A1	I/O	Yes	Multipurpose I/O, Group A(1)
5	MPIO_A2	I/O	Yes	Multipurpose I/O, Group A(1)
6	MPIO_A3	I/O	Yes	Multipurpose I/O, Group A(1)
7	MPIO_C0	I/O	Yes	Multipurpose I/O, Group C(1)
8	MPIO_C1	I/O	Yes	Multipurpose I/O, Group C(1)
9	MPIO_C2	I/O	Yes	Multipurpose I/O, Group C(1)
10	MPIO_C3	I/O	Yes	Multipurpose I/O, Group C(1)
11	MPIO_B0	I/O	Yes	Multipurpose I/O, Group B(1)
12	MPIO_B1	I/O	Yes	Multipurpose I/O, Group B(1)
13	MPIO_B2	I/O	Yes	Multipurpose I/O, Group B(1)
14	MPIO_B3	I/O	Yes	Multipurpose I/O, Group B(1)
15	MPO0	O	No	Multipurpose output 0
16	MPO1	O	No	Multipurpose output 1
17	DOUT	O	No	Main output port, serial digital audio data output
18	LRCK	O	No	Main output port, LR clock output
19	BCK	O	No	Main output port, Bit clock output
20	SCKO	O	No	Main output port, System clock output
21	DGND	-	-	Ground, for digital
22	DVDD	-	-	Power supply, 3.3 V (typ.), for digital
23	MDO/ADR0	I/O	Yes	Software control I/F, SPI data output / I2C slave address setting0(2)
24	MDI/SDA	I/O	Yes	Software control I/F, SPI data input / I2C data input/output(2) (3)
25	MC/SCL	I	Yes	Software control I/F, SPI clock input / I2C clock input(2)



PIN				DESCRIPTION
NO.	NAME	I/O	5-V TOLERANT	
26	MS/ADR1	I	Yes	Software control I/F, SPI chip select / I2C slave address setting1(2)
27	MODE	I	No	Control mode setting, (see the Serial Control Mode section, Control Mode Pin Setting)
28	RXIN7/ADIN0	I	Yes	Biphase signal, input 7 / AUXIN0, serial audio data input(2)
29	RXIN6/ALRCKIO	I	Yes	Biphase signal, input 6 / AUXIN0, LR clock input(2)
30	RXIN5/ABCKIO	I	Yes	Biphase signal, input 5 / AUXIN0, bit clock input(2)
31	RXIN4/ASCKIO	I	Yes	Biphase signal, input 4 / AUXIN0, system clock input(2)
32	RXIN3	I	Yes	Biphase signal, input 3(2)
33	RXIN2	I	Yes	Biphase signal, input 2(2)
34	RST	I	Yes	Reset Input, active low(2) (4)
35	RXIN1	I	Yes	Biphase signal, input 1, built-in coaxial amplifier
36	VDDRX	-	-	Power supply, 3.3 V (typ.), for RXIN0 and RXIN1.
37	RXIN0	I	Yes	Biphase signal, input 0, built-in coaxial amplifier
38	GNDRX	-	-	Ground, for RXIN
39	XTI	I	No	Oscillation circuit input for crystal resonator or external XTI1 clock source input(5)
40	XTO	O	No	Oscillation circuit output for crystal resonator
41	AGND	-	-	Ground, for PLL analog
42	VCC	-	-	Power supply, 3.3 V (typ.), for PLL analog
43	FILT	O	No	External PLL loop filter connection terminal; must connect recommended filter
44	VCOM	O	No	ADC common voltage output; must connect external decoupling capacitor
45	AGNDAD	-	-	Ground, for ADC analog
46	VCCAD	-	-	Power supply, 5.0 V (typ.), for ADC analog
47	VINL	I	No	ADC analog voltage input, left channel
48	VINR	I	No	ADC analog voltage input, right channel

- (1) Schmitt trigger input
- (2) Schmitt trigger input
- (3) Open-drain configuration in I2C mode
- (4) Onboard pull-down resistor (50 k Ω , typical)
- (5) CMOS Schmitt trigger input

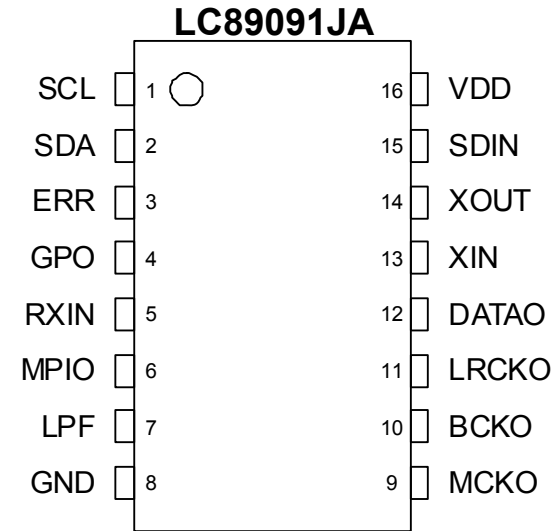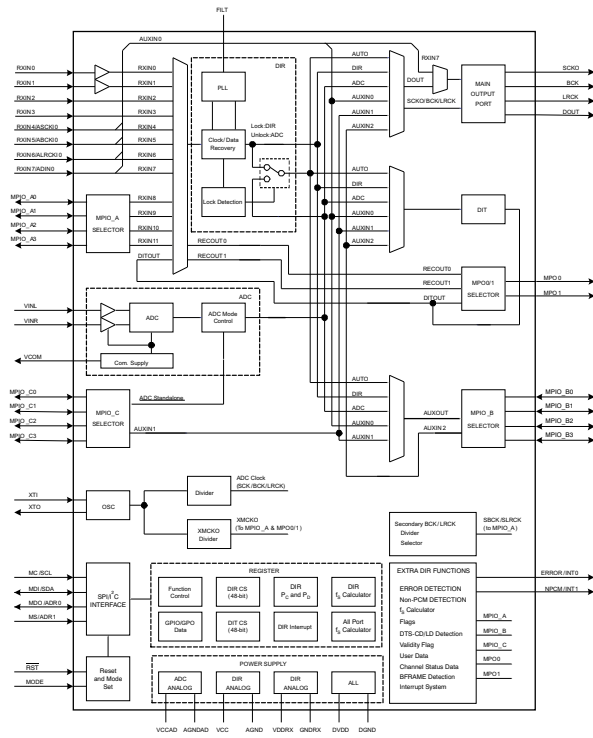

CS49844A (DIGITAL : U1073)

W9812G6KH-5 (DIGITAL : U1023)

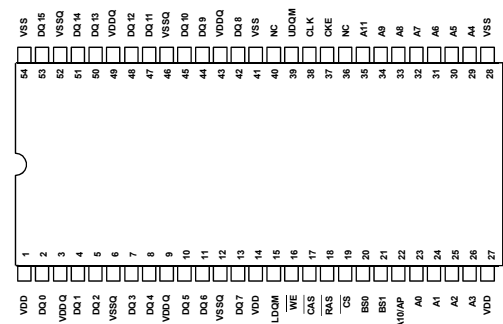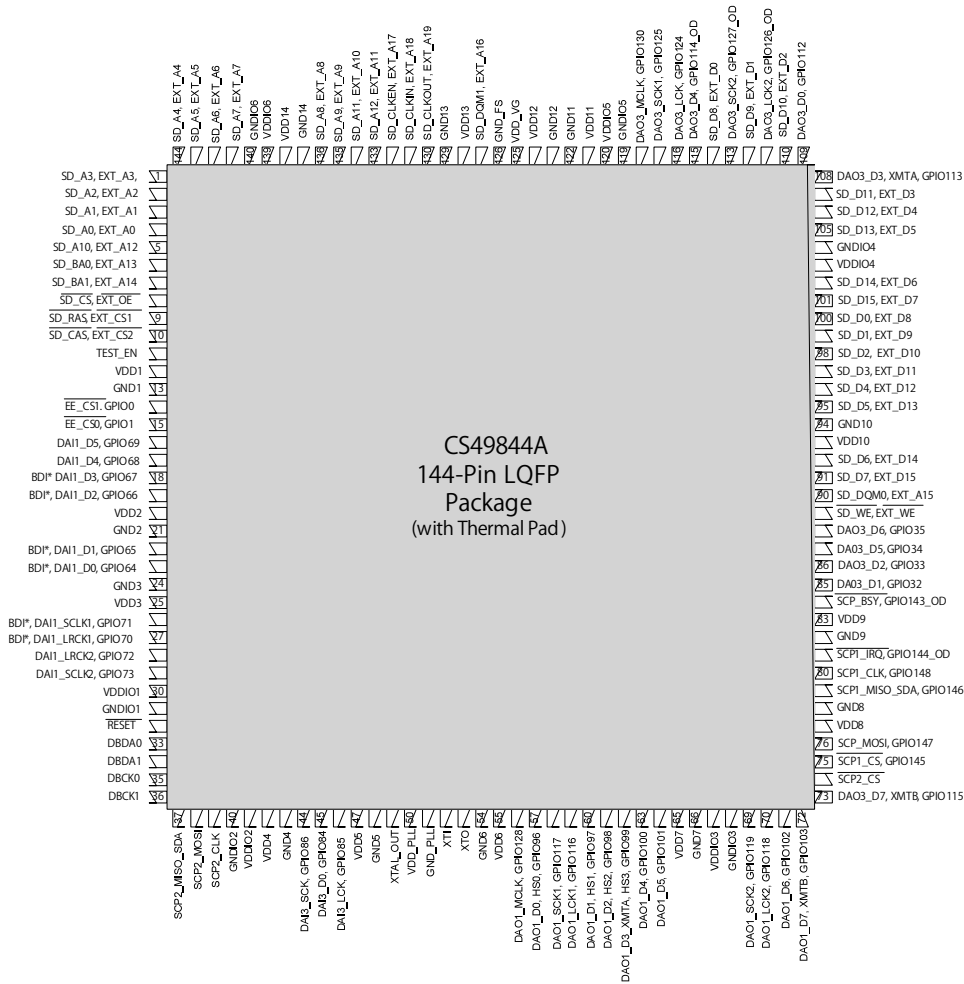

Pin description

PIN NUMBER	PIN NAME	FUNCTION	DESCRIPTION
23–26, 22, 29–35	A0 – A11	Address	Multiplexed pins for row and column address. Row address: A0 – A11. Column address: A0 – A8.
20, 21	BS0, BS1	Bank Select	Select bank to activate during row address latch time, or bank to read/write during address latch time.
2, 4, 5, 7, 8, 10, 11, 13, 42, 44, 45, 47, 48, 50, 51, 53	DQ0 – DQ15	Data Input/ Output	Multiplexed pins for data output and input.
19	\overline{CS}	Chip Select	Disable or enable the command decoder. When command decoder is disabled, new command is ignored and previous operation continues.
18	\overline{RAS}	Row Address Strobe	Command input. When sampled at the rising edge of the clock, \overline{RAS} , \overline{CAS} and \overline{WE} define the operation to be executed.
17	\overline{CAS}	Column Address Strobe	Referred to \overline{RAS}
16	\overline{WE}	Write Enable	Referred to \overline{RAS}
39, 15	LDQM, UDQM	Input/Output Mask	The output buffer is placed at Hi-Z (with latency of 2) when DQM is sampled high in read cycle. In write cycle, sampling DQM high will block the write operation with zero latency.
38	CLK	Clock Inputs	System clock used to sample inputs on the rising edge of clock.
37	CKE	Clock Enable	CKE controls the clock activation and deactivation. When CKE is low, Power Down mode, Suspend mode or Self Refresh mode is entered.
1, 14, 27	VDD	Power (+3.3V)	Power for input buffers and logic circuit inside DRAM.
28, 41, 54	VSS	Ground	Ground for input buffers and logic circuit inside DRAM.
3, 9, 43, 49	VDDQ	Power (+3.3V) for I/O Buffer	Separated power from Vdd, used for output buffers to improve noise.
6, 12, 46, 52	VSSQ	Ground for I/O Buffer	Separated ground from Vss, used for output buffers to improve noise.
36, 40	NC	No Connection	No connection.

Before Servicing
This Unit


Electrical

Mechanical


Repair Information

Updating

Block diagram

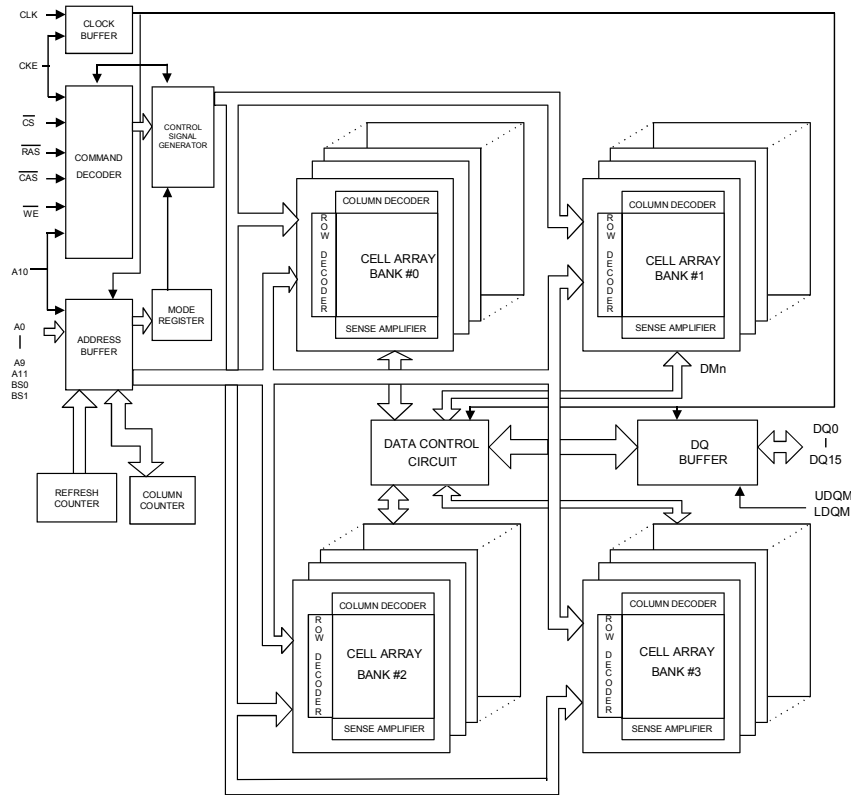

AK4458VN (INPUT : U1051, U1052)

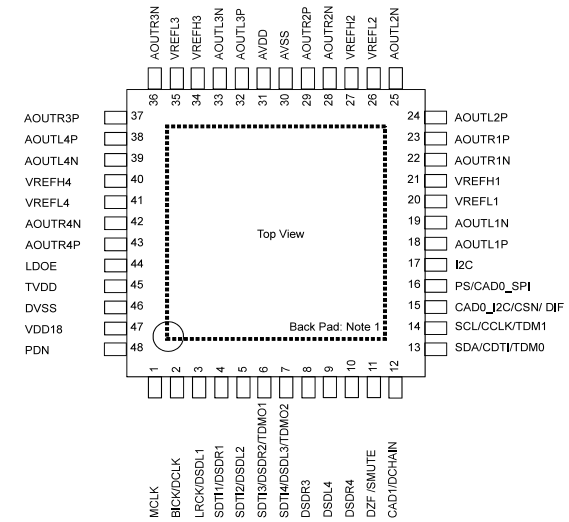


Pin Function

No.	Pin Name	I/O	Function	PD State
1	MCLK	I	External Master Clock Input Pin	Hi-Z
2	BICK	I	Audio Serial Data Clock Pin in PCM mode	Hi-z
	DCLK	I	DSD Clock Pin in DSD mode	Hi-Z
3	LRCK	I	Input Channel Clock Pin in PCM mode	Hi-Z
	DSDL1	I	Audio Serial Data Input in DSD mode	Hi-Z
4	SDTI1	I	Audio Serial Data Input in PCM mode	Hi-Z
	DSDR1	I	Audio Serial Data Input in DSD mode	Hi-Z
5	SDTI2	I	Audio Serial Data Input in PCM mode	Hi-Z
	DSDL2	I	Audio Serial Data Input in DSD mode	Hi-Z
6	SDTI3	I	Audio Serial Data Input in PCM mode	100k Ω
	DSDR2	I	Audio Serial Data Input in DSD mode	Pull down
	TDM01	O	Audio Serial Data Output in Daisy Chain mode	
	SDTI4	I	Audio Serial Data Input in PCM mode	100k Ω
	DSDL3	I	Audio Serial Data Input in DSD mode	Pull down
	TDM02	O	Audio Serial Data Output in Daisy Chain mode	
8	DSDR3	I	Audio Serial Data Input in DSD mode	Hi-Z
9	DSDL4	I	Audio Serial Data Input in DSD mode	Hi-Z
10	DSDR4	I	Audio Serial Data Input in DSD mode	Hi-Z
	DZF	O	Zero Input Detect in I2C Bus or 3-wire serial control mode	
	SMUTE	I	Soft Mute Pin in Parallel control mode. When this pin is changed to "H", soft mute cycle is initiated. When it is returning to "L", the output mute is released.	100k Ω
	CAD1	I	Chip Address 0 Pin in I2C Bus or 3-wire serial control mode	Hi-Z
	DCHAIN	I	Daisy Chain Mode select pin in Parallel control mode.	Hi-Z
	SDA	I/O	Control Data Pin in I2C Bus serial control mode	
	CDTI	I	Control Data Input Pin in 3-wire serial control mode	Hi-Z
	TDM0	I	TDM Mode select pin in Parallel control mode.	
	SCL	I	Control Data Clock Pin in I2C Bus serial control mode	
	CCLK	I	Control Data Clock Pin in 3-wire serial control mode	Hi-Z
	TDM1	I	TDM Mode select pin in Parallel control mode.	

No.	Pin Name	I/O	Function	PD State
15	CAD0_I2C	I	Chip Address 0 Pin in I2C Bus serial control mode	Hi-Z
	CSN	I	Chip Select Pin in 3-wire serial control mode	
	DIF	I	Audio Data Format Select in Parallel control mode. "L": 32-bit MSB, "H": 32-bit I2S	
16	PS	I	(I2C pin = "H") Control Mode Select Pin "L": I2C Bus serial control mode, "H": Parallel control mode.	Hi-Z
	CAD0_SPI	I	(I2C pin = "L") Chip Address 0 Pin in 3-wire serial control mode	
17	I2C	I	Control Mode Select Pin "L": 3-wire serial control mode "H": I2C Bus serial control mode or Parallel control mode.	Hi-Z
18	AOUTL1P	O	Lch Positive Analog Output 1 Pin	Hi-Z
19	AOUTL1N	O	Lch Negative Analog Output 1 Pin	Hi-Z
20	VREFL1	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
21	VREFH1	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
22	AOUTR1N	O	Rch Negative Analog Output 1 Pin	Hi-Z
23	AOUTR1P	O	Rch Positive Analog Output 1 Pin	Hi-Z
24	AOUTL2P	O	Lch Positive Analog Output 2 Pin	Hi-Z
25	AOUTL2N	O	Lch Negative Analog Output 2 Pin	Hi-Z
26	VREFL2	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
27	VREFH2	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
28	AOUTR2N	O	Rch Negative Analog Output 2 Pin	Hi-Z
29	AOUTR2P	O	Rch Positive Analog Output 2 Pin	Hi-Z
30	AVSS	-	Analog Ground Pin	—
31	AVDD	-	Analog Power Supply Pin, 3.0V-5.5V	—
32	AOUTL3P	O	Lch Positive Analog Output 3 Pin	Hi-Z
33	AOUTL3N	O	Lch Negative Analog Output 3 Pin	Hi-Z
34	VREFH3	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
35	VREFL3	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
36	AOUTR3N	O	Rch Negative Analog Output 3 Pin	Hi-Z
37	AOUTR3P	O	Rch Positive Analog Output 3Pin	Hi-Z
38	AOUTL4P	O	Lch Positive Analog Output 4 Pin	Hi-Z
39	AOUTL4N	O	Lch Negative Analog Output 4 Pin	Hi-Z
40	VREFH4	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
41	VREFL4	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
42	AOUTR4N	O	Rch Negative Analog Output 4 Pin	Hi-Z
43	AOUTR4P	O	Rch Positive Analog Output 4 Pin	Hi-Z
44	LDOE	I	Internal LDO Enable Pin. "L": Disable, "H": Enable	Hi-Z
45	TVDD	-	Digital Power Supply Pin, 3.0V-3.6V	—
46	DVSS	-	Digital Ground Pin	—
47	VDD18	O	LDO Output Pin (LDOE pin = "H") This pin should be connected to DVSS with 1.0μF.	(Note 4)
		I	1.8V Power Input Pin (LDOE pin = "L")	
48	PDN	I	Power-Down & Reset Pin When this pin is "L", the AK4458 is powered-down and the control registers are reset to default state.	Hi-Z

Note 2. All input pins except internal pull-up/down pins should not be left floating.
Note 3. PCM mode and DSD mode are controlled by registers. Daisy Chain mode is controlled by both registers and pins.
Note 4. This pin outputs DVSS when the LDOE pin = "H" and Hi-z when the LDOE pin = "L".

FUNCTIONAL BLOCK DIAGRAM

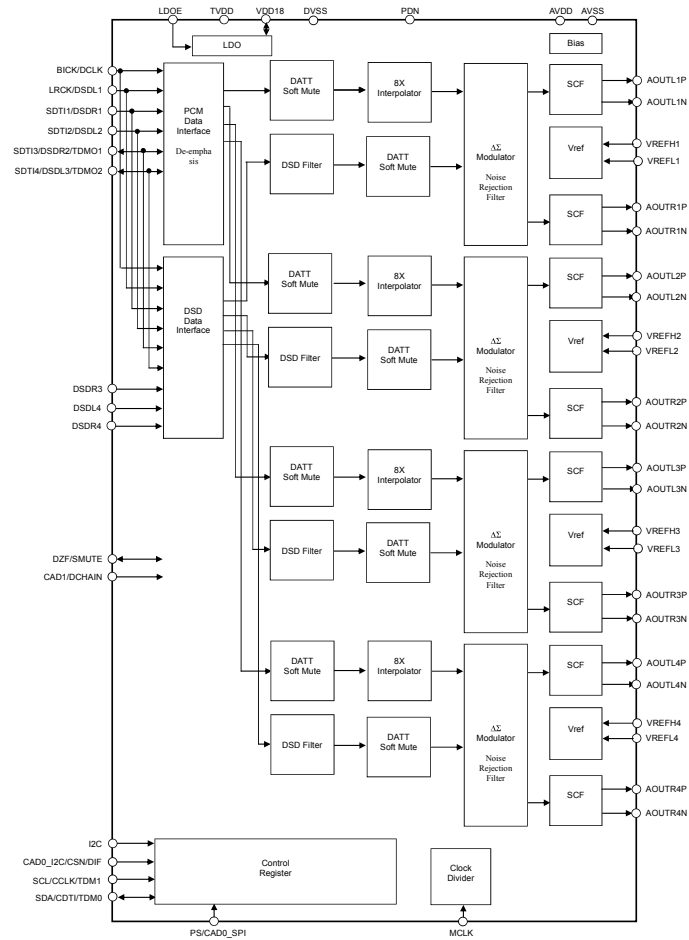

PCM5100A (DIGITAL : U1052, U1054)

PCM510X (top view)

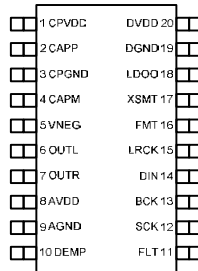


Table 2. TERMINAL FUNCTIONS, PCM510x

TERMINAL NAME	NO.	I/O	DESCRIPTION
CPVDD	1	-	Charge pump power supply, 3.3V
CAPP	2	O	Charge pump flying capacitor terminal for positive rail
CPGND	3	-	Charge pump ground
CAPM	4	O	Charge pump flying capacitor terminal for negative rail
VNEG	5	O	Negative charge pump rail terminal for decoupling, -3.3V
OUTL	6	O	Analog output from DAC left channel
OUTR	7	O	Analog output from DAC right channel
AVDD	8	-	Analog power supply, 3.3V
AGND	9	-	Analog ground
DEMP	10	I	De-emphasis control for 44.1kHz sampling rate ⁽¹⁾ ; Off (Low) / On (High)
FLT	11	I	Filter select : Normal latency (Low) / Low latency (High)
SCK	12	I	System clock input
BCK	13	I	Audio data bit clock input
DIN	14	I	Audio data input
LRCK	15	I	Audio data word clock input
FMT	16	I	Audio format selection : I ² S (Low) / Left justified (High)
XSMT	17	I	Soft mute control : Soft mute (Low) / soft un-mute (High)
LDOO	18	-	Internal logic supply rail terminal for decoupling
DGND	19	-	Digital ground
DVDD	20	-	Digital power supply, 3.3V

PCM5100 Block Diagram


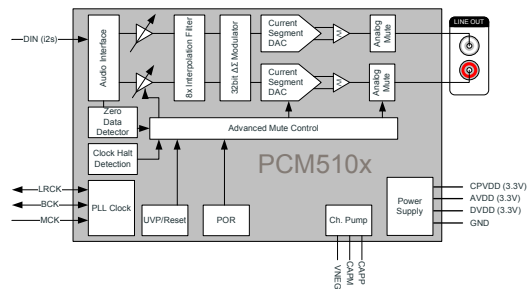


Figure 1. PCM510x Functional Block Diagram


NJU72343 (INPUT : IC4202, IC4203)

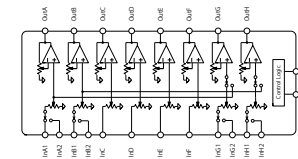

Pin Function

No.	Symbol	Function	No.	Symbol	Function
1	AREF	Analog reference potential terminal	17	DATA	IC control data input
2	ADR	Address selection terminal	18	CLOCK	IC control clock input
3	InA2	Ach input2	19	VDDOUT	Digital power supply output terminal
4	InB2	Bch input2	20	AREF	Analog reference potential terminal
5	InA1	Ach input1	21	OutH	Hch output
6	InB1	Bch input1	22	OutG	Gch output
7	InC	Cch input	23	OutF	Fch output
8	InD	Dch input	24	OutE	Ech output
9	InE	Ech input	25	OutD	Dch output
10	InF	Fch input	26	OutC	Cch output
11	InG1	Gch input1	27	OutB	Bch output
12	InH1	Hch input1	28	OutA	Ach output
13	InG2	Cch input2	29	AREF	Analog reference potential terminal
14	InH2	Dch input2	30	V-	negative power supply terminal
15	MUTE	External mute control terminal	31	AREF	Analog reference potential terminal
16	REF	Digital reference potential terminal	32	V+	positive power supply terminal


NJU72750A (INPUT : IC4200, IC4201, IC4205)

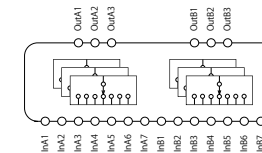


Pin Function

No.	Symbol	Function	No.	Symbol	Function
1	V+	positive power supply terminal	17	DATA	IC control data input
2	InA1	Ach input1	18	CLOCK	IC control clock input
3	InB1	Bch input1	19	NC	-
4	InA2	Ach input2	20	NC	-
5	InB2	Bch input2	21	OutB3	Bch output3
6	InA3	Ach input3	22	OutA3	Ach output3
7	InB3	Bch input3	23	REF_B	Bch reference potential terminal
8	InA4	Ach input4	24	OutB2	Bch output2
9	InB4	Bch input4	25	OutA2	Ach output2
10	InA5	Ach input5	26	REF_A	Ach reference potential terminal
11	InB5	Bch input5	27	OutB1	Bch output1
12	InA6	Ach input6	28	OutA1	Ach output1
13	InB6	Bch input6	29	NC	-
14	InA7	Ach input7	30	ADR0	Address selection pin 0
15	InB7	Bch input7	31	ADR1	Address selection pin 1
16	REF	Reference potential terminal for BIAS	32	V-	negative power supply terminal

NJM2595MTE1 (VIDEO:IC5001)

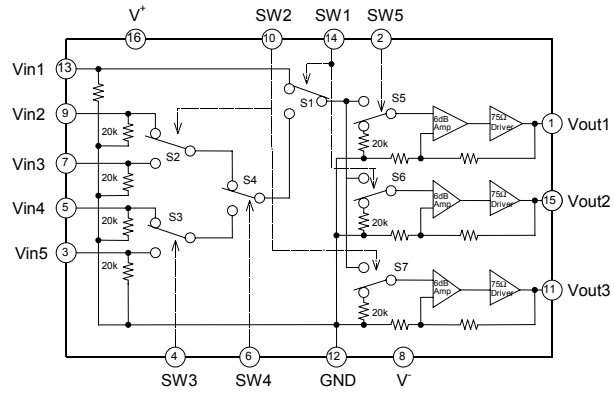



NJM2586AVC3 (VIDEO:IC5002)

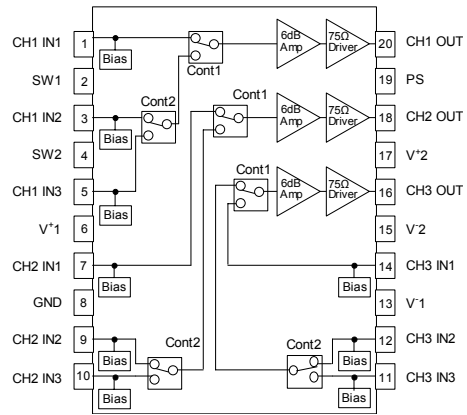


SSOP20-C3

2. FL DISPLAY

FLD (CIG25-1801N) (FRONT : FL4400)

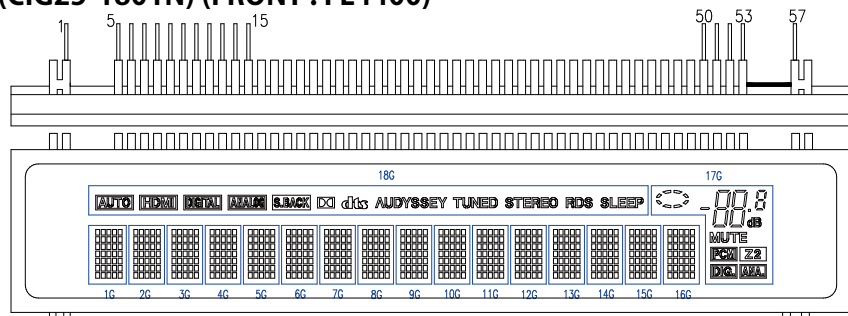

(1G~16G)

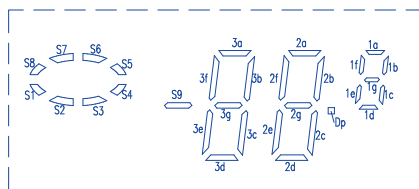

17G

PIN CONNECTION

CONNECTION	PIN NO.
F1	1
NP	2
NP	3
NP	4
NP	5
LGND	6
PGND	7
VH	8
VDD	9
OSC	10
RESET	11
CS	12
CP	13
DA	14
TSA	15
TSB	16
NX	17
18G	18
17G	19
Q17G	20
Q18G	21
NP	22
NP	23
NP	24
NP	25
NP	26
NP	27
NP	28
NP	29
NP	30
NP	31
NP	32
NP	33
NP	34
NP	35
F2	57

NOTE

- 1) F1, F2 ----Filament
- 2) NP -----No pin
- 3) NX -----No extend pin
- 4) LGND ----Logic GND pin
- 5) PGND ----Power GND pin
- 6) VH -----High Voltage Supply pin
- 7) VDD -----Logic Voltage Supply pin
- 8) CP ----Shift Register Clock
- 9) DA ----Serial Data Input
- 10) TSA, B --Test pin
- 11) OSC ----Pin for self-oscillation
- 12) 17G, 18G ---Grid
- 13) Q17G, Q18G ---Driver Output Port.

ANODE CONNECTION

	1G	2G	3G	4G	5G	6G	7G	8G	9G	10G	11G	12G	13G	14G	15G	16G	17G(AD3)	18G(AD4)
SEGA1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	S9	-
SEGA2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	3d	-
SEGA3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	2d	-
SEGA4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	3e	-
SEGA5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	2e	-
SEGA6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	3c	-
SEGA7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	2c	-
SEGA8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	3g	-
SEGA9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	2g	-
SEGA10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	3f	-
SEGA11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	2f	-
SEGA12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	3b	-
SEGA13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	2b	-
SEGA14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	3a	-
SEGA15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	2a	-
SEGA16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	Dp	-
SEGA17	17	17	17	17	17	17	17	17	17	17	17	17	17	17	17	17	dB	-
SEGA18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	1d	-
SEGA19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	1e	-
SEGA20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	1c	-
SEGA21	21	21	21	21	21	21	21	21	21	21	21	21	21	21	21	21	1g	-
SEGA22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	1f	-
SEGA23	23	23	23	23	23	23	23	23	23	23	23	23	23	23	23	23	1b	-
SEGA24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	1a	AUTO
SEGA25	25	25	25	25	25	25	25	25	25	25	25	25	25	25	25	25	S1	HDMI
SEGA26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	S2	DIGITAL
SEGA27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	S3	ANALOG
SEGA28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	S4	S.BACK
SEGA29	29	29	29	29	29	29	29	29	29	29	29	29	29	29	29	29	S5	□
SEGA30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	S6	dts
SEGA31	31	31	31	31	31	31	31	31	31	31	31	31	31	31	31	31	S7	AUDYSSEY
SEGA32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	S8	TUNED
SEGA33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	33	MUTE	STEREO
SEGA34	34	34	34	34	34	34	34	34	34	34	34	34	34	34	34	34	PCM	RDS
SEGA35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	FZ	SLEEP
AD1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	DIG.	-
AD2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	ANA.	-

3. Remote Code Table

FORMAT SHARP

FORMAT: SHARP /DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1
SYSTEM ADDRESS (C1 ~ C5): 0 1 0 0 0, EXTENSION BIT (C12,C13): 1 1

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPO230000	0 0 0 0 0		RCSHPO230016	0 0 0 0 1	FR LEVEL DOWN
RCSHPO230001	1 0 0 0 0	POWER	RCSHPO230017	1 0 0 0 1	
RCSHPO230002	0 1 0 0 0	FL LEVEL UP	RCSHPO230018	0 1 0 0 1	
RCSHPO230003	1 1 0 0 0	PHONO	RCSHPO230019	1 1 0 0 1	
RCSHPO230004	0 0 1 0 0	CD	RCSHPO230020	0 0 1 0 0	
RCSHPO230005	1 0 1 0 0	TUNER	RCSHPO230021	1 0 1 0 0	
RCSHPO230006	0 1 1 0 0		RCSHPO230022	0 1 1 0 0	SR LEVEL UP
RCSHPO230007	1 1 1 0 0	FL LEVEL DOWN	RCSHPO230023	1 1 1 0 0	SR LEVEL DOWN
RCSHPO230008	0 0 1 0 0	CBL/SAT	RCSHPO230024	0 0 1 0 0	VIDEO SELECT
RCSHPO230009	1 0 0 1 0	TV/AUDIO	RCSHPO230025	1 0 0 1 0	
RCSHPO230010	0 1 0 1 0	Blu-ray	RCSHPO230026	0 1 0 1 0	
RCSHPO230011	1 1 0 1 0	FR LEVEL UP	RCSHPO230027	1 1 0 1 0	
RCSHPO230012	0 0 1 1 0	AUX1	RCSHPO230028	0 0 1 1 0	INPUT MODE ANALOG
RCSHPO230013	1 0 1 1 0	GAME	RCSHPO230029	1 0 1 1 0	CURSOR RIGHT
RCSHPO230014	0 1 1 1 0	MEDIA PLAYER	RCSHPO230030	0 1 1 1 0	STATUS
RCSHPO230015	1 1 1 1 0		RCSHPO230031	1 1 1 1 0	INFO

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPO230032	0 0 0 0 1	ENTER	RCSHPO230048	0 0 0 1 1	MUTING
RCSHPO230033	1 0 0 0 1	POWER ON	RCSHPO230049	1 0 0 1 1	MASTER VOLUME UP
RCSHPO230034	0 1 0 0 1	POWER OFF	RCSHPO230050	0 1 0 1 1	MASTER VOLUME DOWN
RCSHPO230035	1 1 0 0 1	DVD	RCSHPO230051	1 1 0 1 1	SL LEVEL UP
RCSHPO230036	0 0 1 0 1	STANDARD (DOLBY/DTS SURR.)	RCSHPO230052	0 0 1 0 1	SL LEVEL DOWN
RCSHPO230037	1 0 1 0 1	SW LEVEL DOWN	RCSHPO230053	1 0 1 0 1	CENTER LEVEL UP
RCSHPO230038	0 1 1 0 1	DSP SIMULATION	RCSHPO230054	0 1 1 0 1	CENTER LEVEL DOWN
RCSHPO230039	1 1 1 0 1	SB/SBL LEVEL UP	RCSHPO230055	1 1 1 0 1	SBR LEVEL UP
RCSHPO230040	0 0 1 0 1		RCSHPO230056	0 0 1 1 1	SBR LEVEL DOWN
RCSHPO230041	1 0 1 0 1		RCSHPO230057	1 0 1 1 1	TOPE CONTROL OFF
RCSHPO230042	0 1 1 0 1		RCSHPO230058	0 1 1 1 1	TOPE CONTROL ON
RCSHPO230043	1 1 1 0 1	SB/SBL LEVEL DOWN	RCSHPO230059	1 1 0 1 1	
RCSHPO230044	0 0 1 1 1	SW LEVEL UP	RCSHPO230060	0 0 1 1 1	
RCSHPO230045	1 0 1 1 1	FRONT SPEAKER	RCSHPO230061	1 0 1 1 1	
RCSHPO230046	0 1 1 1 1	SP-A_FRONT	RCSHPO230062	0 1 1 1 1	
RCSHPO230047	1 1 1 1 1	SP-B_FRONT	RCSHPO230063	1 1 1 1 1	

FORMAT: SHARP /DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1
SYSTEM ADDRESS (C1 ~ C5): 0 0 1 1 0, EXTENSION BIT (C12,C13): 0 1

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPOC20000	0 0 0 0 0	ALL BASS DOWN	RCSHPOC20016	0 0 0 0 1	ZONE2 CD
RCSHPOC20001	1 0 0 0 0		RCSHPOC20017	1 0 0 0 1	ZONE2 TUNER
RCSHPOC20002	0 1 0 0 0	SURROUND BACK	RCSHPOC20018	0 1 0 0 0	ZONE2 Blu-ray
RCSHPOC20003	1 1 0 0 0	MASTERVOL_PRESET1 (0dB)	RCSHPOC20019	1 1 0 0 0	ZONE2 AUX
RCSHPOC20004	0 0 1 0 0		RCSHPOC20020	0 0 1 0 0	ZONE2 GAME
RCSHPOC20005	1 0 1 0 0	MASTERVOL_PRESET2 (20dB)	RCSHPOC20021	1 0 1 0 0	
RCSHPOC20006	0 1 1 0 0	MASTERVOL_PRESET3 (40dB)	RCSHPOC20022	0 1 1 0 0	ZONE2 PRESET UP
RCSHPOC20007	1 1 1 0 0	ZONE2 VOL_PRESET1 (0dB)	RCSHPOC20023	1 1 1 0 0	ZONE2 PRESET DOWN
RCSHPOC20008	0 0 1 0 0	ZONE2 VOL_PRESET2 (20dB)	RCSHPOC20024	0 0 1 0 0	
RCSHPOC20009	1 0 0 1 0	ZONE2 VOL_PRESET3 (40dB)	RCSHPOC20025	1 0 0 1 0	ZONE2 MEDIA PLAYER
RCSHPOC20010	0 1 0 1 0	ZONE2 CBL/SAT	RCSHPOC20026	0 1 0 1 0	
RCSHPOC20011	1 1 0 1 0		RCSHPOC20027	1 1 0 1 0	ZONE2 TV AUDIO
RCSHPOC20012	0 0 1 1 0	ZONE3 VOL_PRESET1 (0dB)	RCSHPOC20028	0 0 1 1 0	
RCSHPOC20013	1 0 1 1 0	ZONE2 VOLUME UP	RCSHPOC20029	1 0 1 1 0	STEREO
RCSHPOC20014	0 1 1 1 0	ZONE2 VOLUME DOWN	RCSHPOC20030	0 1 1 1 0	DIRECT
RCSHPOC20015	1 1 1 1 0	ZONE2 PHONO	RCSHPOC20031	1 1 1 1 0	ZONE3 VOL_PRESET2 (0dB)

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPOC20032	0 0 0 0 0	SETUP MENU	RCSHPOC20048	0 0 0 0 1	
RCSHPOC20033	1 0 0 0 1		RCSHPOC20049	1 0 0 0 1	
RCSHPOC20034	0 1 0 0 1	ZONE3 VOL_PRESET2 (0dB)	RCSHPOC20050	0 1 0 0 1	
RCSHPOC20035	1 1 0 0 1	CURSOR UP	RCSHPOC20051	1 1 0 0 1	
RCSHPOC20036	0 0 1 0 1	CURSOR DOWN	RCSHPOC20052	0 0 1 0 1	
RCSHPOC20037	1 0 1 0 1		RCSHPOC20053	1 0 1 0 1	
RCSHPOC20038	0 1 1 0 1		RCSHPOC20054	0 1 1 0 1	INPUT MODE
RCSHPOC20039	1 1 1 0 1		RCSHPOC20055	1 1 1 0 1	ALL TREBLE UP
RCSHPOC20040	0 0 0 1 0	MULTI CH STEREO	RCSHPOC20056	0 0 0 1 0	ALL TREBLE DOWN
RCSHPOC20041	1 0 0 1 0		RCSHPOC20057	1 0 0 1 0	
RCSHPOC20042	0 1 0 1 0		RCSHPOC20058	0 1 0 1 0	
RCSHPOC20043	1 1 0 1 0		RCSHPOC20059	1 1 0 1 0	
RCSHPOC20044	0 0 1 1 0		RCSHPOC20060	0 0 1 1 0	
RCSHPOC20045	1 0 1 1 0		RCSHPOC20061	1 0 1 1 0	
RCSHPOC20046	0 1 1 1 0		RCSHPOC20062	0 1 1 1 0	ZONE2 DVD
RCSHPOC20047	1 1 1 1 0	CH LEVEL	RCSHPOC20063	1 1 1 1 0	ALL BASS UP

FORMAT: SHARP /DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1
SYSTEM ADDRESS (C1 ~ C5): 0 0 1 1 0, EXTENSION BIT (C12,C13): 1 0

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPOC10032	0 0 0 0 1		RCSHPOC10048	0 0 0 0 1	
RCSHPOC10033	1 0 0 0 1		RCSHPOC10049	1 0 0 0 1	
RCSHPOC10034	0 1 0 0 1		RCSHPOC10050	0 1 0 0 1	
RCSHPOC10035	1 1 0 0 1		RCSHPOC10051	1 1 0 0 1	
RCSHPOC10036	0 0 1 0 1		RCSHPOC10052	0 0 1 0 1	
RCSHPOC10037	1 0 1 0 1		RCSHPOC10053	1 0 1 0 1	
RCSHPOC10038	0 1 1 0 1		RCSHPOC10054	0 1 1 0 1	
RCSHPOC10039	1 1 1 0 1		RCSHPOC10055	1 1 1 0 1	
RCSHPOC10040	0 0 0 1 0		RCSHPOC10056	0 0 0 1 0	
RCSHPOC10041	1 0 0 1 0		RCSHPOC10057	1 0 0 1 0	
RCSHPOC10042	0 1 0 1 0		RCSHPOC10058	0 1 0 1 0	
RCSHPOC10043	1 1 0 1 0		RCSHPOC10059	1 1 0 1 0	
RCSHPOC10044	0 0 1 1 0		RCSHPOC10060	0 0 1 1 0	
RCSHPOC10045	1 0 1 1 0		RCSHPOC10061	1 0 1 1 0	
RCSHPOC10046	0 1 1 1 0		RCSHPOC10062	0 1 1 1 0	
RCSHPOC10047	1 1 1 1 0		RCSHPOC10063	1 1 1 1 0	CURSOR LEFT

FORMAT: SHARP /DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1
SYSTEM ADDRESS (C1 ~ C5): 0 0 1 1 0, EXTENSION BIT (C12,C13): 1 1

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPOC30000	0 0 0 0 0		RCSHPOC30016	0 0 0 1 0	
RCSHPOC30001	1 0 0 0 0	1	RCSHPOC30017	1 0 0 1 0	
RCSHPOC30002	0 1 0 0 0	2	RCSHPOC30018	0 1 0 1 0	DIRECT SEARCH (RDS SEARCH ※ EU only)
RCSHPOC30003	1 1 0 0 0	3	RCSHPOC30019	1 1 0 1 0	
RCSHPOC30004	0 0 1 0 0	4	RCSHPOC30020	0 0 1 0 0	PTY ※ EU only
RCSHPOC30005	1 0 1 0 0	5	RCSHPOC30021	1 0 1 0 0	TUNER PRESET DOWN
RCSHPOC30006	0 1 1 0 0	6	RCSHPOC30022	0 1 1 0 0	TUNER PRESET UP
RCSHPOC30007	1 1 1 0 0	7	RCSHPOC30023	1 1 1 0 0	TUNER BAND
RCSHPOC30008	0 0 1 0 0	8	RCSHPOC30024	0 0 1 1 0	TUNER TUNING MODE
RCSHPOC30009	1 0 0 1 0	9	RCSHPOC30025	1 0 0 1 0	TUNER TUNING UP
RCSHPOC30010	0 1 0 1 0	0	RCSHPOC30026	0 1 0 1 0	TUNER TUNING DOWN
RCSHPOC30011	1 0 1 0 0		RCSHPOC30027	1 0 1 0 0	
RCSHPOC30012	0 0 1 1 0	TUNER MEMORY	RCSHPOC30028	0 0 1 1 0	
RCSHPOC30013	1 0 1 1 0		RCSHPOC30029	1 0 1 1 0	
RCSHPOC30014	0 1 1 1 0	RT ※ EU only	RCSHPOC30030	0 1 1 1 0	
RCSHPOC30015	1 1 1 1 0		RCSHPOC30031	1 1 1 1 0	DIMMER

FORMAT: SHARP /DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1
SYSTEM ADDRESS (C1 ~ C5): 0 1 0 0 0, EXTENSION BIT (C12,C13): 1 0

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPO210000	0 0 0 0 0		RCSHPO210016	0 0 0 0 1	
RCSHPO210001	1 0 0 0 0		RCSHPO210017	1 0 0 0 0	
RCSHPO210002	0 1 0 0 0		RCSHPO210018	0 1 0 0 0	ZONE3 TV AUDIO
RCSHPO210003	1 1 0 0 0		RCSHPO210019	1 1 0 0 0	ZONE3 CBL/SAT
RCSHPO210004	0 0 1 0 0		RCSHPO210020	0 0 1 0 0	ZONE3 GAME
RCSHPO210005	1 0 1 0 0		RCSHPO210021	1 0 1 0 0	ZONE3 MEDIAPLAYER
RCSHPO210006	0 1 1 0 0		RCSHPO210022	0 1 1 0 0	
RCSHPO210007	1 1 1 0 0		RCSHPO210023	1 1 1 0 0	ZONE3 AUX
RCSHPO210008	0 0 1 0 0	ZONE3 TUNER	RCSHPO210024	0 0 1 1 0	
RCSHPO210009	1 0 0 1 0	ZONE3 PHONO	RCSHPO210025	0 0 1 1 0	
RCSHPO210010	0 1 0 1 0	ZONE3 CD	RCSHPO210026	0 1 0 1 0	
RCSHPO210011	1 1 0 1 0		RCSHPO210027	1 1 0 1 0	
RCSHPO210012	0 0 1 1 0		RCSHPO210028	0 0 1 1 0	
RCSHPO210013	1 0 1 1 0		RCSHPO210029	1 0 1 1 0	ZONE2 ON/OFF
RCSHPO210014	0 1 1 1 0	ZONE3 DVD	RCSHPO210030	0 1 1 1 0	
RCSHPO210015	1 1 1 1 0	ZONE3 Blu-ray	RCSHPO210031	1 1 1 1 0	

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHPO210032	0 0 0 0 1		RCSHPO210048	0 0 0 0 1	
RCSHPO210033	1 0 0 0 1		RCSHPO210049	1 0 0 0 1	
RCSHPO210034	0 1 0 0 1		RCSHPO210050	0 1 0 0 1	
RCSHPO210035	1 1 0 0 1		RCSHPO210051	1 1 0 0 1	
RCSHPO210036	0 0 1 0 1		RCSHPO210052	0 0 1 0 1	
RCSHPO210037	1 0 1 0 1		RCSHPO210053	1 0 1 0 1	
RCSHPO210038	0 1 1 0 1	ZONE3 VOLUME DOWN	RCSHPO210054	0 1 1 0 1	
RCSHPO210039	1 1 1 0 1	ZONE3 VOLUME UP	RCSHPO210055	1 1 1 0 1	
RCSHPO210040	0 0 0 1 0		RCSHPO210056	0 0 0 1 0	
RCSHPO210041	1 0 0 1 0		RCSHPO210057	1 0 0 1 0	MAIN ZONE ON
RCSHPO210042	0 1 0 1 0	PURE DIRECT	RCSHPO210058	0 1 0 1 0	MAIN ZONE OFF
RCSHPO210043	1 1 0 1 0		RCSHPO210059	1 1 0 1 0	ZONE2 ON
RCSHPO210044	0 0 1 1 0		RCSHPO210060	0 0 1 1 0	ZONE2 OFF
RCSHPO210045	1 0 1 1 0		RCSHPO210061	1 0 1 1 0	ZONE3 ON
RCSHPO210046	0 1 1 1 0		RCSHPO210062	0 1 1 1 0	ZONE3 OFF
RCSHPO210047	1 1 1 1 0		RCSHPO210063	1 1 1 1 0	

FORMAT: SHARP /DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1
SYSTEM ADDRESS (C1 ~ C5): 0 0 1 0 0 , EXTENSION BIT (C12,C13): 0 1

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHP0420000	0 0 0 0 0		RCSHP0420016	0 0 0 0 1 0	DOLBY PL II MUSIC
RCSHP0420001	1 0 0 0 0		RCSHP0420017	1 0 0 0 1 0	DOLBY PL
RCSHP0420002	0 1 0 0 0		RCSHP0420018	0 1 0 0 1 0	
RCSHP0420003	1 1 0 0 0	ROCK ARENA	RCSHP0420019	1 1 0 0 1 0	
RCSHP0420004	0 0 1 0 0	JAZZ CLUB	RCSHP0420020	0 0 1 0 1 0	
RCSHP0420005	1 0 1 0 0		RCSHP0420021	1 0 1 0 1 0	
RCSHP0420006	0 1 1 0 0	MONO MOVIE	RCSHP0420022	0 1 1 0 1 0	
RCSHP0420007	1 1 1 0 0	MATRIX	RCSHP0420023	1 1 1 0 1 0	
RCSHP0420008	0 0 0 1 0	VIDEO GAME	RCSHP0420024	0 0 0 1 1 0	
RCSHP0420009	1 0 0 1 0	VIRTUAL	RCSHP0420025	1 0 0 1 1 0	
RCSHP0420010	0 1 0 1 0		RCSHP0420026	0 1 0 1 1 0	
RCSHP0420011	1 1 0 1 0		RCSHP0420027	1 1 0 1 1 0	
RCSHP0420012	0 0 1 1 0		RCSHP0420028	0 0 1 1 1 0	
RCSHP0420013	1 0 1 1 0		RCSHP0420029	1 0 1 1 1 0	MultEQ XT32
RCSHP0420014	0 1 1 1 0		RCSHP0420030	0 1 1 1 1 0	
RCSHP0420015	1 1 1 1 0	DOLBY PL II CINEMA	RCSHP0420031	1 1 1 1 1 0	

No.	Data (C6 ~ C11)	Key Name	No.	Data (C6 ~ C11)	Key Name
RCSHP0420032	0 0 0 0 1		RCSHP0420048	0 0 0 0 1 1	
RCSHP0420033	1 0 0 0 1		RCSHP0420049	1 0 0 0 1 1	
RCSHP0420034	0 1 0 0 1		RCSHP0420050	0 1 0 0 1 1	
RCSHP0420035	1 1 0 0 1		RCSHP0420051	1 1 0 0 1 1	
RCSHP0420036	0 0 1 0 1		RCSHP0420052	0 0 1 0 1 1	INPUT MDOE AUTO
RCSHP0420037	1 0 1 0 1		RCSHP0420053	1 0 1 0 1 1	
RCSHP0420038	0 1 1 0 1		RCSHP0420054	0 1 1 0 1 1	
RCSHP0420039	1 1 1 0 1		RCSHP0420055	1 1 1 0 1 1	
RCSHP0420040	0 0 0 1 0		RCSHP0420056	0 0 0 1 1 1	
RCSHP0420041	1 0 0 1 0		RCSHP0420057	1 0 0 1 1 1	
RCSHP0420042	0 1 0 1 0		RCSHP0420058	0 1 0 1 1 1	
RCSHP0420043	1 1 0 1 0		RCSHP0420059	1 1 0 1 1 1	
RCSHP0420044	0 0 1 1 0		RCSHP0420060	0 0 1 1 1 1	
RCSHP0420045	1 0 1 1 0		RCSHP0420061	1 0 1 1 1 1	
RCSHP0420046	0 1 1 1 0		RCSHP0420062	0 1 1 1 1 1	
RCSHP0420047	1 1 1 1 0		RCSHP0420063	1 1 1 1 1 1	

FORMAT KASEIKYO

DATA CONSTRUCTION 48bits

DENON CODE																Parity				GENRE1 (*1)			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	*	*	*	*
GENRE2 (*2)																Parity (*5)							
Data								ID (*3)															
25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*

(*5) Parity :

Delimit of each to 8 bits, and add the 3rd byte and the 4th byte and the 5th byte with modulo 2 (exclusive-OR).

3rd byte (17 - 24 bit)

4th byte (25 - 32 bit)

5th byte (33 - 40 bit)

REMOTE ID SETTING: (default ID 1)

ID No.	ZONE/DEVICE	GENRE1 (*1)				GENRE2 (*2)				ID (*3)		
		21	22	23	24	25	26	27	28	39	40	
1	MAIN ZONE	0	0	1	0	1	0	0	0	0	0	SHARP&K4-1
	ZONE2	0	0	1	0	1	1	0	0	0	0	SHARP&K4-3
	TUNER	0	0	1	0	1	0	0	0	0	0	SHARP&K4-1
	HEOS MUSIC	0	0	1	0	1	1	1	0	0	0	K4-7
2	MAIN ZONE	0	0	1	0	0	1	0	0	1	0	K4-2
	ZONE2	0	0	1	0	0	0	1	0	1	0	K4-4
	TUNER	0	0	1	0	0	1	0	0	1	0	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	1	0	K4-8
3	MAIN ZONE	0	0	1	0	0	1	0	0	0	1	K4-2
	ZONE2	0	0	1	0	0	0	1	0	0	1	K4-4
	TUNER	0	0	1	0	0	1	0	0	0	1	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	0	1	K4-8
4	MAIN ZONE	0	0	1	0	0	1	0	0	1	1	K4-2
	ZONE2	0	0	1	0	0	0	1	0	1	1	K4-4
	TUNER	0	0	1	0	0	1	0	0	1	1	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	1	1	K4-8

RCKSK0430978	0	1	0	0	1	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 BAND AM
RCKSK0430979	1	1	0	0	1	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 Fast Forward
RCKSK0430983	1	1	1	0	1	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 SEARCH (RDS)
RCKSK0430982	0	0	0	0	0	1	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 PLAY/PAUSE
RCKSK0430983	1	0	0	0	0	1	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 STOP
RCKSK0430984	0	1	0	0	0	1	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 PAUSE
RCKSK0430985	1	1	0	0	0	1	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 SKIP MINUS/TUNING DOWN
RCKSK0430986	0	0	1	0	0	1	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 SKIP PLUS/TUNING UP
RCKSK0430987	1	0	1	0	0	1	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNING DOWN
RCKSK0430988	0	1	1	0	0	1	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNING UP

ANALOG TUNER

REMOTE ID SET: 1

DENON CODE												Parity				GENRE1				GENRE2							
4				5				2				3				0				4				1			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	1	0	0	0

REMOTE ID SET: 2-4

DENON CODE												Parity				GENRE1				GENRE2							
4				5				2				3				0				4				2			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	1	0	0

No.	Data																ID		parity								Key Name		
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48									
RCKSK0410144	0	0	0	0	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	TUNING UP
RCKSK0410145	1	0	0	0	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	TUNING DOWN
RCKSK0410146	0	1	0	0	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET CH UP
RCKSK0410147	1	1	0	0	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET CH DOWN
RCKSK0410152	0	0	0	1	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	BAND FM/AM
RCKSK0410153	1	0	0	1	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	BAND FM
RCKSK0410154	0	1	0	1	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	BAND AM
RCKSK0410156	0	0	1	1	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	MODE AUTO/MANUAL
RCKSK0410160	0	0	0	0	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	MEMORY
RCKSK0410163	1	1	0	0	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	RDS (EU only)/SEARCH
RCKSK0410166	0	1	1	0	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	RT (EU only)
RCKSK0410169	1	0	0	1	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PTY (EU only)
RCKSK0410170	0	1	0	1	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR UP
RCKSK0410171	1	1	0	1	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR DOWN
RCKSK0410173	1	0	1	1	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR LEFT
RCKSK0410174	0	1	1	1	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR RIGHT
RCKSK0410175	1	1	1	1	0	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR ENTER
RCKSK0410176	0	0	0	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 1 / Numeric 1
RCKSK0410177	1	0	0	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 2 / Numeric 2
RCKSK0410178	0	1	0	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 3 / Numeric 3
RCKSK0410179	1	1	0	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 4 / Numeric 4
RCKSK0410180	0	0	1	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 5 / Numeric 5
RCKSK0410181	1	0	1	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 6 / Numeric 6
RCKSK0410182	0	1	1	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 7 / Numeric 7
RCKSK0410183	1	1	1	0	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PRESET 8 / Numeric 8
RCKSK0410184	0	0	0	1	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	Numeric 9
RCKSK0410185	1	0	0	1	1	1	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	Numeric 0
RCKSK0410241	1	0	0	0	1	1	1	1	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	RETURN

HEOS MUSIC

REMOTE ID SET: 1

DENON CODE												Parity				GENRE1				GENRE2							
4				5				2				3				0				4				7			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	1	1	1	0

REMOTE ID SET: 2-4

DENON CODE												Parity				GENRE1				GENRE2							
4				5				2				3				0				4				8			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	0	0	0

No.	Data																ID		parity								Key Name		
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48									
RCKSK0470027	1	1	0	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR UP
RCKSK0470028	0	0	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR DOWN
RCKSK0470029	1	0	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR L
RCKSK0470030	0	1	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR RIGHT
RCKSK0470031	1	1	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ENTER
RCKSK0470034	0	1	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	RETURN
RCKSK0470773	1	0	1	0	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PLAY
RCKSK0470774	0	1	1	0	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	PAUSE
RCKSK0470775	1	1	1	0	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	STOP
RCKSK0470776	0	0	0	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	SKIP PLUS
RCKSK0470777	1	0	0	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	SKIP MINUS
RCKSK0470778	0	1	0	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	REPEAT ONE
RCKSK0470779	1	1	0	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	REPEAT OFF
RCKSK0470780	0	0	1	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	RANDOM ON
RCKSK0470781	1	0	1	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	RANDOM OFF
RCKSK0470785	1	0	0	0	1	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	REPEAT ALL

DISASSEMBLY

Flowchart

1. FRONT ASSY
2. RADIATOR ASSY
3. TUNER PCB
4. REAR PANEL
5. DIGITAL PCB
6. VIDEO PCB
7. INPUT PCB
8. MAIN PCB
9. SMPS PCB
10. TRANS

EXPLODED VIEW


PACKAGING VIEW

Explanatory Photos for DISASSEMBLY

- For the shooting direction of each photos used in this manual, see the photo below.
- **A, B, C and D** in the photo below indicate the shooting directions of photos.
- The photographs with no shooting direction indicated were taken from the top of the unit.
- Photos of AVR-X3600H E3 are used in this manual.

The viewpoint of each photograph

(Shooting direction : X) [View from the top]

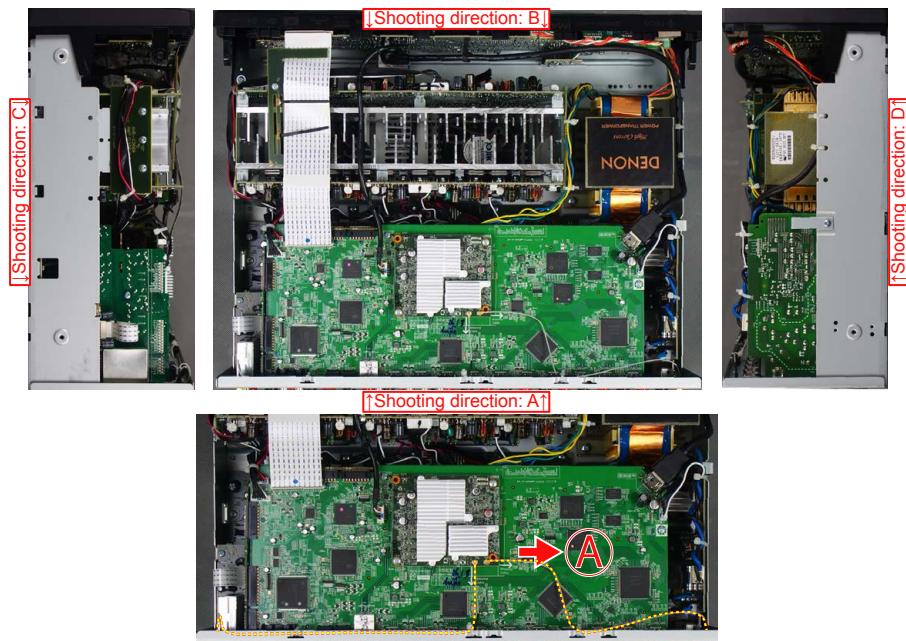


Attention :
When reinserting the Antenna Cable after it has been disconnected, make sure it is facing the direction shown in Ⓐ above.


1. FRONT ASSY

Proceeding : **TOP COVER** → **FRONT ASSY**

(1) Remove the screws.

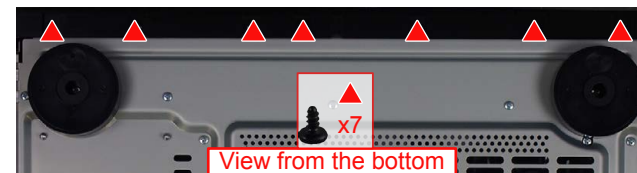


(2) Cut the wire clamps, then remove the CORD HOLDERS and connectors. Remove the FFC.

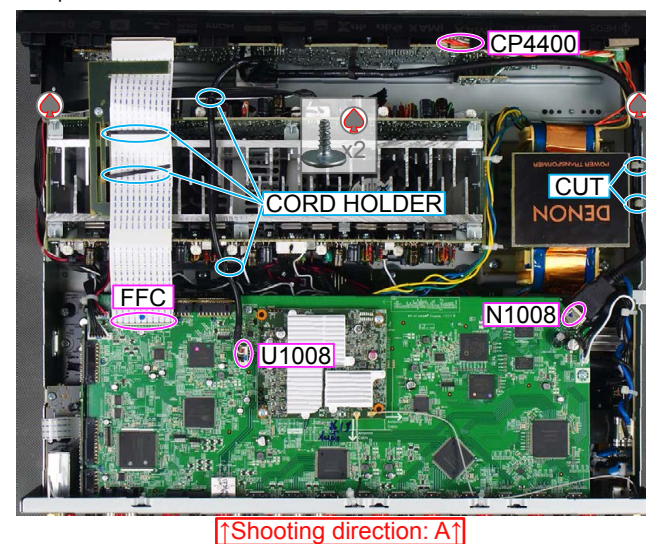




2. RADIATOR ASSY

Proceeding : **TOP COVER** → **FRONT ASSY** → **RADIATOR ASSY**


(1) Remove the screws.

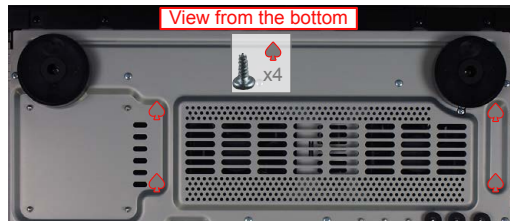

(2) Cut the wire clamp, then remove the connector.

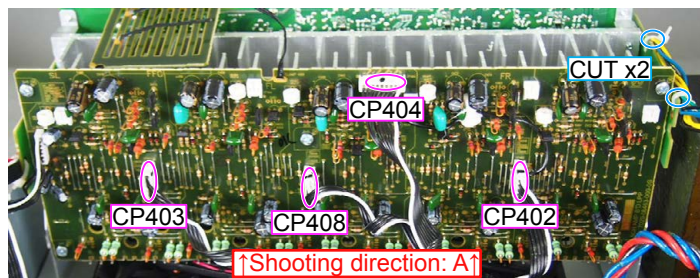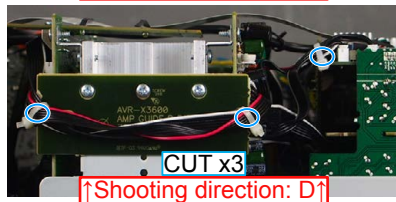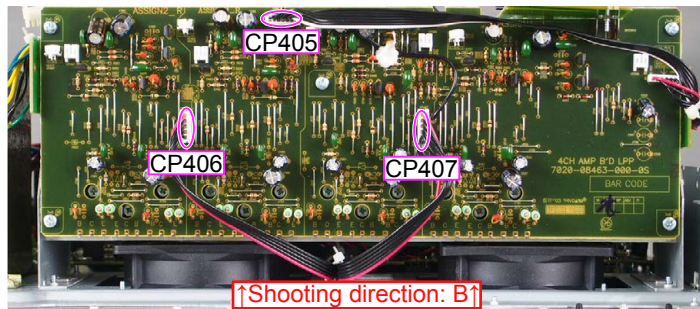

(3) Remove the connector.

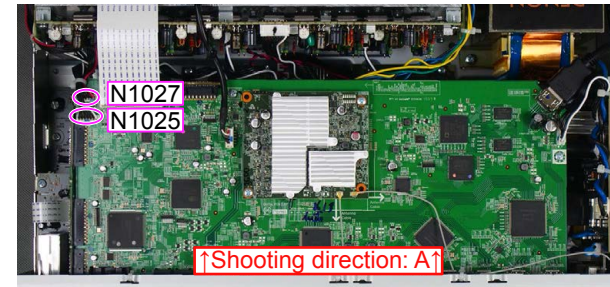

3. TUNER PCB

Proceeding : **TOP COVER** → **TUNER PCB**

See "EXPLODED VIEW" for instructions on removing the TUNER PCB.

4. REAR PANEL

Proceeding : **TOP COVER** → **TUNER PCB** → **REAR PANEL**


(1) Remove the screws.




5. DIGITAL PCB

Proceeding : TOP COVER → TUNER PCB → REAR PANEL → DIGITAL PCB

- (1) Cut the wire clamp, then remove the connector.
Remove the FFC.

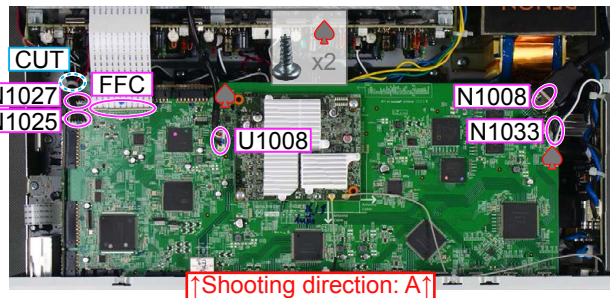


- (2) Remove the connector.

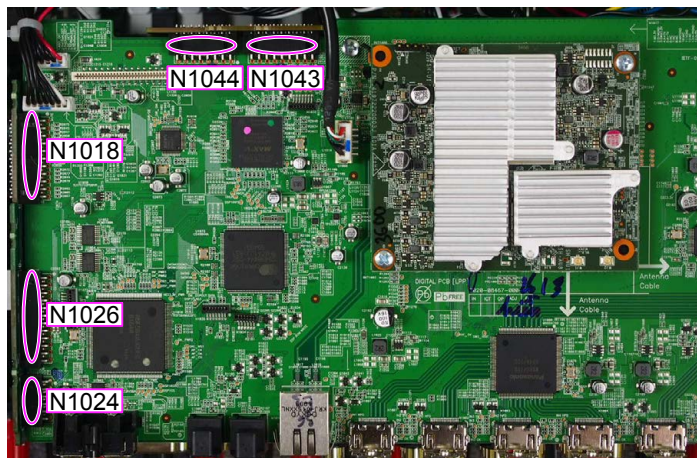

6. VIDEO PCB

Proceeding : TOP COVER → TUNER PCB → REAR PANEL → DIGITAL PCB
→ VIDEO PCB


- (1) Remove the screws. Remove the connector.

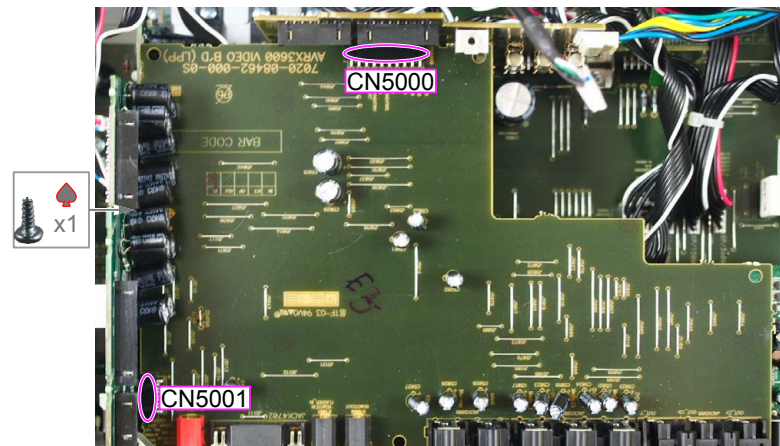


7. INPUT PCB

Proceeding : TOP COVER → TUNER PCB → REAR PANEL → DIGITAL PCB
→ VIDEO PCB → INPUT PCB

- (1) Remove the connector.

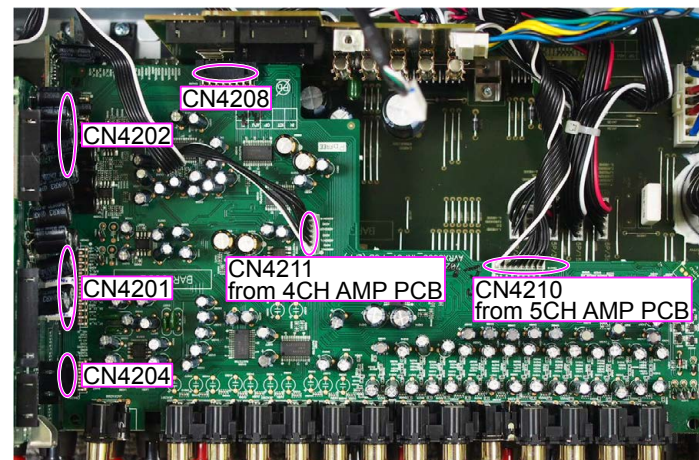


8. MAIN PCB



(1) Remove the screws.



(2) Remove the screws. Remove the CORD HOLDER and connectors.

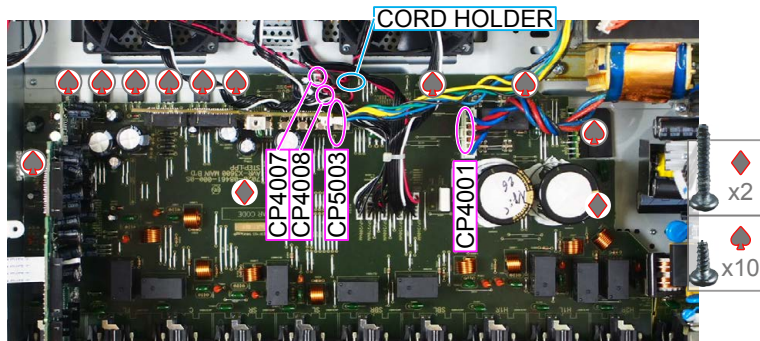

9. SMPS PCB



See "EXPLODED VIEW" for instructions on removing the SMPS.

10. TRANS



See "EXPLODED VIEW" for instructions on removing the transformer (TRANS).

EXPLODED VIEW

Parts List : <http://dmedia.soundunited.com/documents/details/25940>

Precautions when affixing the BADGE


- (1) The BADGE is incredibly fragile, so using the same force as you would when applying a label is likely to cause deformation. Once deformed it is very difficult to return it to its original shape, so take care when handling it.
- (2) Make sure the BADGE is not flat before affixing it.
- (3) Use tweezers to remove the backing paper from the double-sided tape and be careful not to touch the adhesive surface with your fingers.




- (4) Place the badge in the badge-shaped recess of the panel.
Caution : Do not touch the adhesive surface with your fingers!



- (5) To affix, press each circled area indicated below with your thumb for at least 2 seconds.

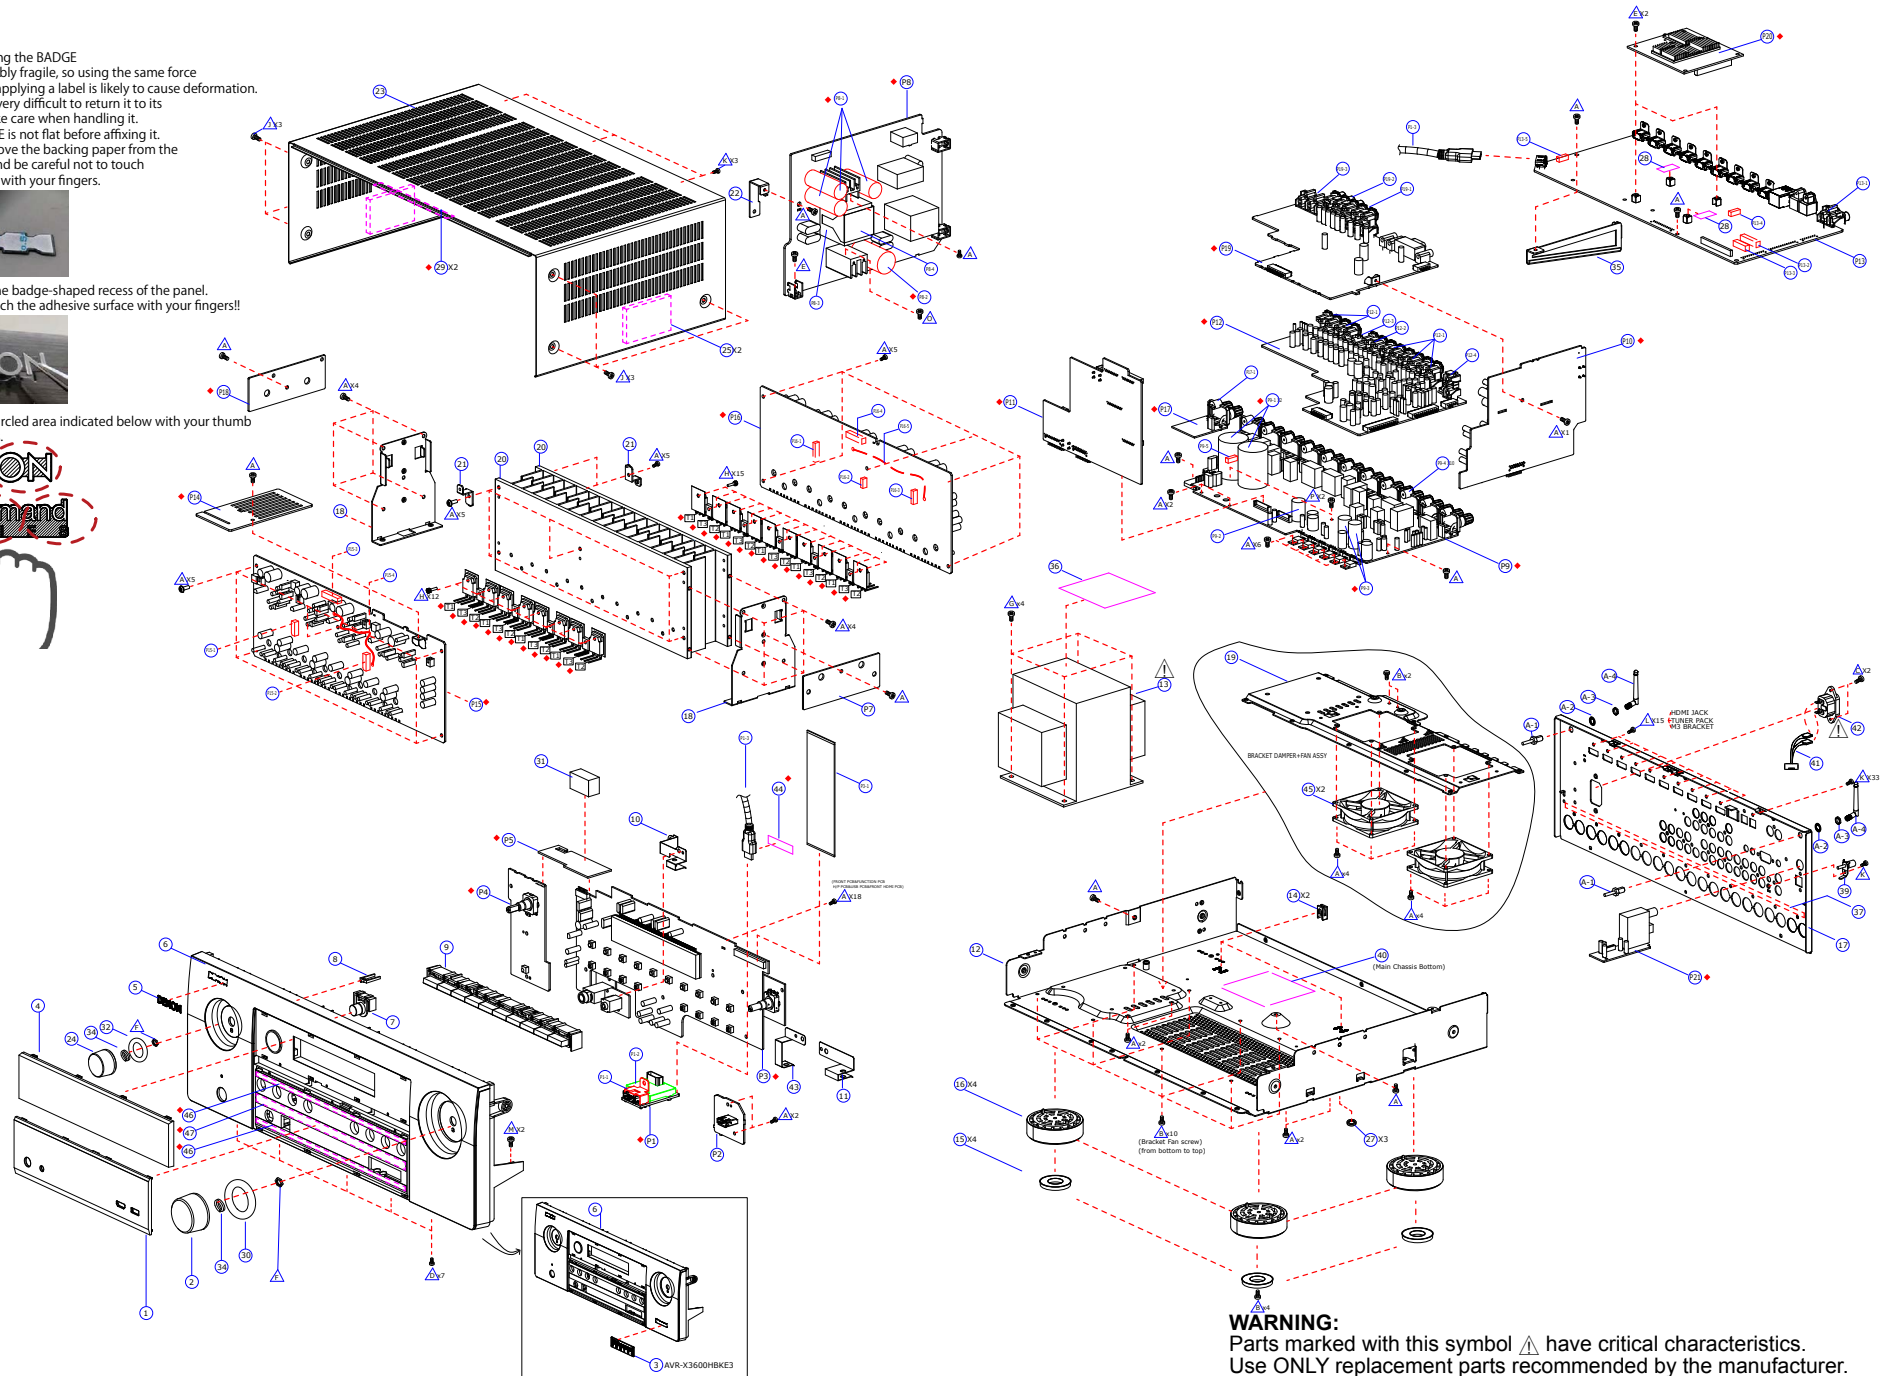

WARNING:
Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

Before Servicing
This Unit

Electrical




Mechanical

Repair Information


Updating

PACKAGING VIEW

Parts List : <http://dmedia.soundunit.com/documents/details/25940>

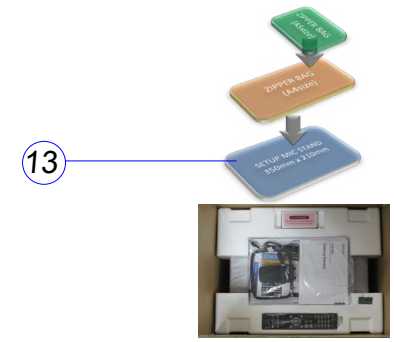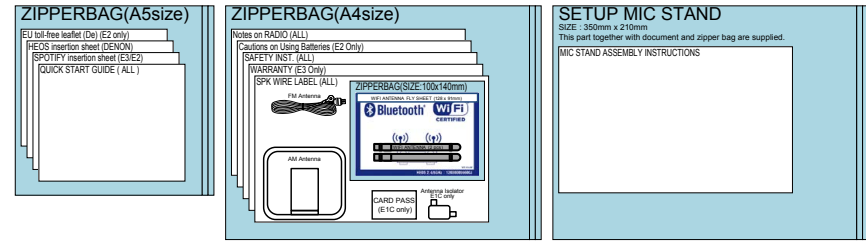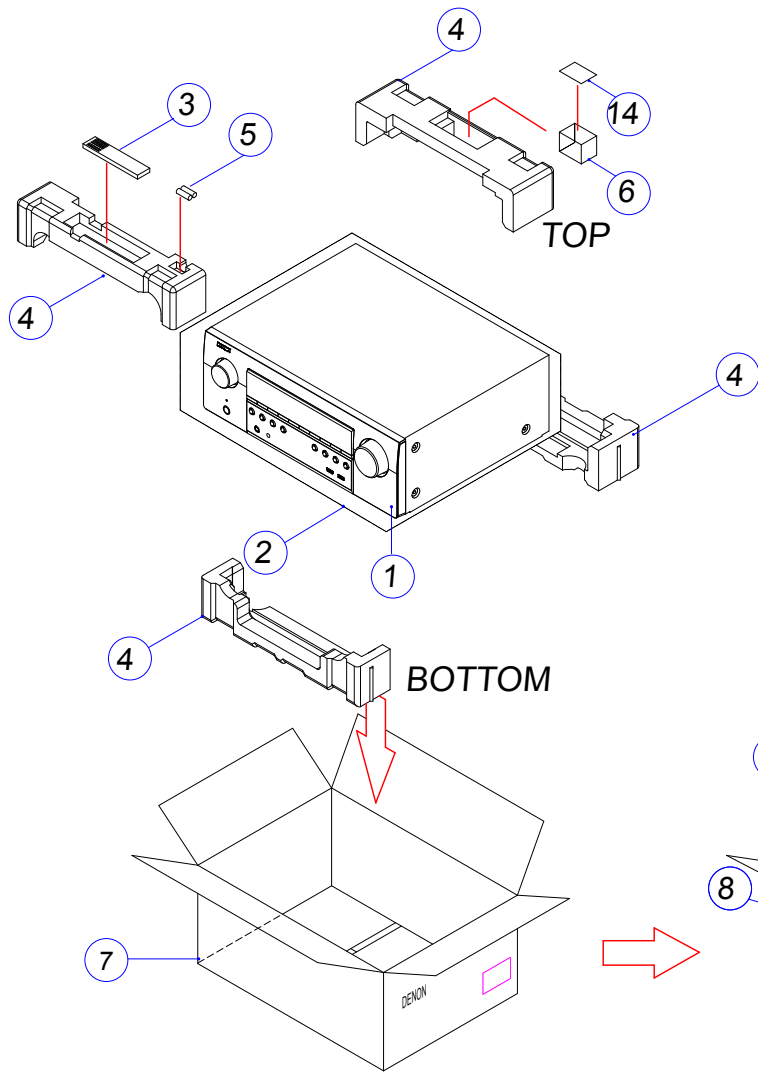

* POLY BAG PACKING STYLE	SPEAKER TERMINAL BUSHING	* BOX BOTTOM TAPING

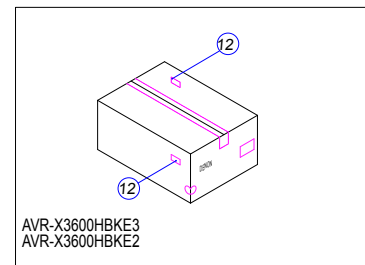

Before Servicing
This Unit

Electrical

Mechanical

Repair Information

Updating

REPAIR INFORMATION

TROUBLE SHOOTING

1. POWER
2. Analog video
3. HDMI/DVI
4. AUDIO
5. Network / Bluetooth / USB
6. SMPS

PROTECTION DIAGRAM

AUDIO CHECK PATH

HDMI "Rx/Tx" Failure Detection

1. Prior checking
2. Preparations for checking HDMI Switcher reception/transmission register
3. Starting detecting the point of failure
4. Device implementation location

CLOCK FLOW & WAVE FORM IN DIGITAL BLOCK

SPECIAL MODE

Special mode setting button

1. Version Display Mode
2. PANEL / REMOTE LOCK Selection Mode
 - 3-1. Selecting the Mode for Service-related
 - 3-2. Protection History Display Mode
 - 3-3. 232C Standby Clear Mode
 - 3-4. Operation Info Mode
 - 3-5. TUNER STEP mode (E3 / E2 only)
 - 3-6. Remote ID Setup Mode
4. Protection Pass Mode
5. Network Initialization Mode
6. Clearing of Operation Info
7. Log Capture feature

DIAGNOSTIC MODE

Service Path Check Mode
DIAGNOSTIC PATH DIAGRAM


JIG FOR SERVICING

ADJUSTMENT


TROUBLE SHOOTING

1. POWER

1.1. The unit does not power on

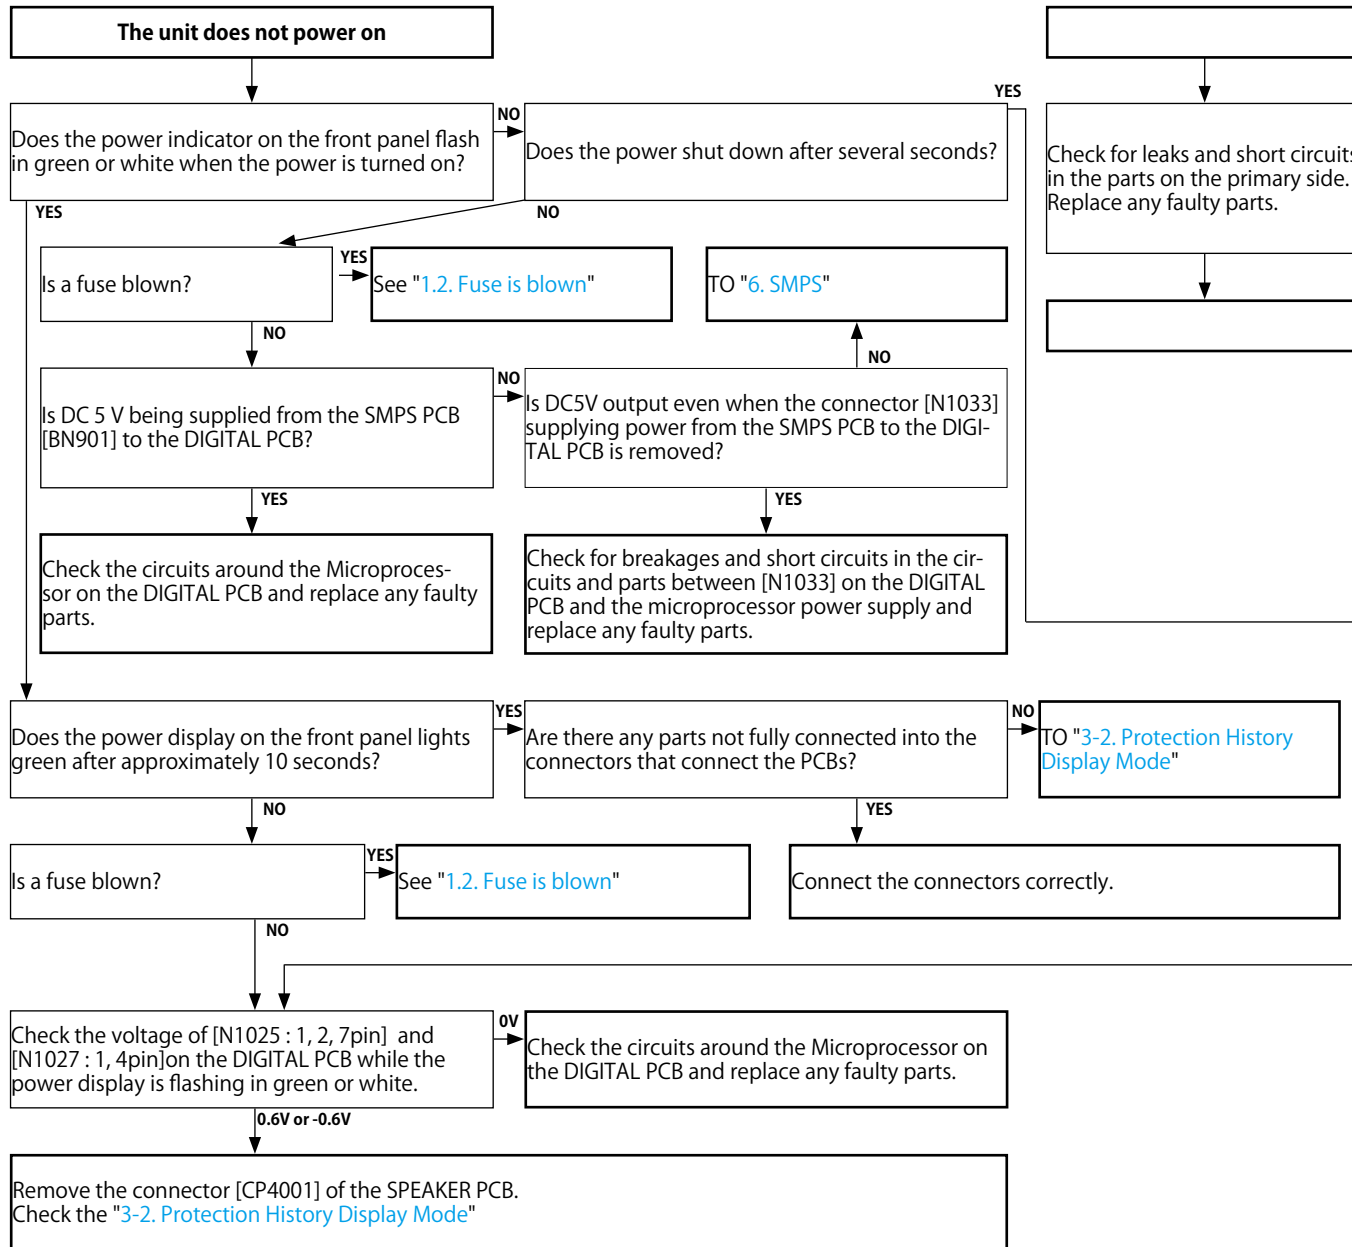

1.2. Fuse is blown

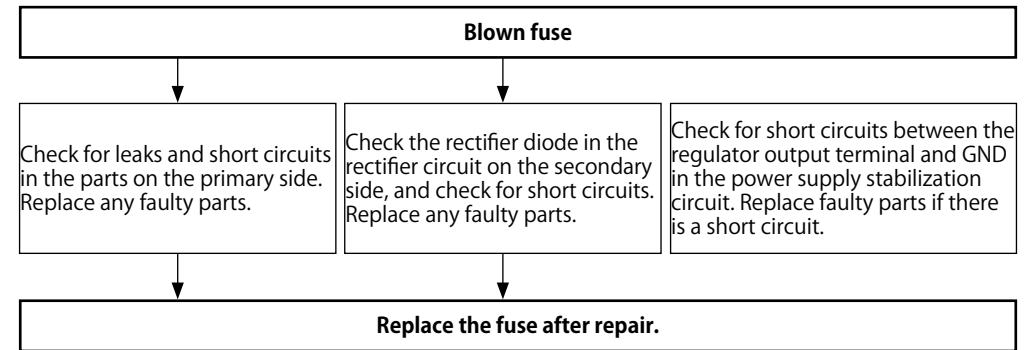

Before Servicing This Unit


Electrical

Mechanical


Repair Information

Updating



2. Analog video

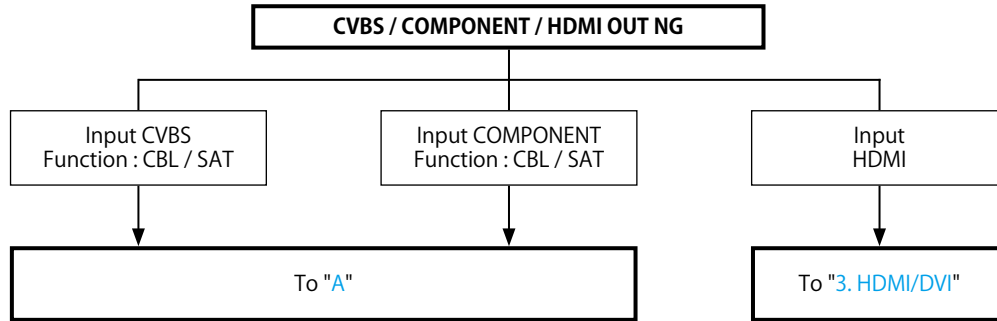


DIGITAL test point

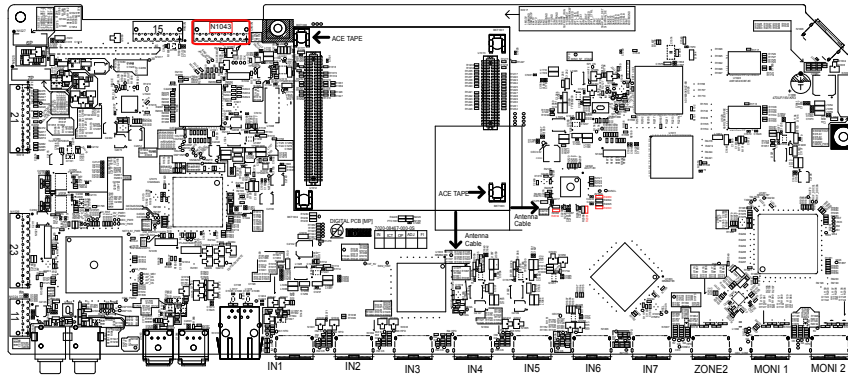

VIDEO test point

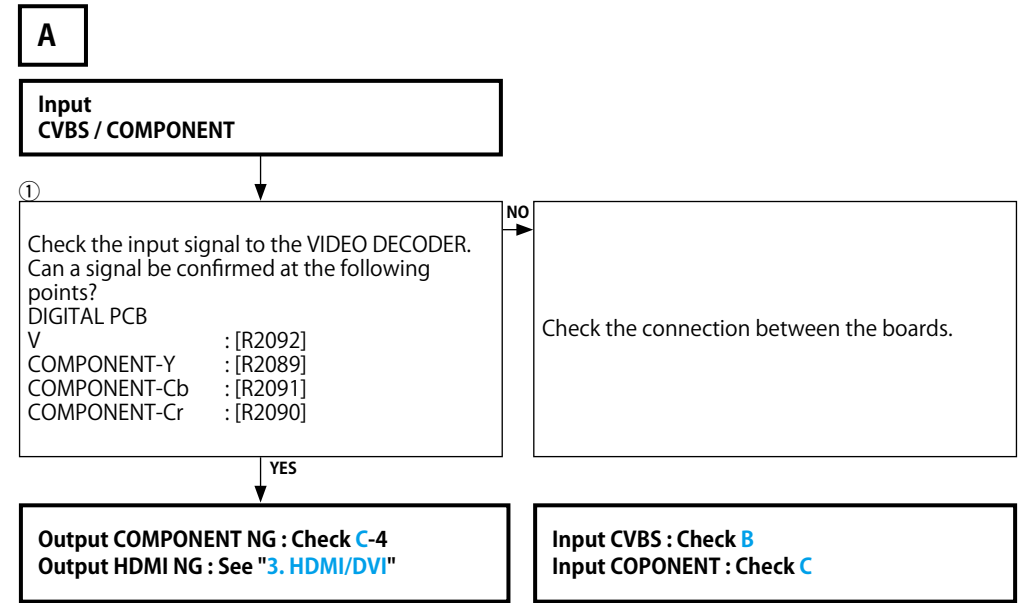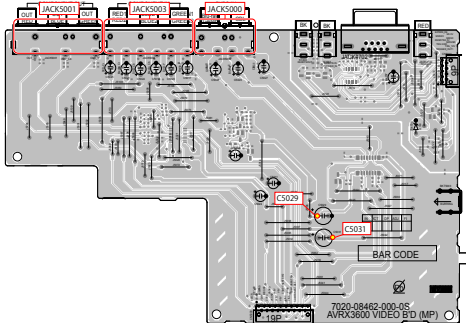


B

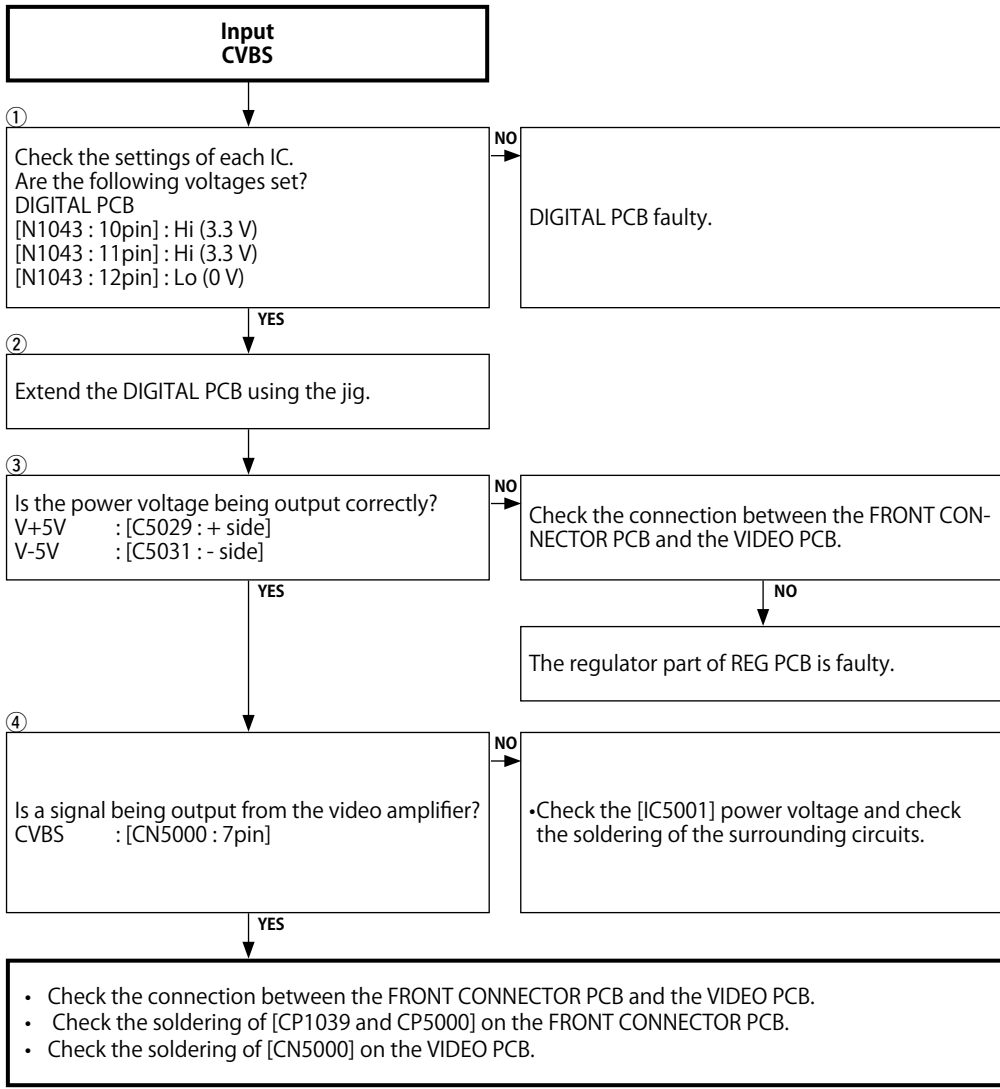

※ These instructions refer to the VIDEO PCB unless otherwise specified.


C

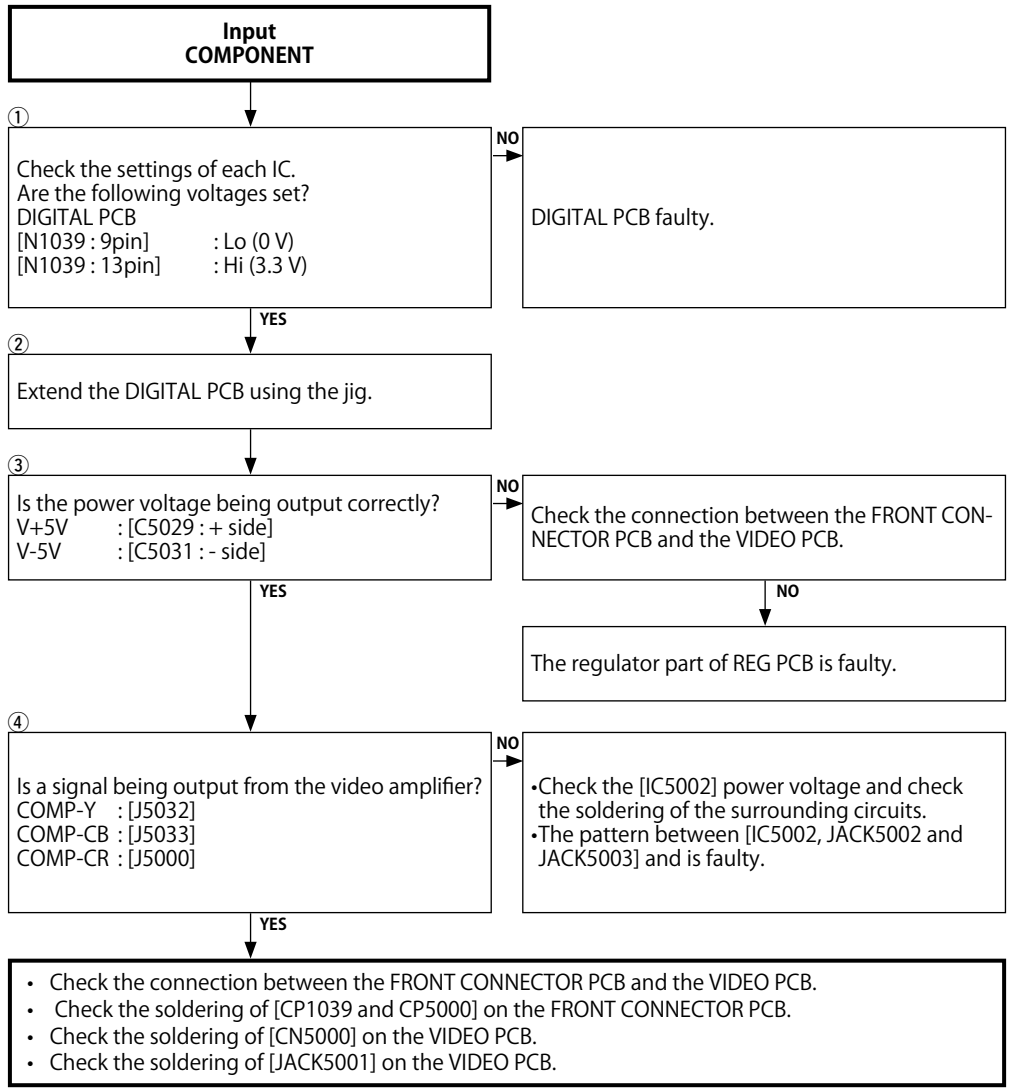


※ These instructions refer to the VIDEO PCB unless otherwise specified.

3. HDMI/DVI

3.1. No picture or sound is output (HDMI to HDMI)

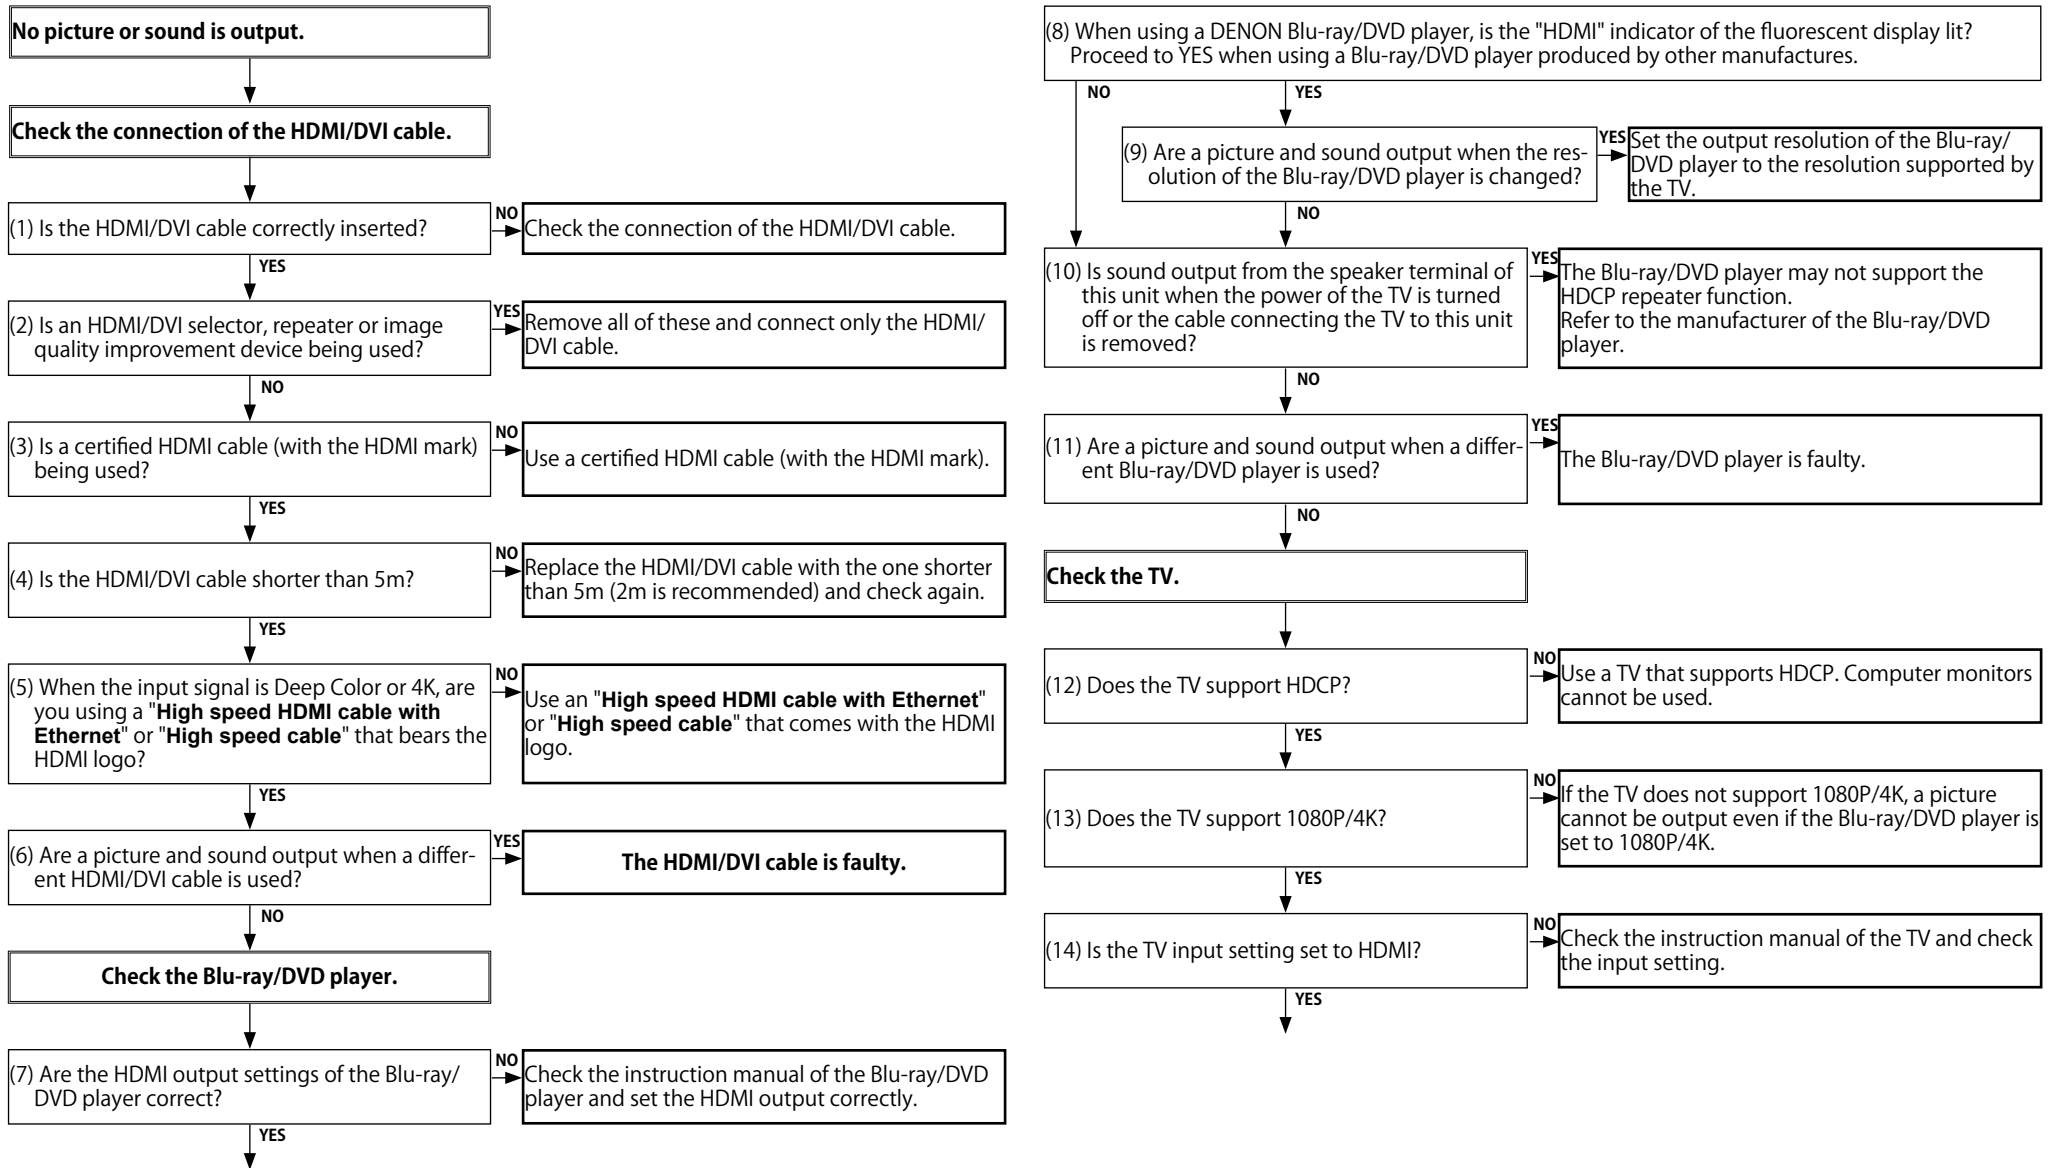


Go to next page.

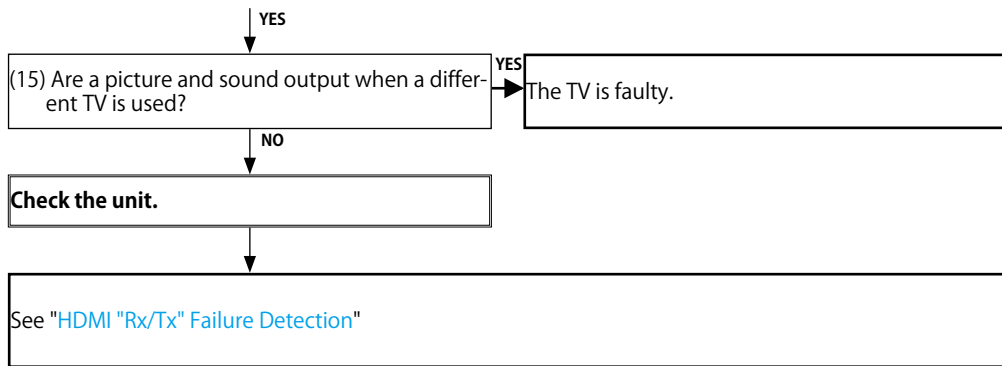

4. AUDIO

4.1. AUDIO CHECK

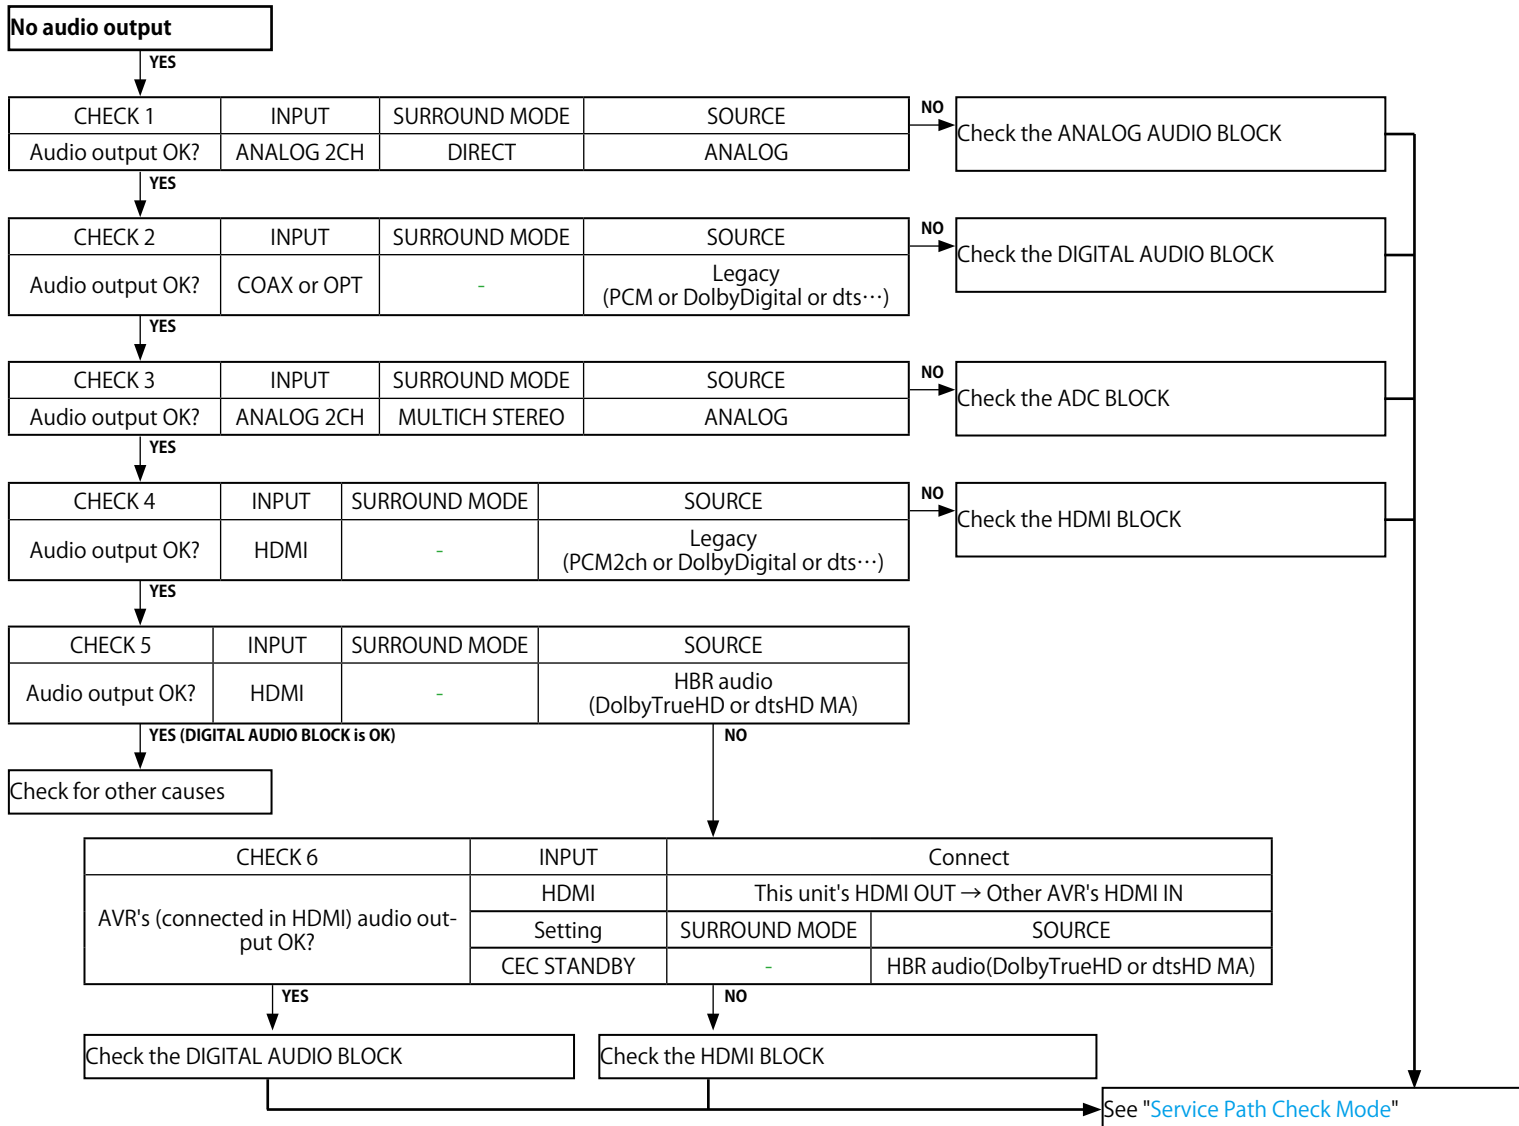

Before Servicing This Unit

Electrical


Mechanical

Repair Information


Updating

4.2. Power AMP (AMP PCB)

When using the protection pass mode, do not connect speakers to the speaker terminals.


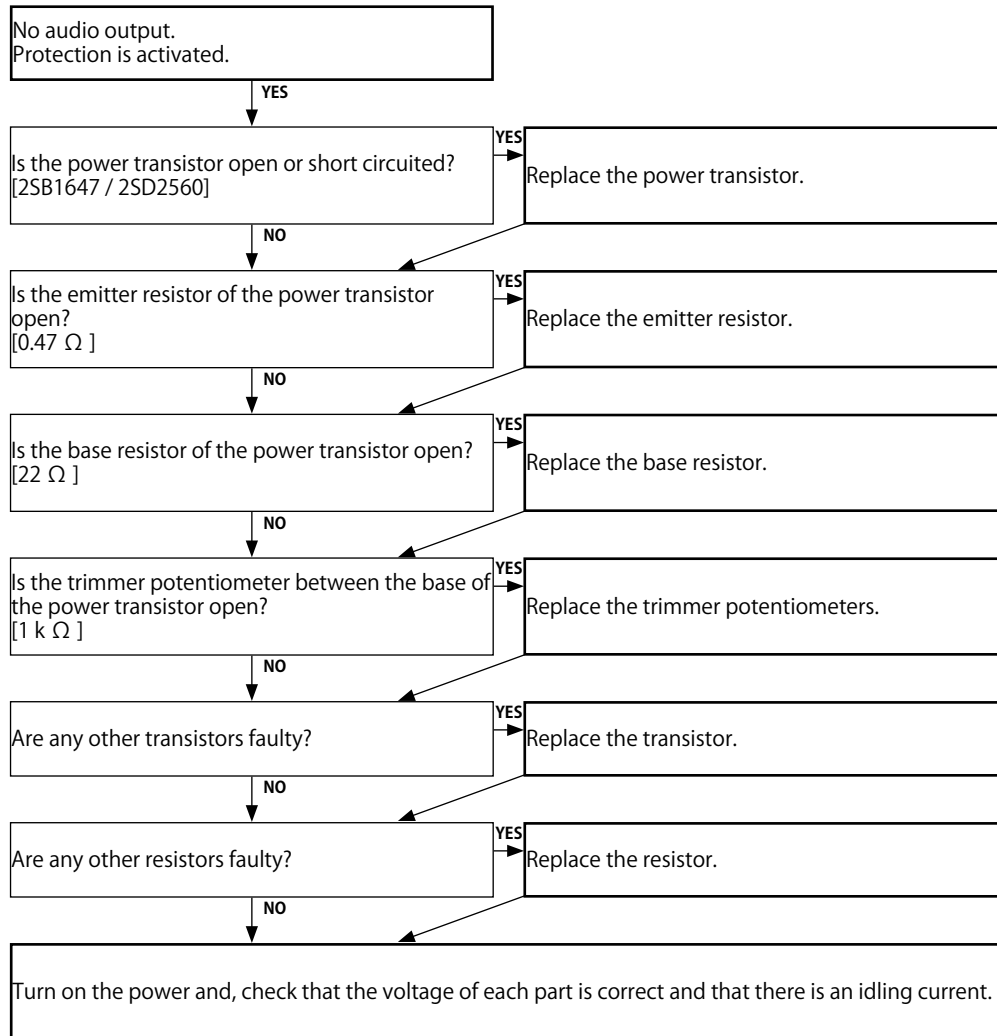


4.3. Analog audio

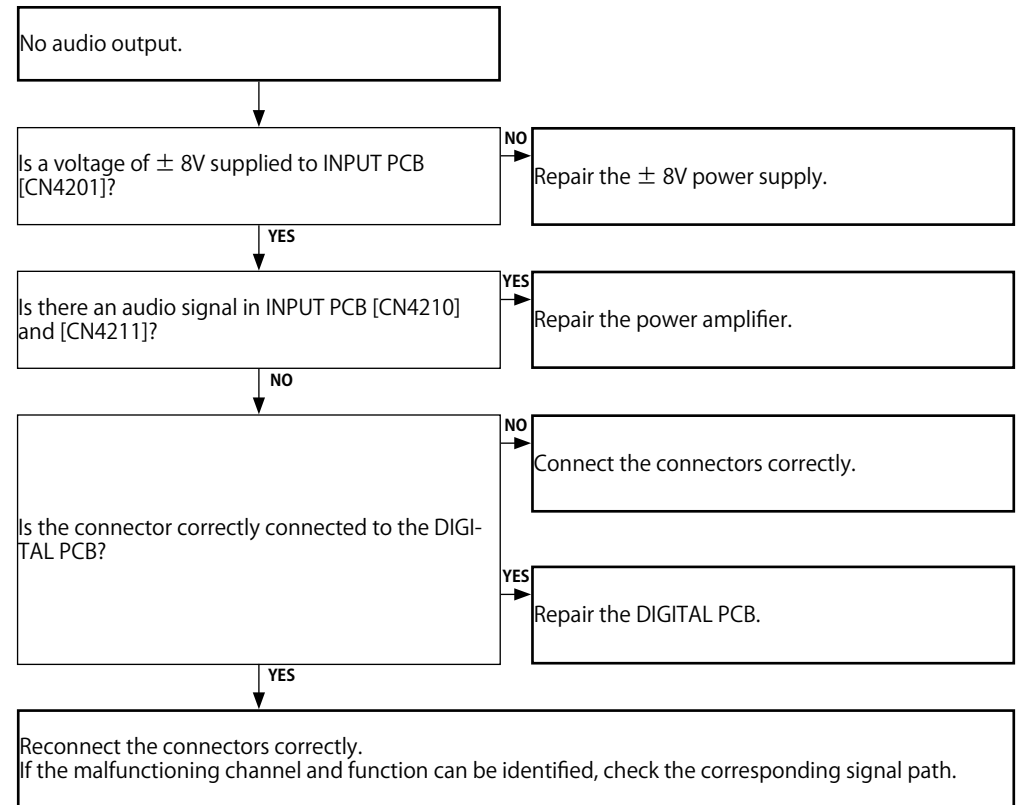


5. Network / Bluetooth / USB


5.1. Cannot connect to the network

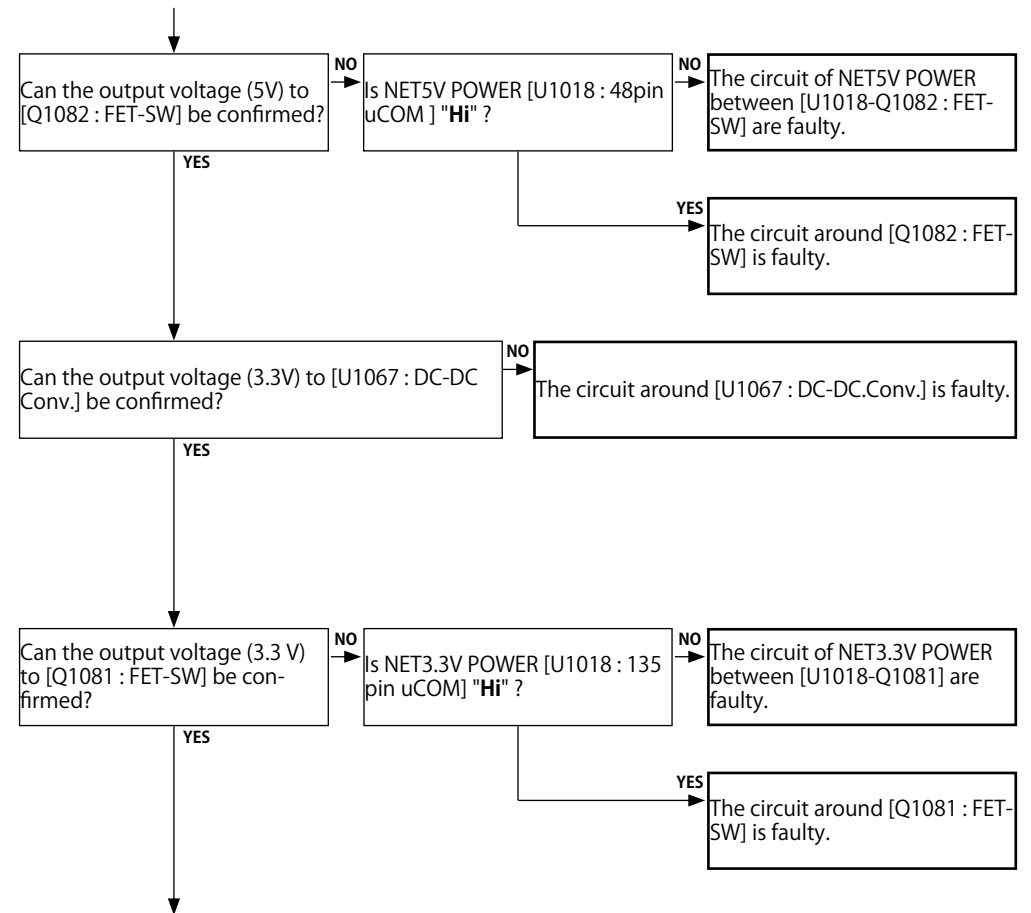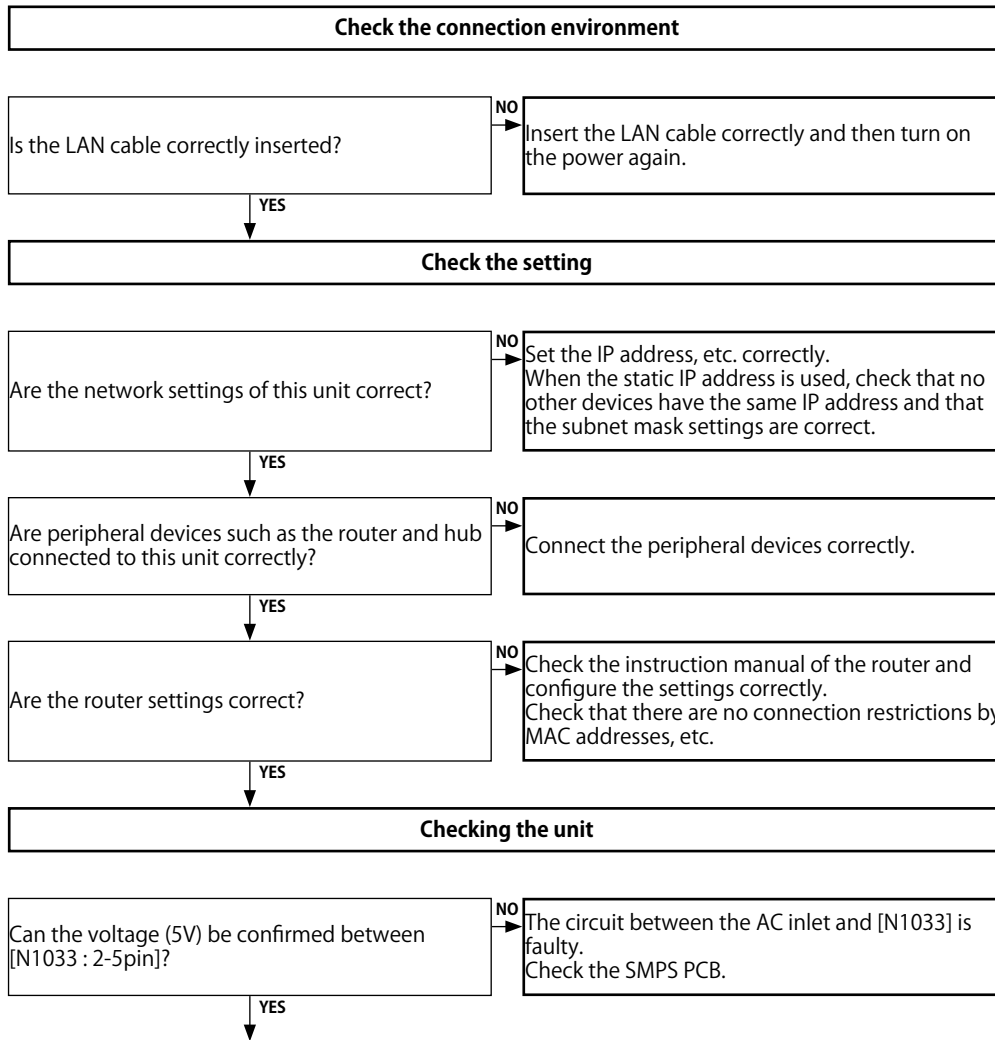


Go to next page.

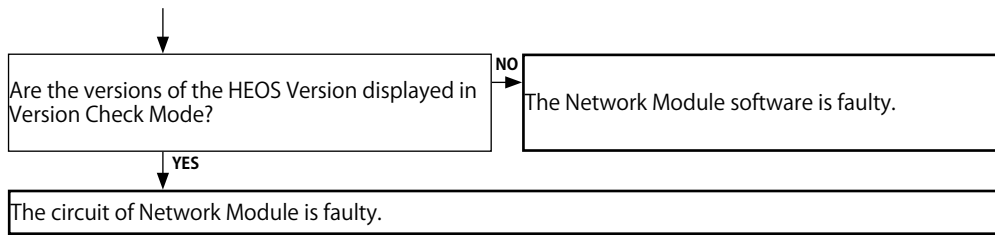


5.2. Cannot establish a Bluetooth connection

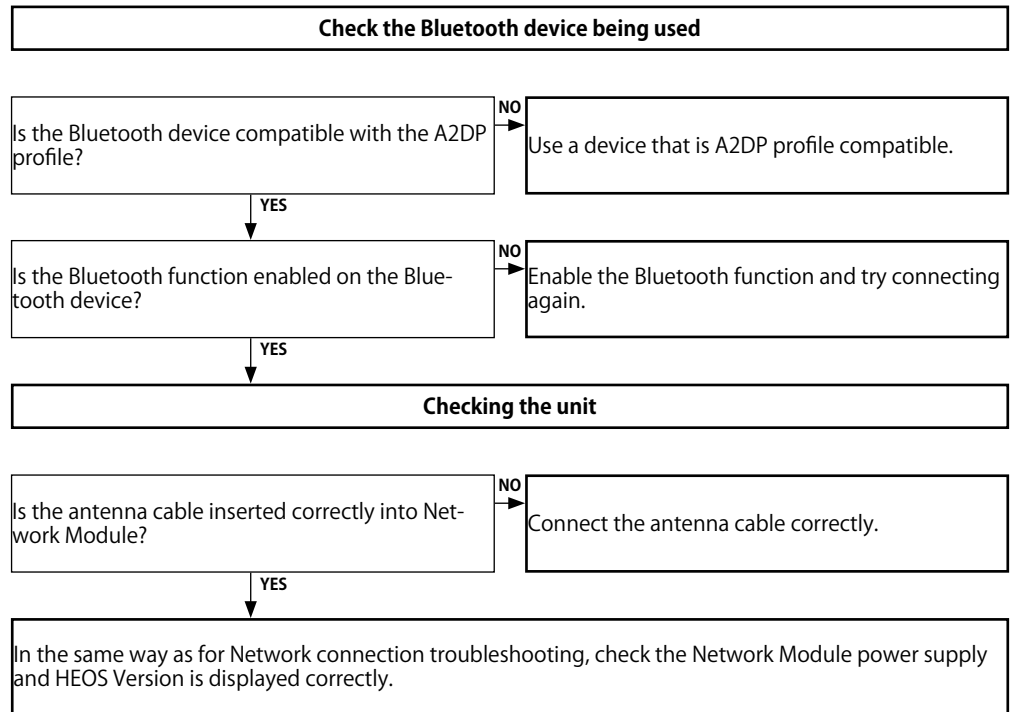


5.3. Cannot recognize the connected USB device

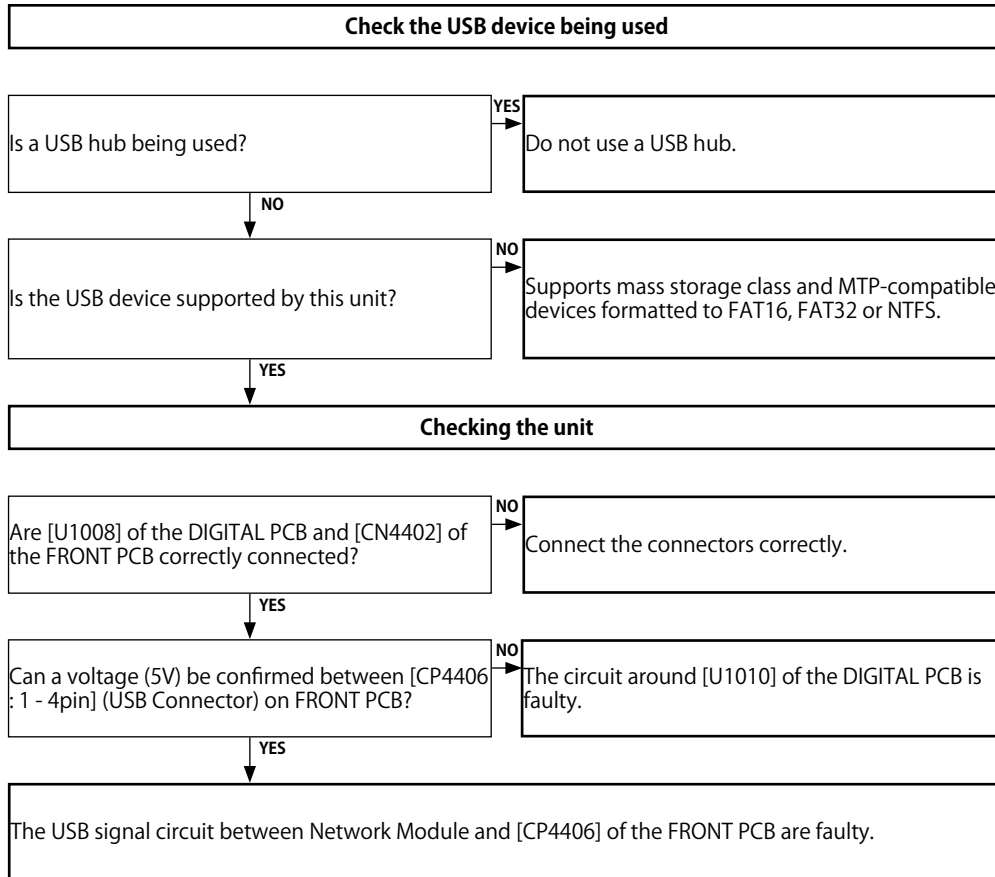


5.4. No picture or sound is output

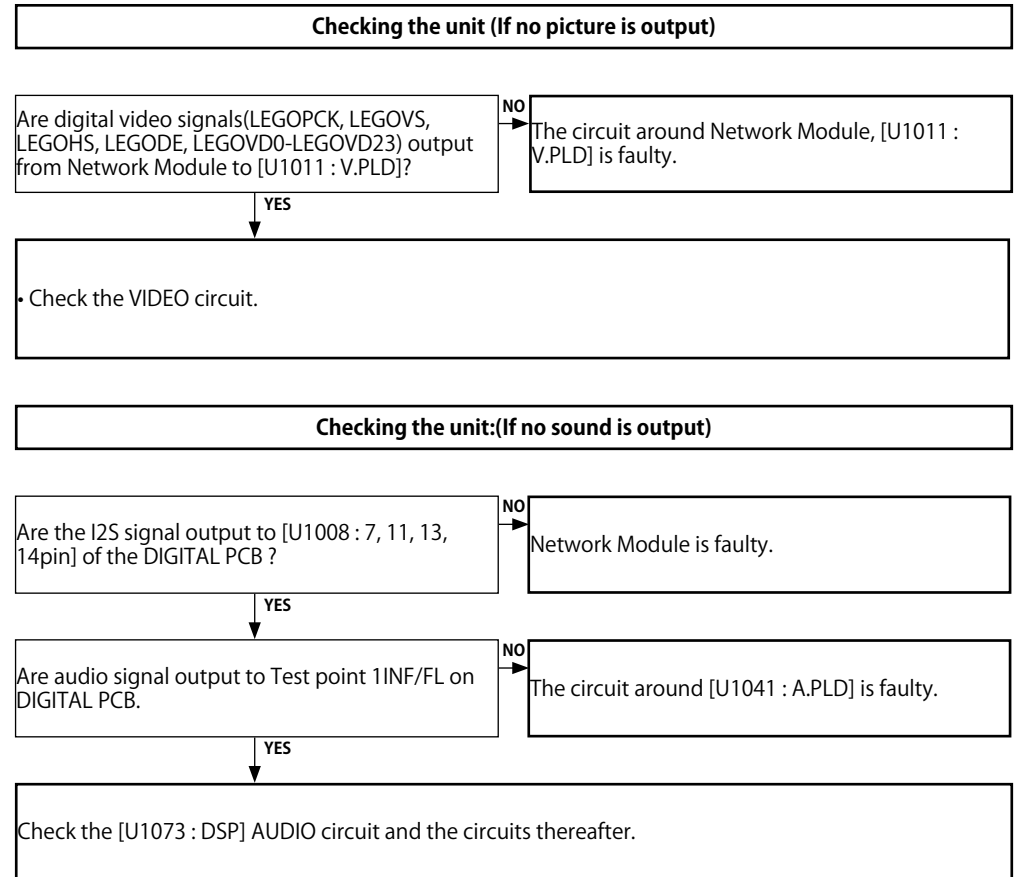


DIGITAL test point

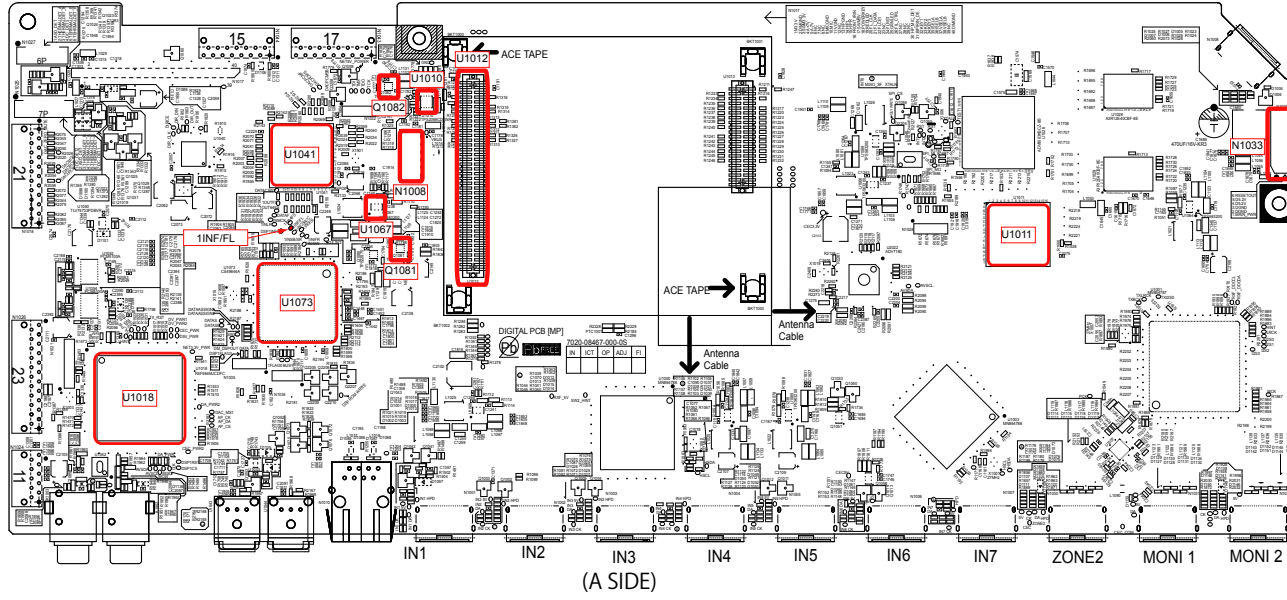


USB test point

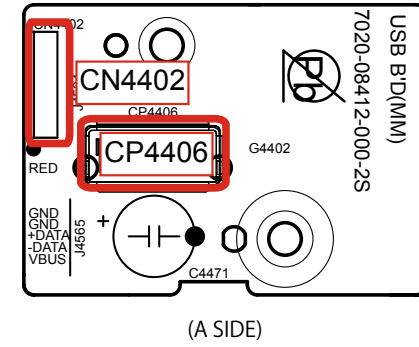



6. SMPS

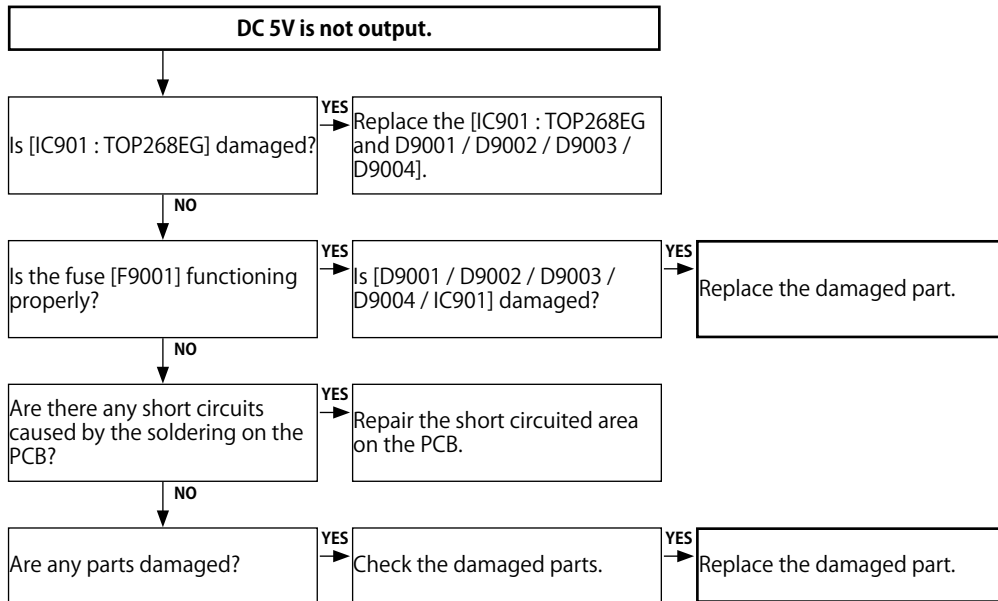

Operation waveform for each part

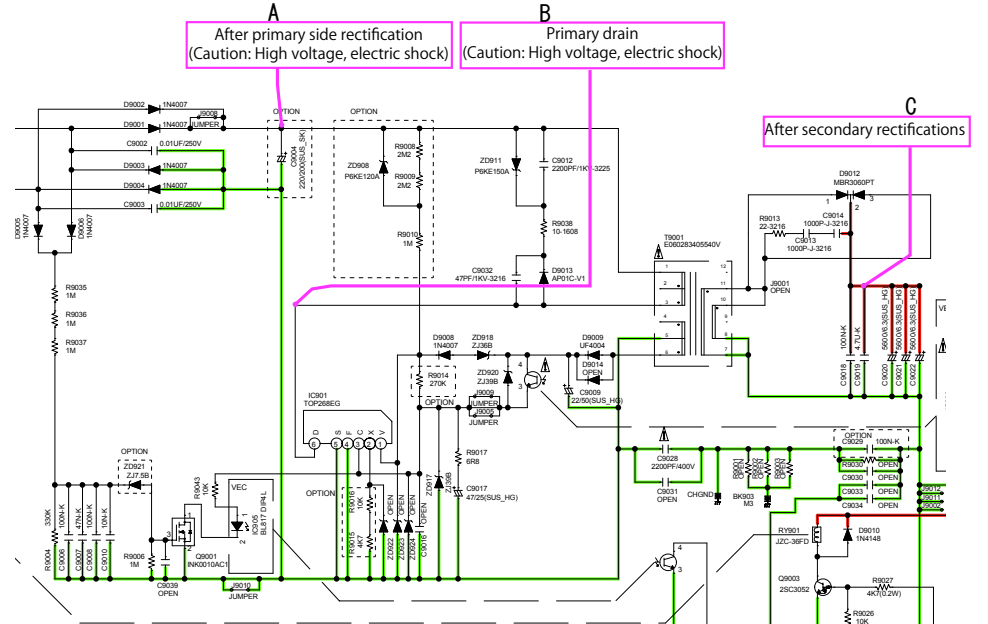

SMPS unit (Unloaded)

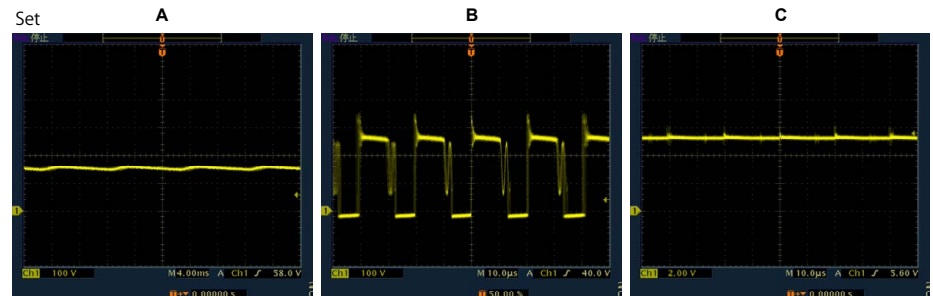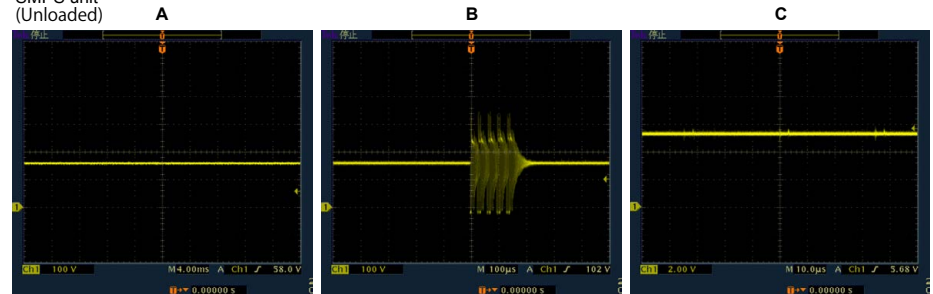




Before Servicing This Unit

Electrical

Mechanical


Repair Information

Updating

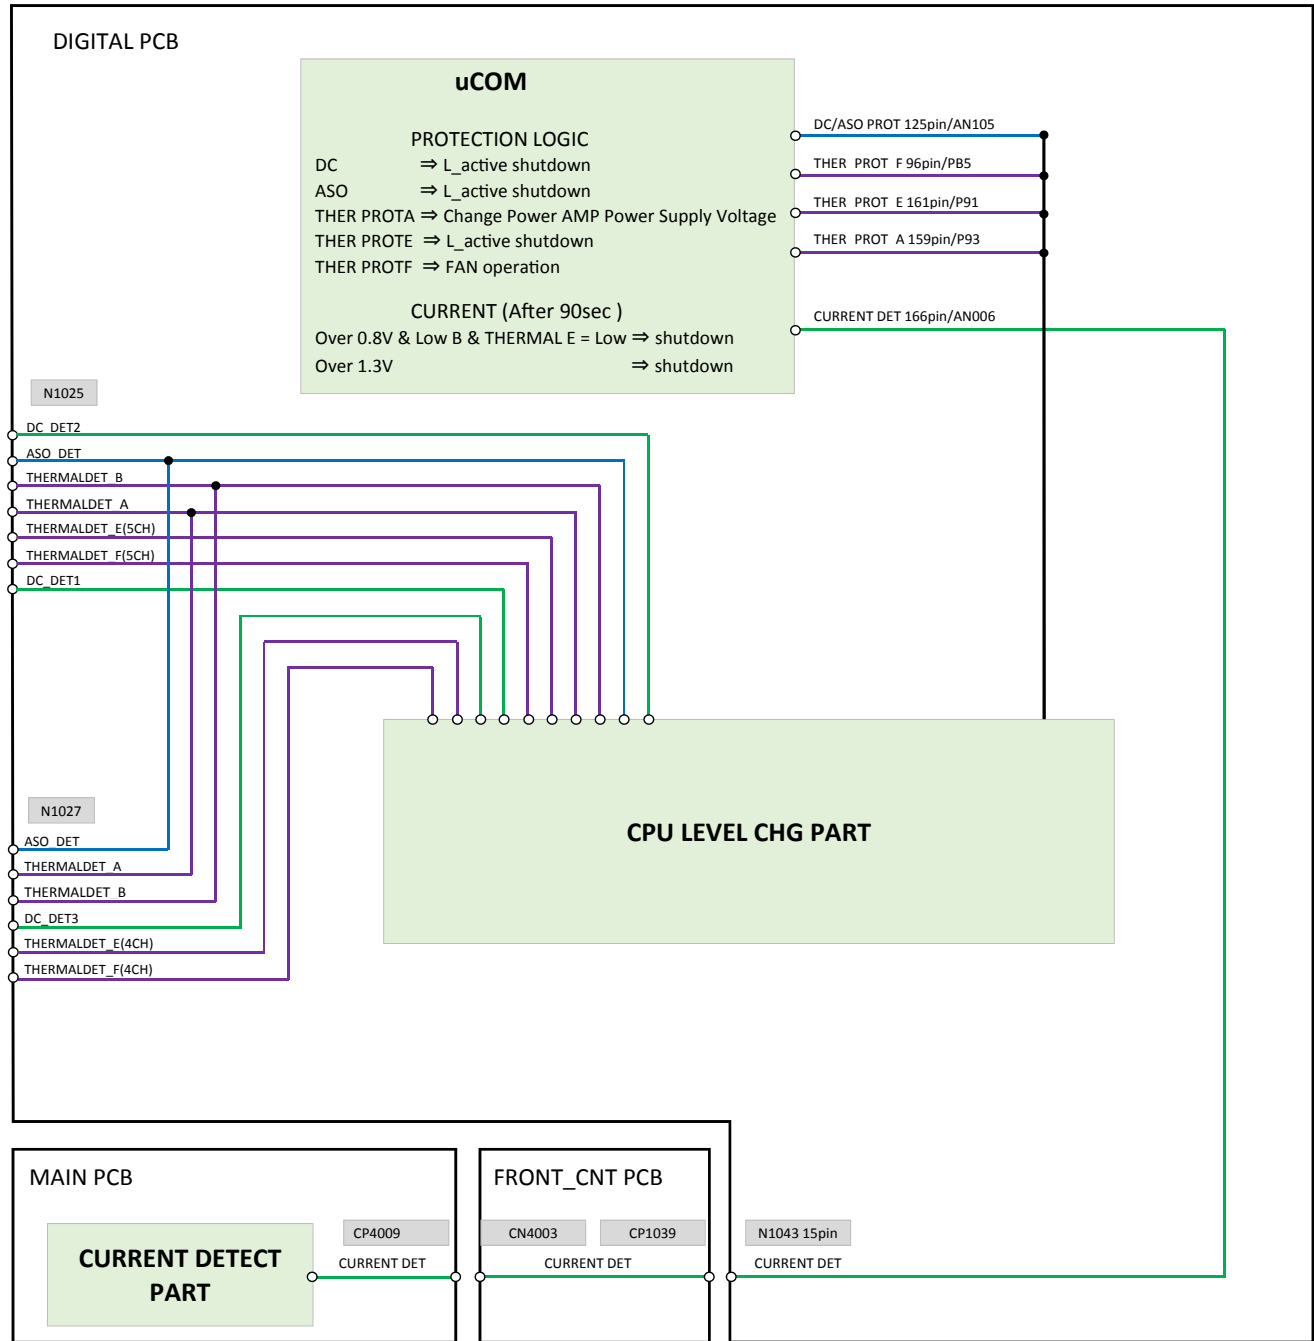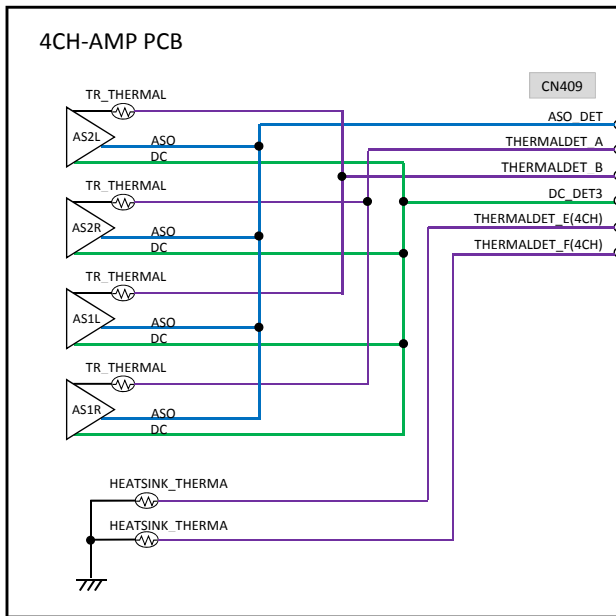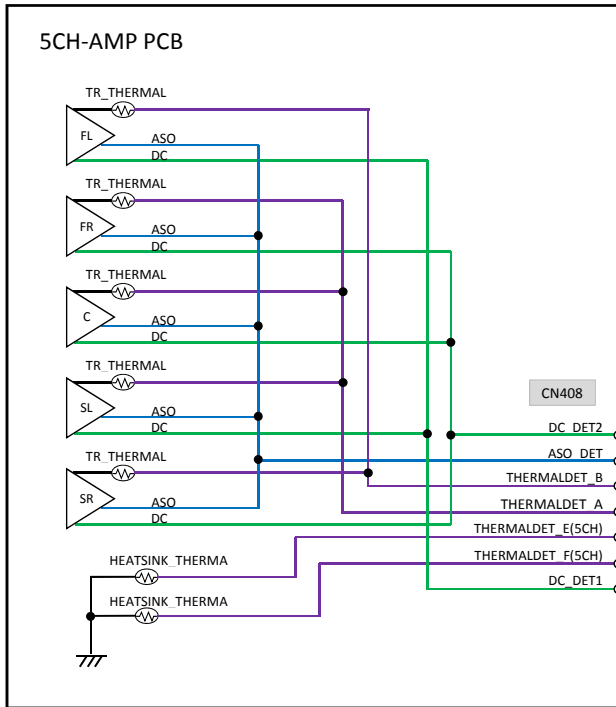

AUDIO CHECK PATH

→: Digital Signal
 ⇌: Analog Signal

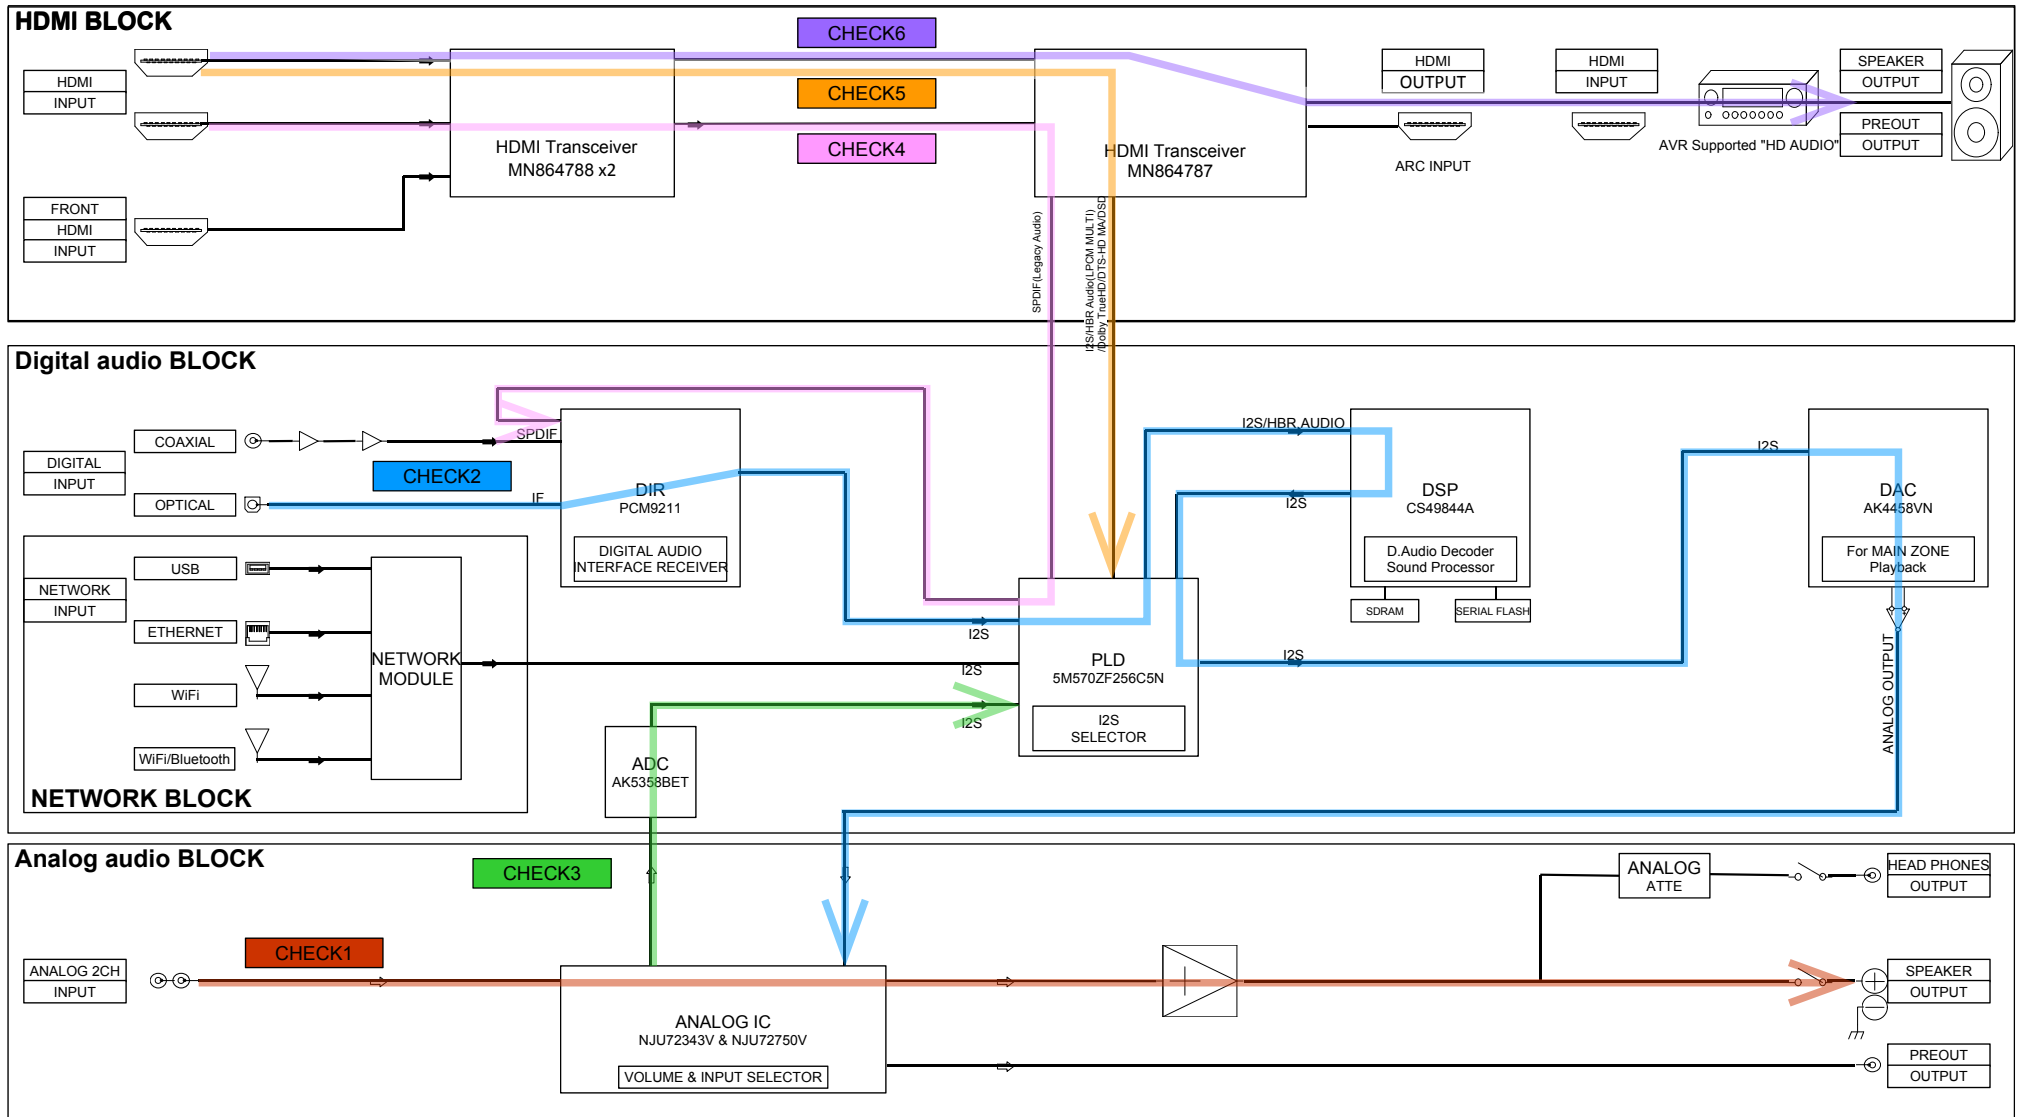

Before Servicing
This Unit

Electrical

Mechanical


Repair Information

Updating

HDMI "Rx/Tx" Failure Detection

1. Prior checking

Check item(1.): Checking the HDMI connector
Checking the condition of the HDMI pin (rear/front).

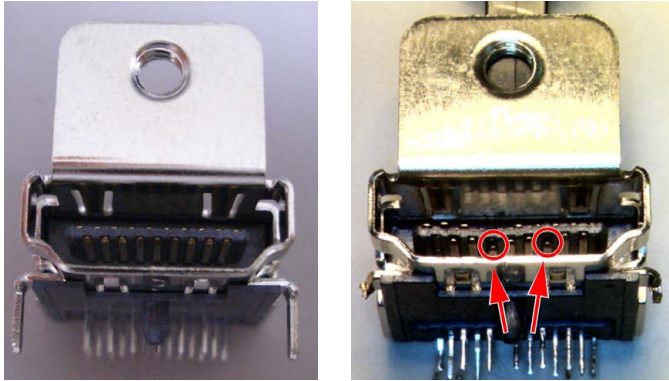

OK

NG

Check for deformed pins.

None of the pins are deformed.

There are deformed pins.

Replace the HDMI connector.

Check by following the flow chart for "3. Starting detecting the point of failure".

NOTE :

After checking troubleshooting "3. HDMI/DVI", check "3. Starting detecting the point of failure".

2. Preparations for checking HDMI Switcher reception/transmission register

2-1. Necessary devices

- 1) Check the product settings.
- 2-a) Player with an HDMI terminal
- 2-b) TV with an HDMI terminal (* NOTE : Do not use a computer monitor.)
- 3) Windows PC
- 4) Serial communication software "Termite.exe"
(Download the software from http://www.compuphase.com/software_termite.htm and install it.)
- 5) HDMI cable
- 6) RS-232C Straight cable
- 7) oscilloscope

2-2. Device Connection Method

Connect the TV and the AVR to the player using an HDMI cable and connect the AVR to the PC through an RS-232C cable as shown in Figure 1.

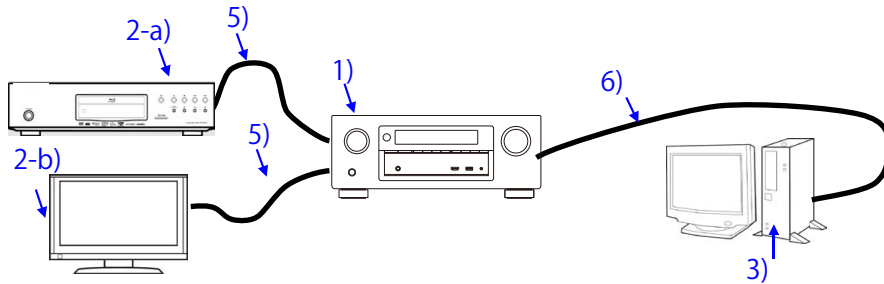


Figure 1. Device Connection Method

2-3. Device configuration method

PC settings : Execute the serial communication program, Termite.exe.

After executing Termite.exe, click [Settings].

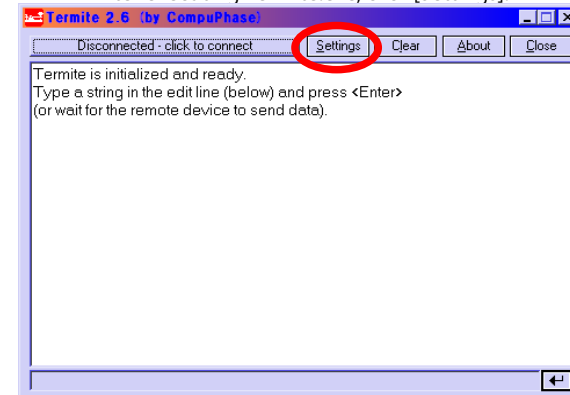


Figure 2. Screen After Executing Termite.exe

The serial port setup screen will be displayed.

Configure the settings as shown in Figure 3 and click the "OK" button.

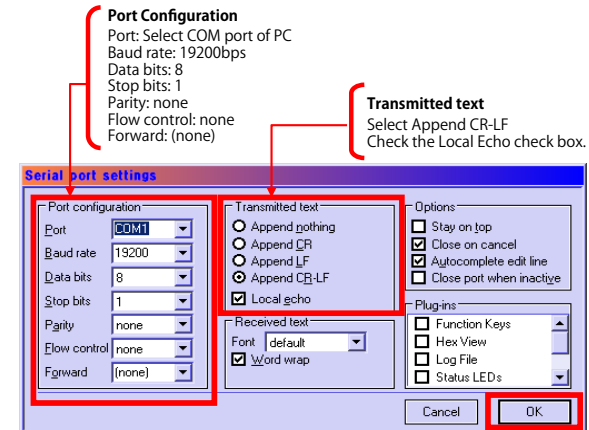


Figure 3. Serial Port Setup Screen

Click the [click to connect] button to start communication.
 After a connection is established successfully, the display of the button name will change as shown in Figure 4.

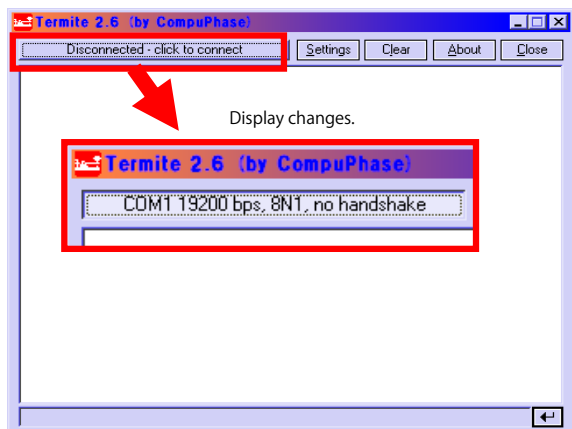


Figure 4. Change of the Display of the Communication Start Button Name

TV settings : Switch to the HDMI input in the AVR connection.
 Player settings : Turn the unit power on and configure it to play disks.
 AVR settings : While the power is On, hold down buttons "PRESET UP" and "ZONE2 SOURCE" for at least 3 seconds.
 (Continue to press and hold the buttons until all segments of the FLD volume illuminate.)
 ※ When the power is turned on after initialization, "Setup Assistant" will be displayed.
 After exiting "Setup Assistant" execute the above.

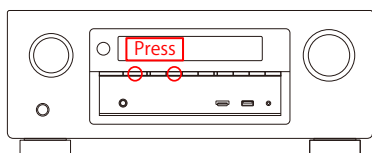


Figure 6. AVR settings




Figure 6. FLD Display When Set

When the settings are correct, the following message will be displayed in the window of Termite.
 [00]Start Sub CPU Log Mode

 (**** is a version of Sub CPU.)

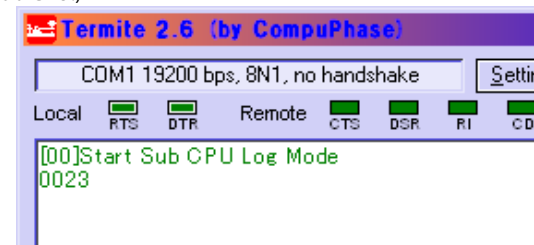


Figure 7. Display of Termite When AVR is Set

The setup is now complete.

Method for sending commands

Enter the command in the transmission command entry section, click the [Send] button and send the command.

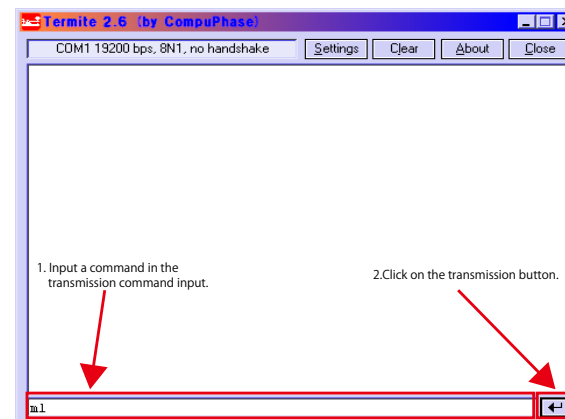


Figure 8. Method for Sending Termite Commands

3. Starting detecting the point of failure

Check item(3.1).

Check the power supply status and communication status with the CPU of each device.
Start in HDMI Diagnostics mode and follow the procedures below.

Start in HDMI Diagnostics mode

While the power is on, hold down buttons "TUNER PRESET CH -" and "ZONE2 SOURCE" for at least 3 seconds.

HDMI DIAGNOSTICS

↓ "HDMI DIAGNOSTICS" is displayed.

When the mode has switched, start Hardware Check.

HardwareCheck...

↓

Display when an Error is detected.

Err: H1-XX

↓↑ Alternating display.

Contact support

Check the Error Code table items.

Error Code table

Error Code	Check item No.	Description	
H1-01	Check item (3-1.1)	Communication Error with HDMI Tx	[U1001 : MN864787]
H1-02	Check item (3-2.1)	Communication Error with HDMI SW1	[U1003 : MN864788]
H1-03	Check item (3-3.1)	Communication Error with HDMI SW2	[U1000 : MN864788]
H1-05	Check item (3-7.1)	Communication Error with VIDEO DECODER	[U2022 : ADV7180]
H1-06	Check item (3-4.1)	Communication Error with GUI IC	[U1026 : ADV8003]
H1-08	Check item (3-8.1)	Communication Error with DSP	[U1073 : CS49844A]
H1-12	Check item (3-9.1)	Communication Error with DIR	[U1040 : PCM9211]
H1-14	Check item (3-5.1)	DDR check Error	[U1028, U1029 : A3R12E40DBF-8E]
H1-15	Check item (3-6.1)	Communication Error with GUI ROM	[U1027 : W25Q128JVFIQ]
H1-16	Check item (3-10.1)	Communication Error with ARC IC	[U1007 : SI9437]

Display when an Error is not detected.


1 Auto Test

Cancel the mode, and proceed to [check item \(3.2\)](#).

Canceling the selected mode

Press the power button to exit off the power.


Check item(3.2). : Does a video signal come from HDMI ZONE2 OUT to TV correctly?



When the HDMI input terminal (HDMI 5, 6, 7) are connected in order to the player, are the audio and video from the player played back on the TV correctly in each case?

YES

Check item(3.3). : Does a video signal come from HDMI ZONE2 OUT to TV correctly?




When the HDMI input terminal (HDMI 1, 2, 3, 4) are connected in order to the player, are the audio and video from the player played back on the TV correctly in each case?

YES

NO
Go to **check item (3-11.1).**
(Switcher1 failure detection procedure)

NO
Go to **check item (3-12.1).**
(Switcher2 failure detection procedure)

Check item(3.4). Does a video signal come from HDMI OUT to TV correctly?



Turn Video Conversion "OFF" on the setup menu.
(SETUP MENU - Video - Output Settings - Video Conversion = Off)
When the player is connected in order to the HDMI input terminals (HDMI1, 5), in each case is the player video played back on the TV connected to the HDMI output terminal (HDMI OUT1, 2)?


YES

When the HDMI input terminal (AUX1) is connected to the player, the video from the player will be played back on the TV?
Use any of Dolby TrueHD/DTSHD MA/PCM 8ch for the playback audio format.

NO
Is the "DIG" indicator illuminated on the FLD?
When the "DIG" indicator is illuminated, the DIGITAL AUDIO block is faulty.
If the "DIG" indicator is not illuminated, go to **check item (3-14.1).**
(Front HDMI Buffer [AD8195] failure detection procedure)

YES

Check item(3.5). Does a video signal come from HDMI OUT to TV correctly?



Turn Video Conversion "ON" on the setup menu.
(SETUP MENU - Video - Output Settings - Video Conversion = On)
When the HDMI input terminal (HDMI 1) is connected to the player, the video from the player will be played back on the TV?

YES

NO
Go to **check item (3-15.1).**
(GUI and PLD failure detection procedure)

There are no problems with the HDMI device.


3-1. Error Code H1-01 failure detection procedure

Checking device. [U1001 : MN864787]

Check the power supply voltage. (HDMI Tx)

Check item(3-1.1). Check the power supply voltage. :
Does the power supply voltage of the HDMI Tx [U1001] indicate the correct voltage (1.1V, 3.3V)?
The test points are as follows.

HDMI Tx

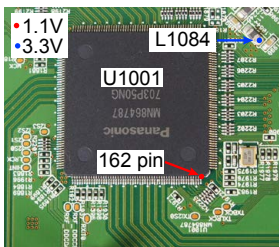

YES

NO

Check item(3-1.2). Check the power supply voltage. :
Check the power components [U1064/U1066] and the pattern on the substrate.
If there is no problem, remove the HDMI Tx [U1001] from the substrate and measure the voltage at the test point of **check item (3-1.1)**.
Is the voltage correct (1.1V or 3.3V)?

YES

NO

Replace with a new device.



The power supply circuit is faulty.
Replace the PCB.

Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

Checking the reset waveform. (HDMI Tx)

Check item(3-1.3). Checking the reset waveform :
Check the waveform.
Is the [R1976] waveform near the HDMI Tx [U1001] correct (like the one shown in the diagram) when the power is turned on?

HDMI Tx

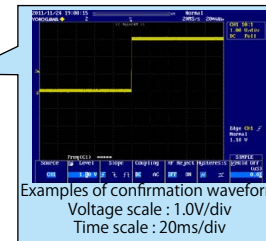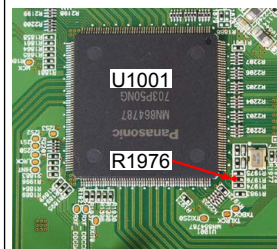


NO

Check the reset circuit between CPU [U1018] and HDMI Tx [U1001].
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.
Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

YES

Go to next page.

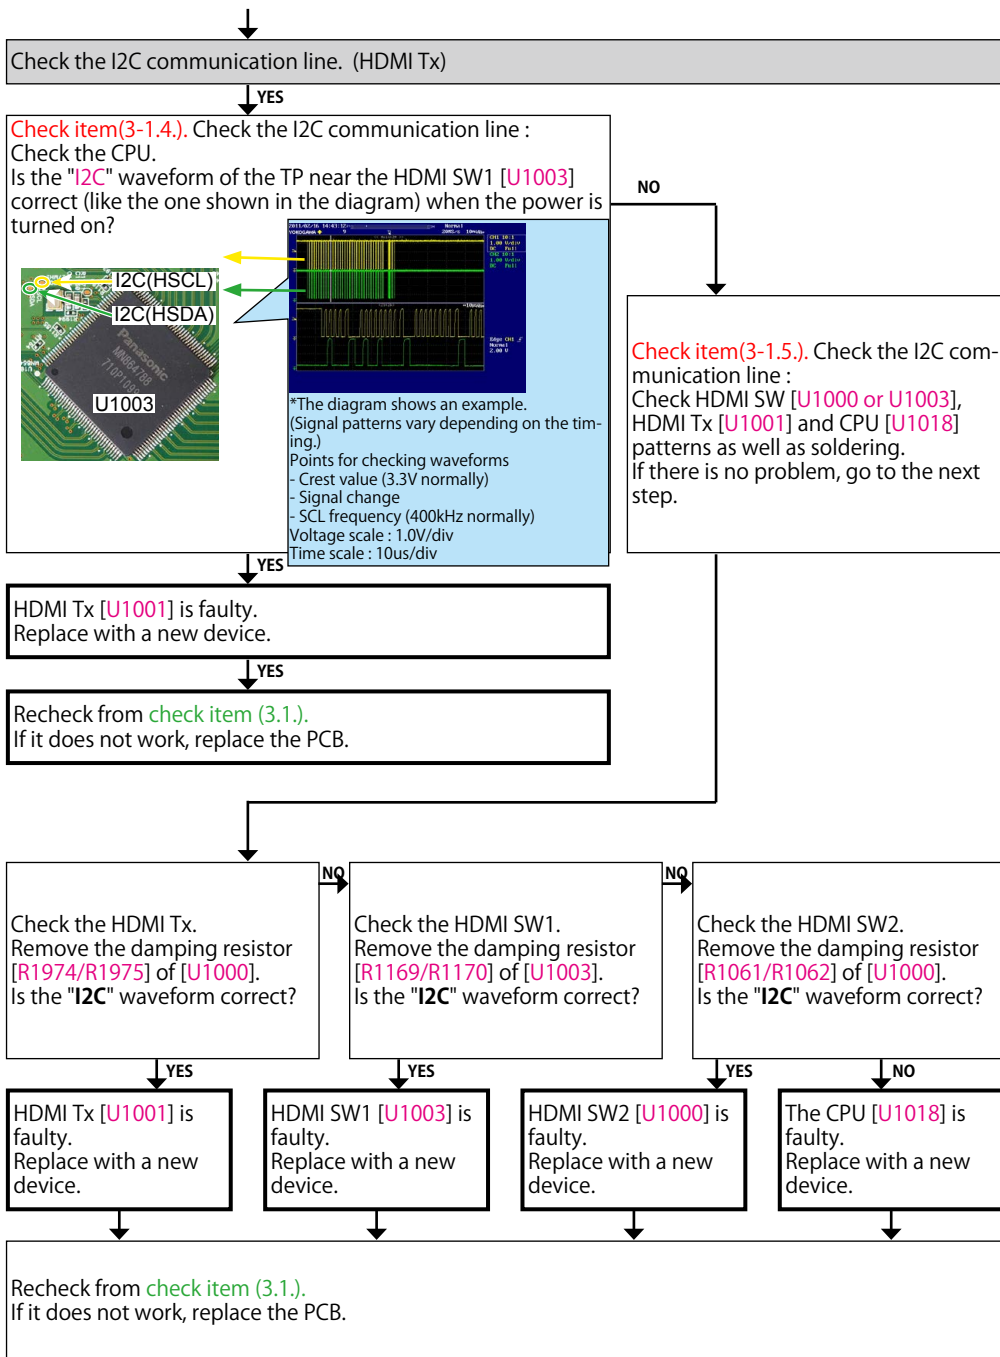

3-2. Error Code H1-02 failure detection procedure


Checking device. [U1003 : MN864788]

Check the power supply voltage. (HDMI SW1)

Check item(3-2.1). Check the power supply voltage. :

Does the power supply voltage of the HDMI Rx2 [U1003] indicate the correct voltage (1.1V, 3.3V)?
The test points are as follows.

HDMI Rx2

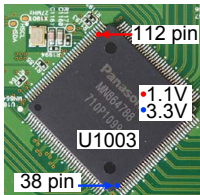

YES

NO

Check item(3-2.2). Check the power supply voltage. :
Check the power components [U1065] and the pattern on the substrate.
If there is no problem, remove the HDMI SW1 [U1003] from the substrate and measure the voltage at the test point of **check item (3-2.1)**.
Is the voltage correct (1.1V or 3.3V)?

YES

NO

Replace with a new device.

The power supply circuit is faulty.
Replace the PCB.



Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

Checking the reset waveform. (HDMI SW1)

Check item(3-2.3). Checking the reset waveform :
Check the waveform.

Is the "RESET" waveform of the TP near the HDMI SW1 [U1003] correct (like the one shown in the diagram) when the power is turned on?

HDMI Rx2

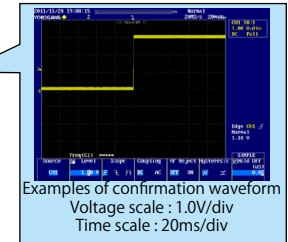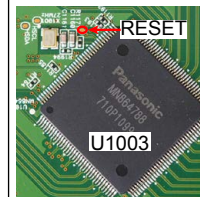


Examples of confirmation waveform
Voltage scale : 1.0V/div
Time scale : 20ms/div

NO

Check the reset circuit between CPU [U1018] and HDMI SW1 [U1003].
If there is no problem, the HDMI SW1 [U1003] is faulty.
Replace with a new device.
Recheck from **check item (3-2.3)**.
If it does not work, replace the PCB.

YES

Go to next page.

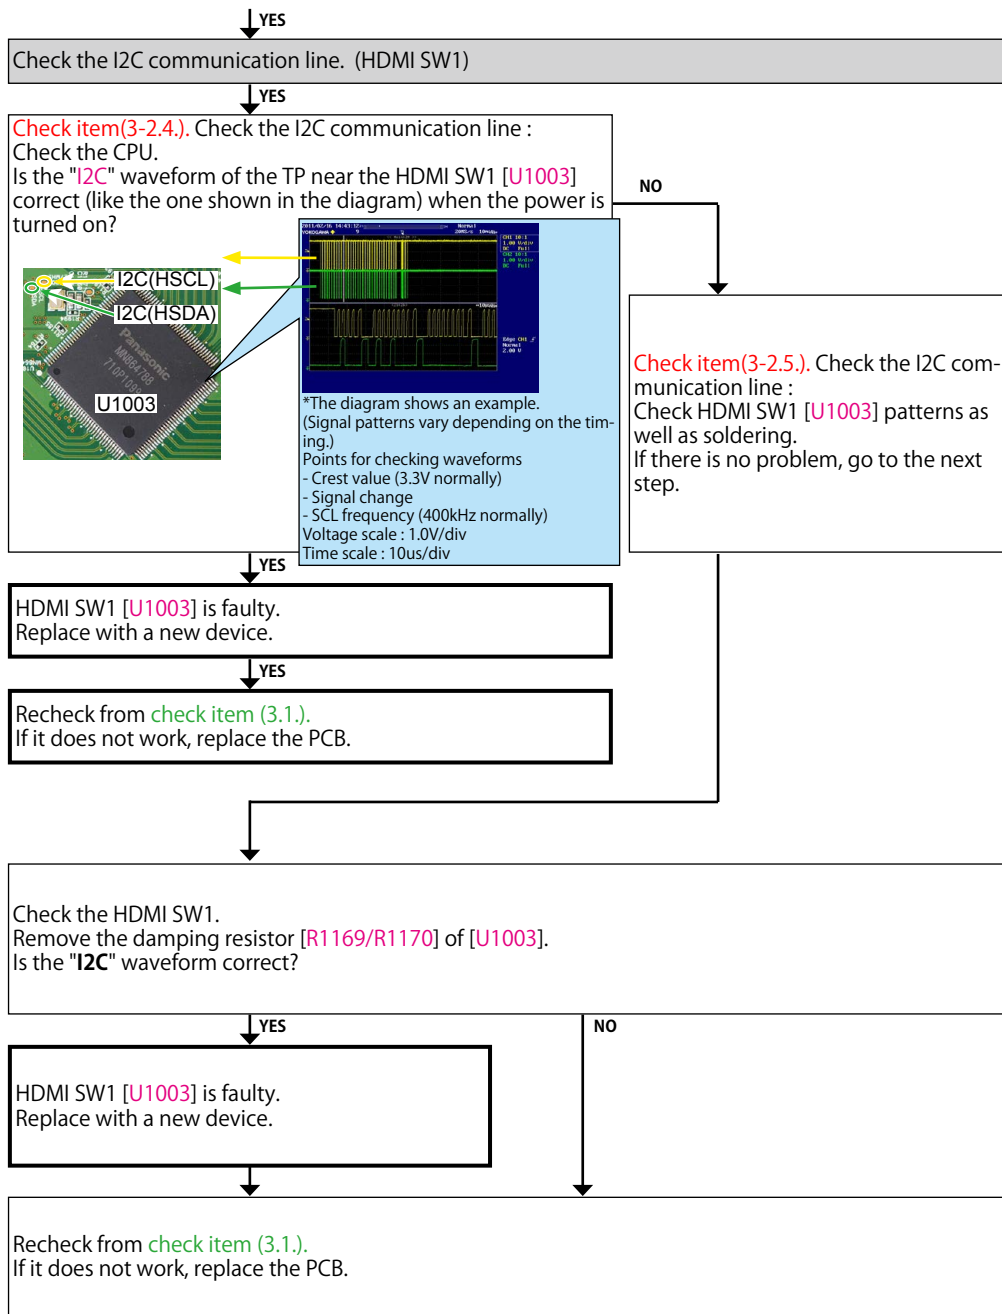


3-3. Error Code H1-03 failure detection procedure

Checking device. [U1000 : MN864788]

Check the power supply voltage. (HDMI SW2)

Check item(3-3.1). Check the power supply voltage. :
Does the power supply voltage of the HDMI SW2 [U1000] indicate the correct voltage (1.1V, 3.3V)?
The test points are as follows.

HDMI SW2

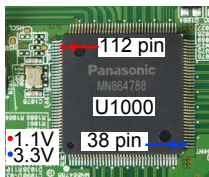

YES

NO

Check item(3-3.2). Check the power supply voltage. :
Check the power components [U1063/U1066] and the pattern on the substrate.
If there is no problem, remove the HDMI SW2 [U1000] from the substrate and measure the voltage at the test point of **check item (3-3.1)**.
Is the voltage correct (1.1V or 3.3V)?

YES

NO

Replace with a new device.



The power supply circuit is faulty.
Replace the PCB.

Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

Checking the reset waveform. (HDMI SW2)

Check item(3-3.3). Checking the reset waveform :
Check the waveform.
Is the "RESET" waveform of the TP near the HDMI SW2 [U1000] correct (like the one shown in the diagram) when the power is turned on?

HDMI SW2

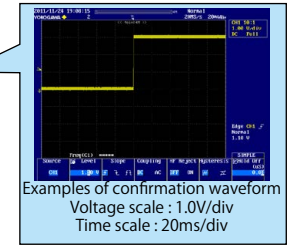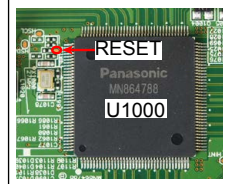


NO


Check the reset circuit between CPU [U1018] and HDMI SW2 [U1000].
If there is no problem, the HDMI SW2 [U1000] is faulty.
Replace with a new device.
Recheck from **check item (3-3.3)**.
If it does not work, replace the PCB.


YES

Go to next page.

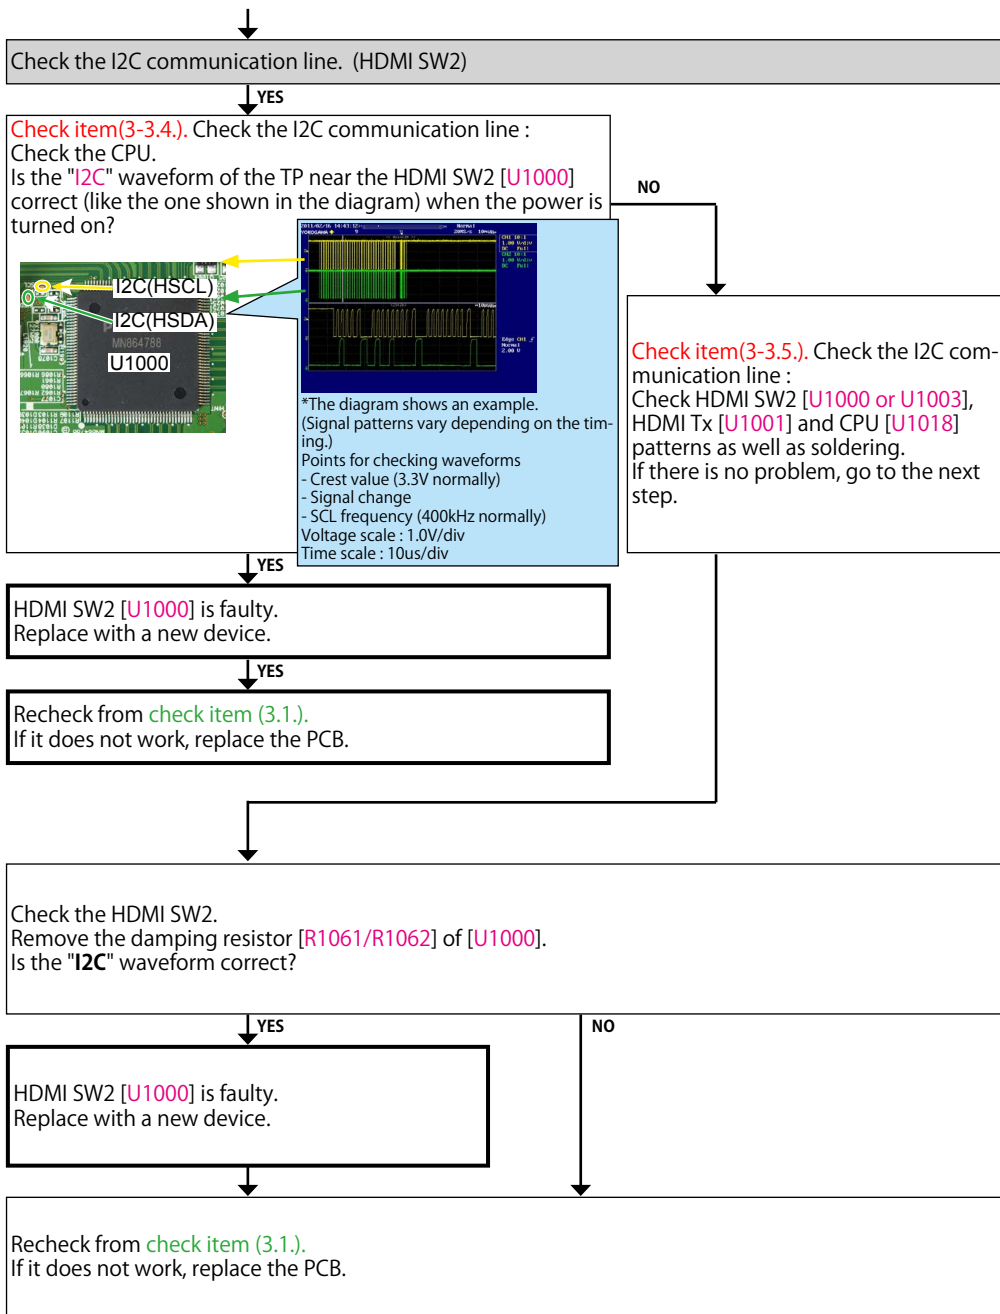

3-4. Error Code H1-06 failure detection procedure

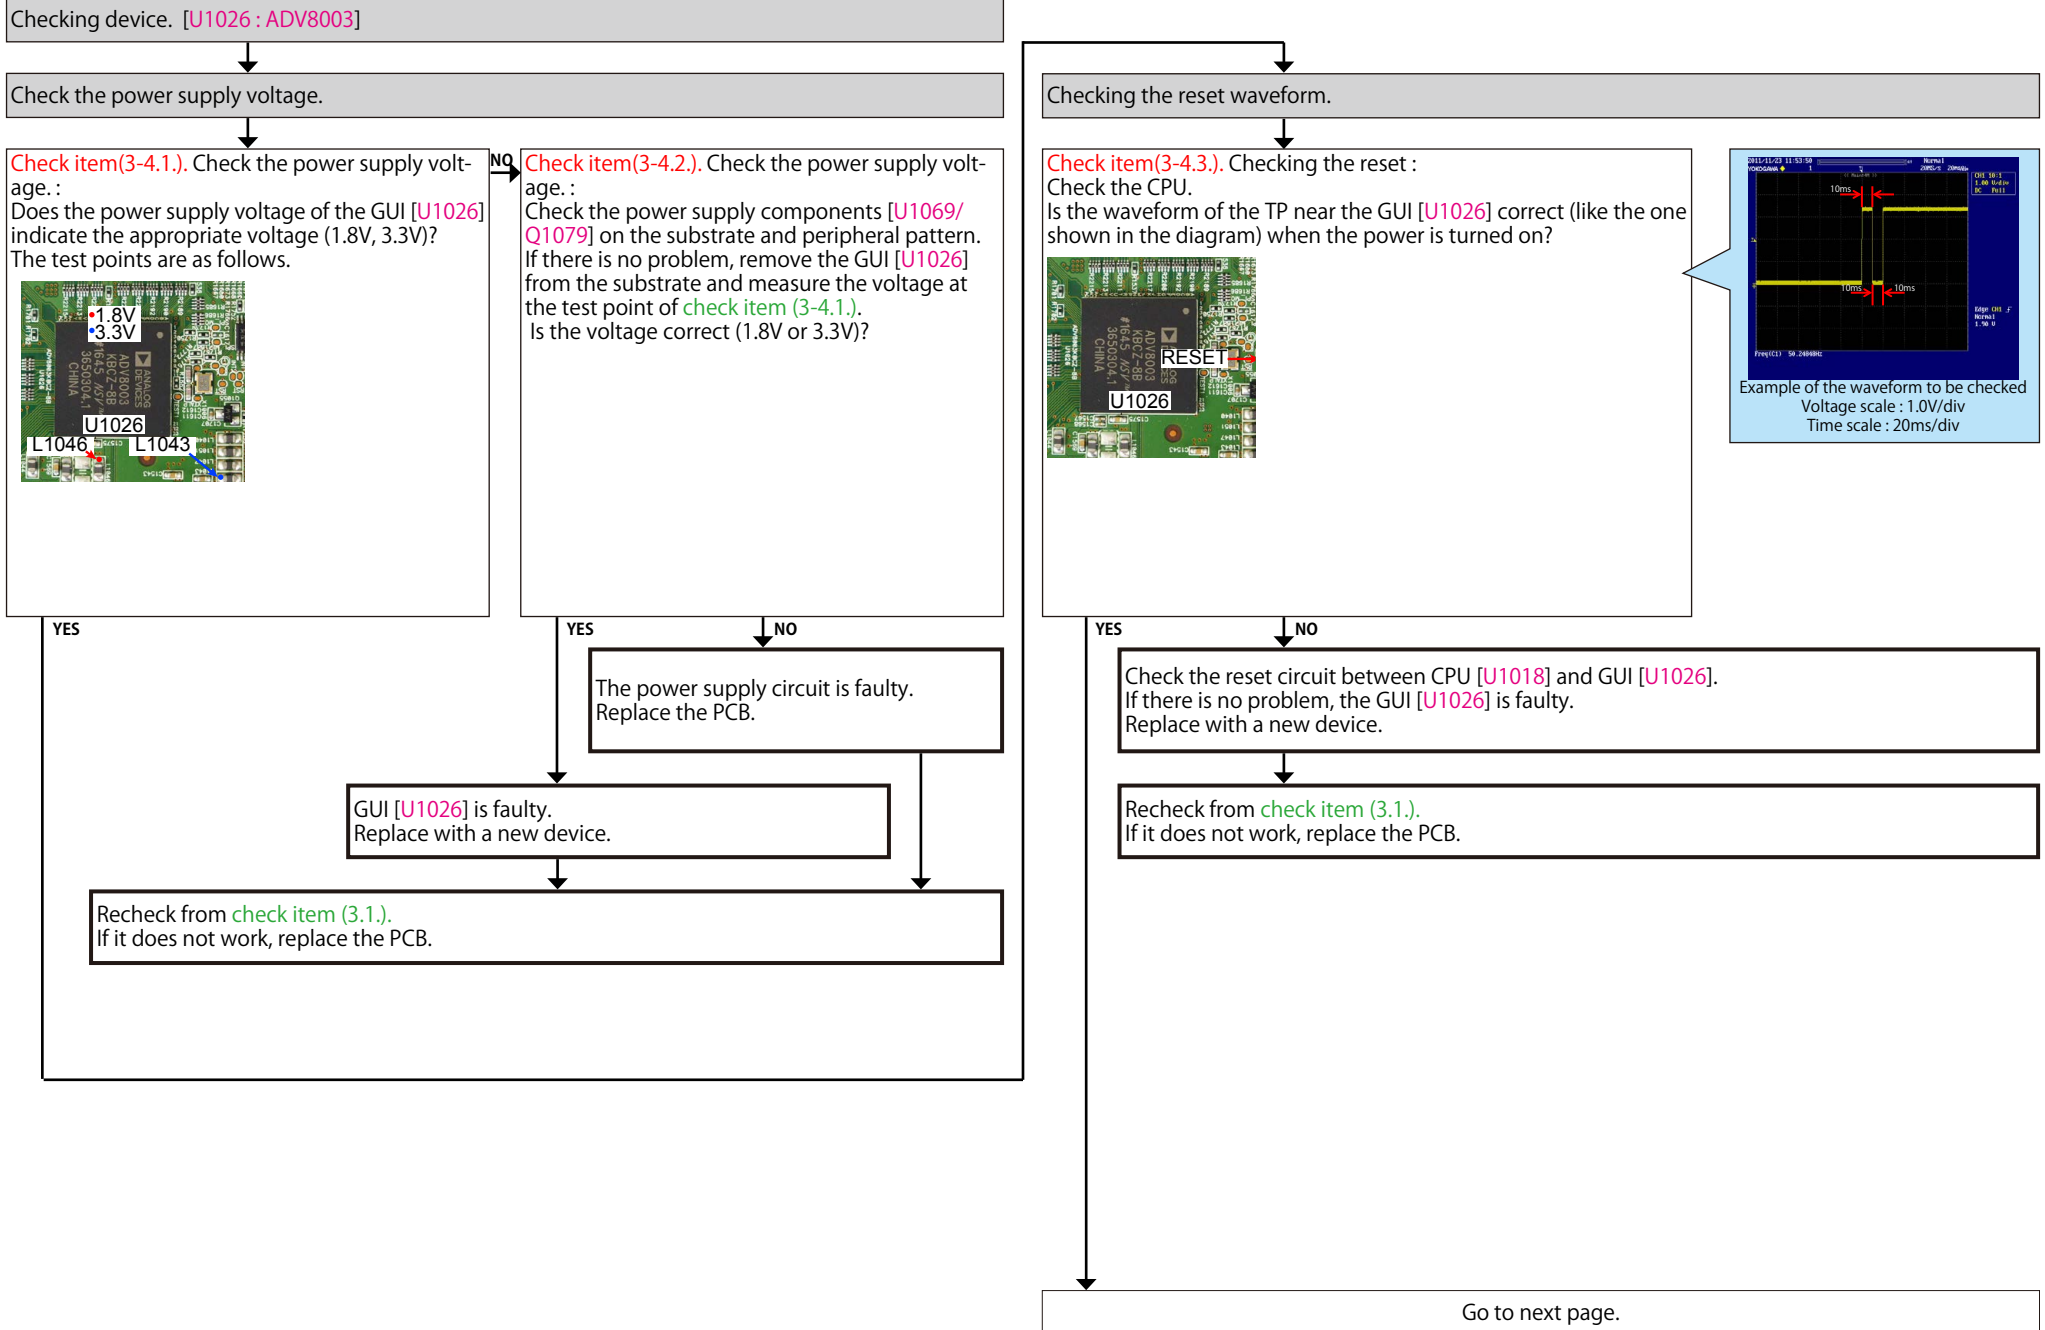

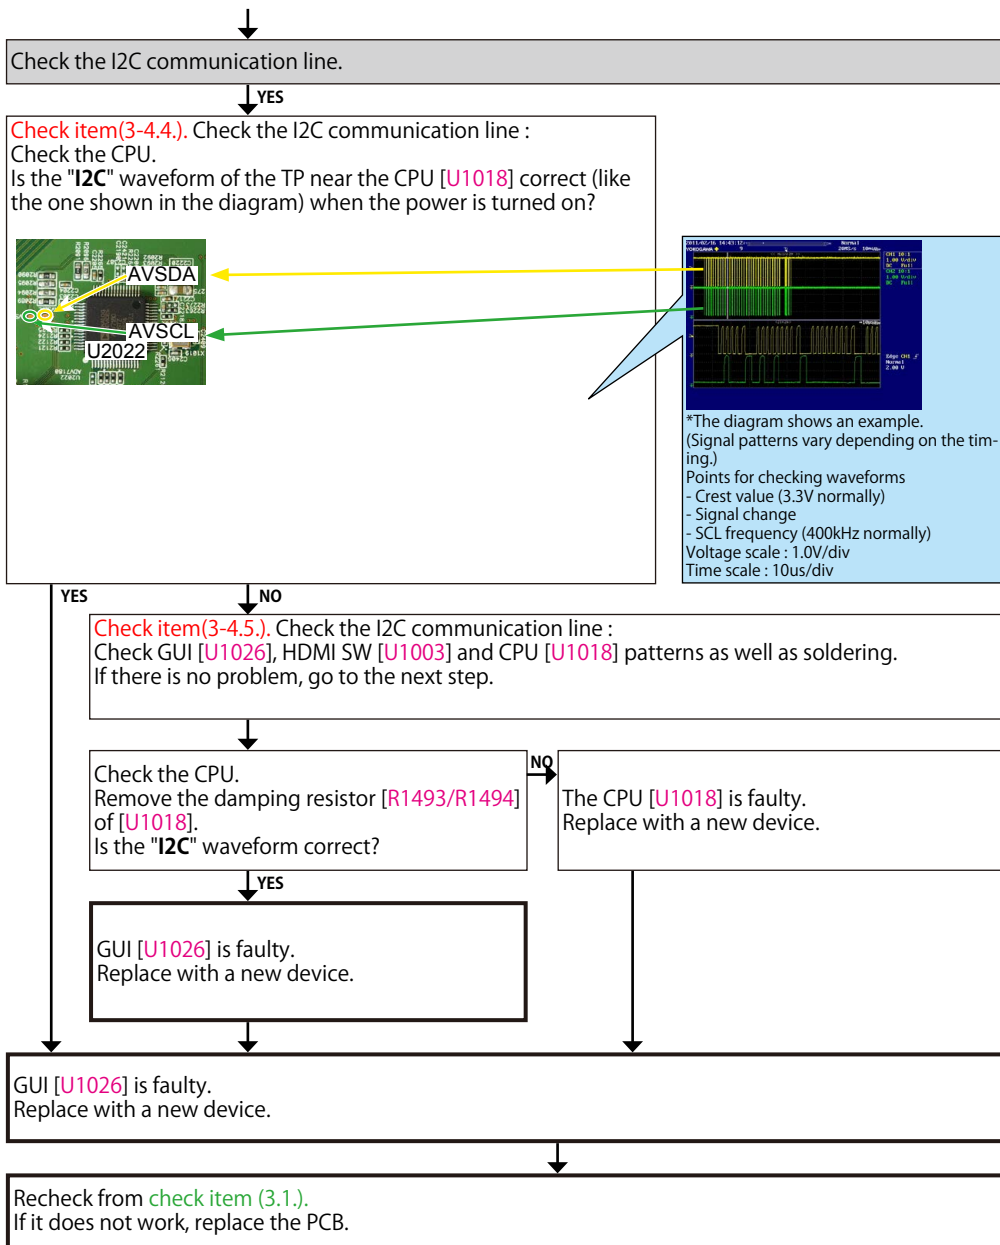

3-5. Error Code H1-14 failure detection procedure

Checking device. [U1028/U1029 : A3R12E40DBF-8E]

Check item(3-5.1).

Check soldering of IP SCALER [U1026], DDR2 [U1028/U1029] and its peripheral circuits.
Check soldering of the resistors [R1688/1689/1692/1695 to 1700/1703 to 1711] between IP SCALER and DDR2.
If there is no problem with soldering, [U1026/U1028/U1029] is defective. Replace their IC. Or replace the substrate.

3-6. Error Code H1-15 failure detection procedure

Checking device. [U1027 : W25Q128JVFIQ]

Check item(3-6.1).
Write to the GUI ROM.

Recheck from check item (3.1).
Does Error Code H1-15 continue?

NO

YES

Check item(3-6.2).
Replace [U1029] with a new device.

Recheck from check item (3.1).
Does Error Code H1-15 continue?

NO

YES

Go to check item (3-4.1).

Recheck from check item (3.2).

3-7. Error Code H1-05 failure detection procedure

Checking device. [U2022 : ADV7180]

Check item(3-7.1).
Replace [U2022] with a new device.
Recheck from check item (3.1).
Does Error Code H1-05 continue?

NO

YES

Replace the PCB.


Recheck from check item (3.2).

3-8. Error Code H1-08 failure detection procedure

Checking device. [U1073 : CS49844A]

Check the power supply voltage.

Check item(3-8.1). Check the power supply voltage.:
Does the power supply voltage of the DSP [U1073] indicate the appropriate voltage (1.0V, 3.3V)?
The test points are as follows.

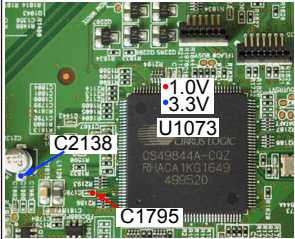

Check item(3-8.2). Check the power supply voltage.:
Check the power supply components [U1067/ U1068/Q1080] on the substrate and peripheral pattern.
If there is no problem, remove the DSP [U1073] from the substrate and measure the voltage at the test point of **check item (3-8.1)**.
Is the voltage correct (1.0V or 3.3V)?

YES

YES

NO



The power supply circuit is faulty.
Replace the PCB.

DSP [U1073] is faulty.
Replace with a new device.

Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

Checking the reset waveform.

Check item(3-8.3). Checking the reset :
Check the CPU.
Is the waveform of the TP near the DSP [U1073] correct (like the one shown in the diagram) when the power is turned on?

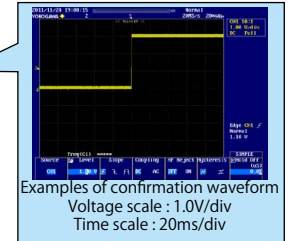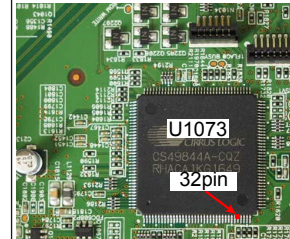


YES

NO


Check the reset circuit between CPU [U1018] and DSP [U1073].
If there is no problem, the DSP [U1073] is faulty.
Replace with a new device.


Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

Go to next page.

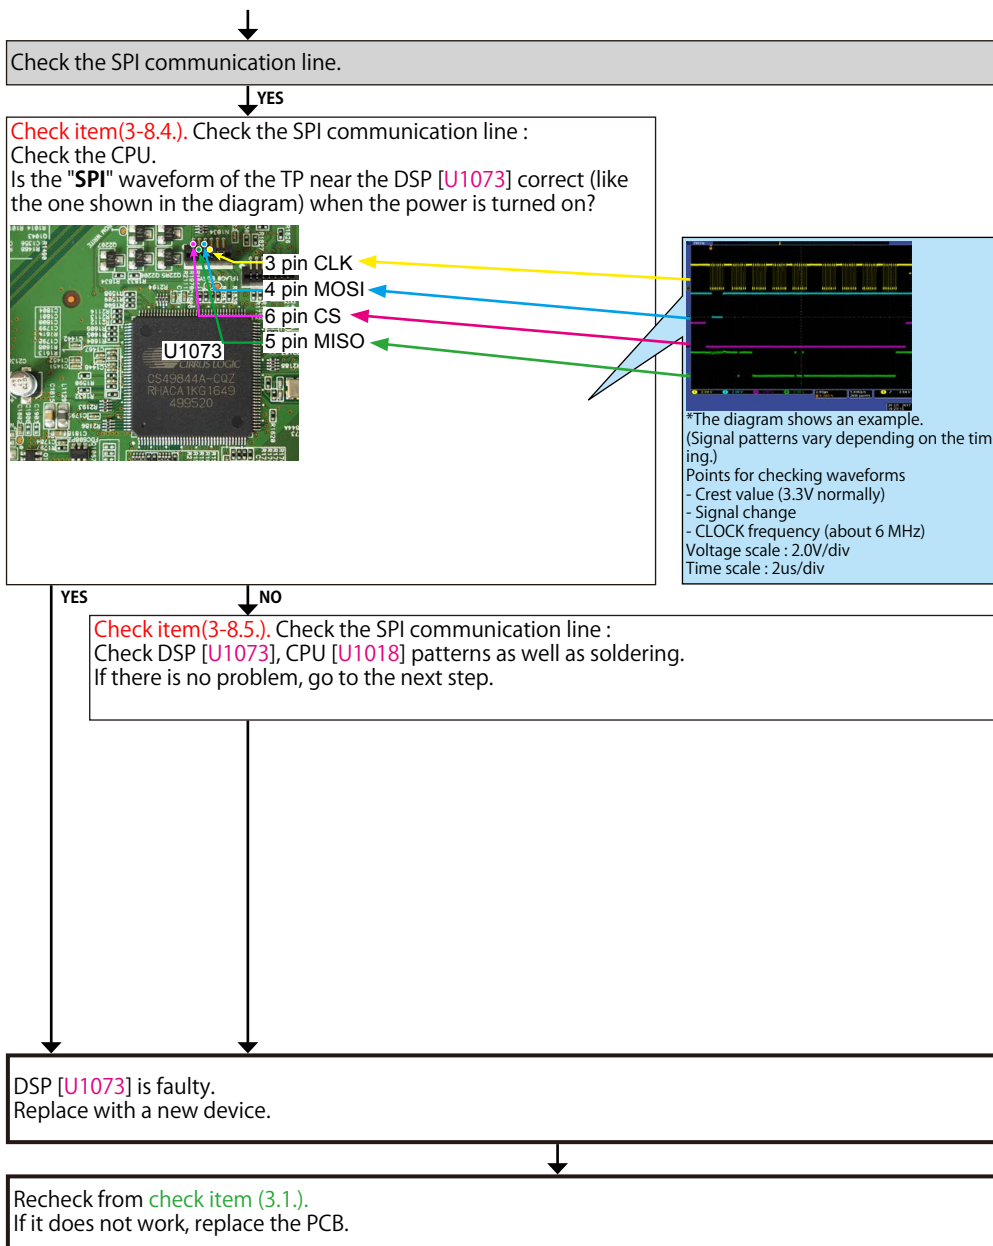

3-9. Error Code H1-12 failure detection procedure

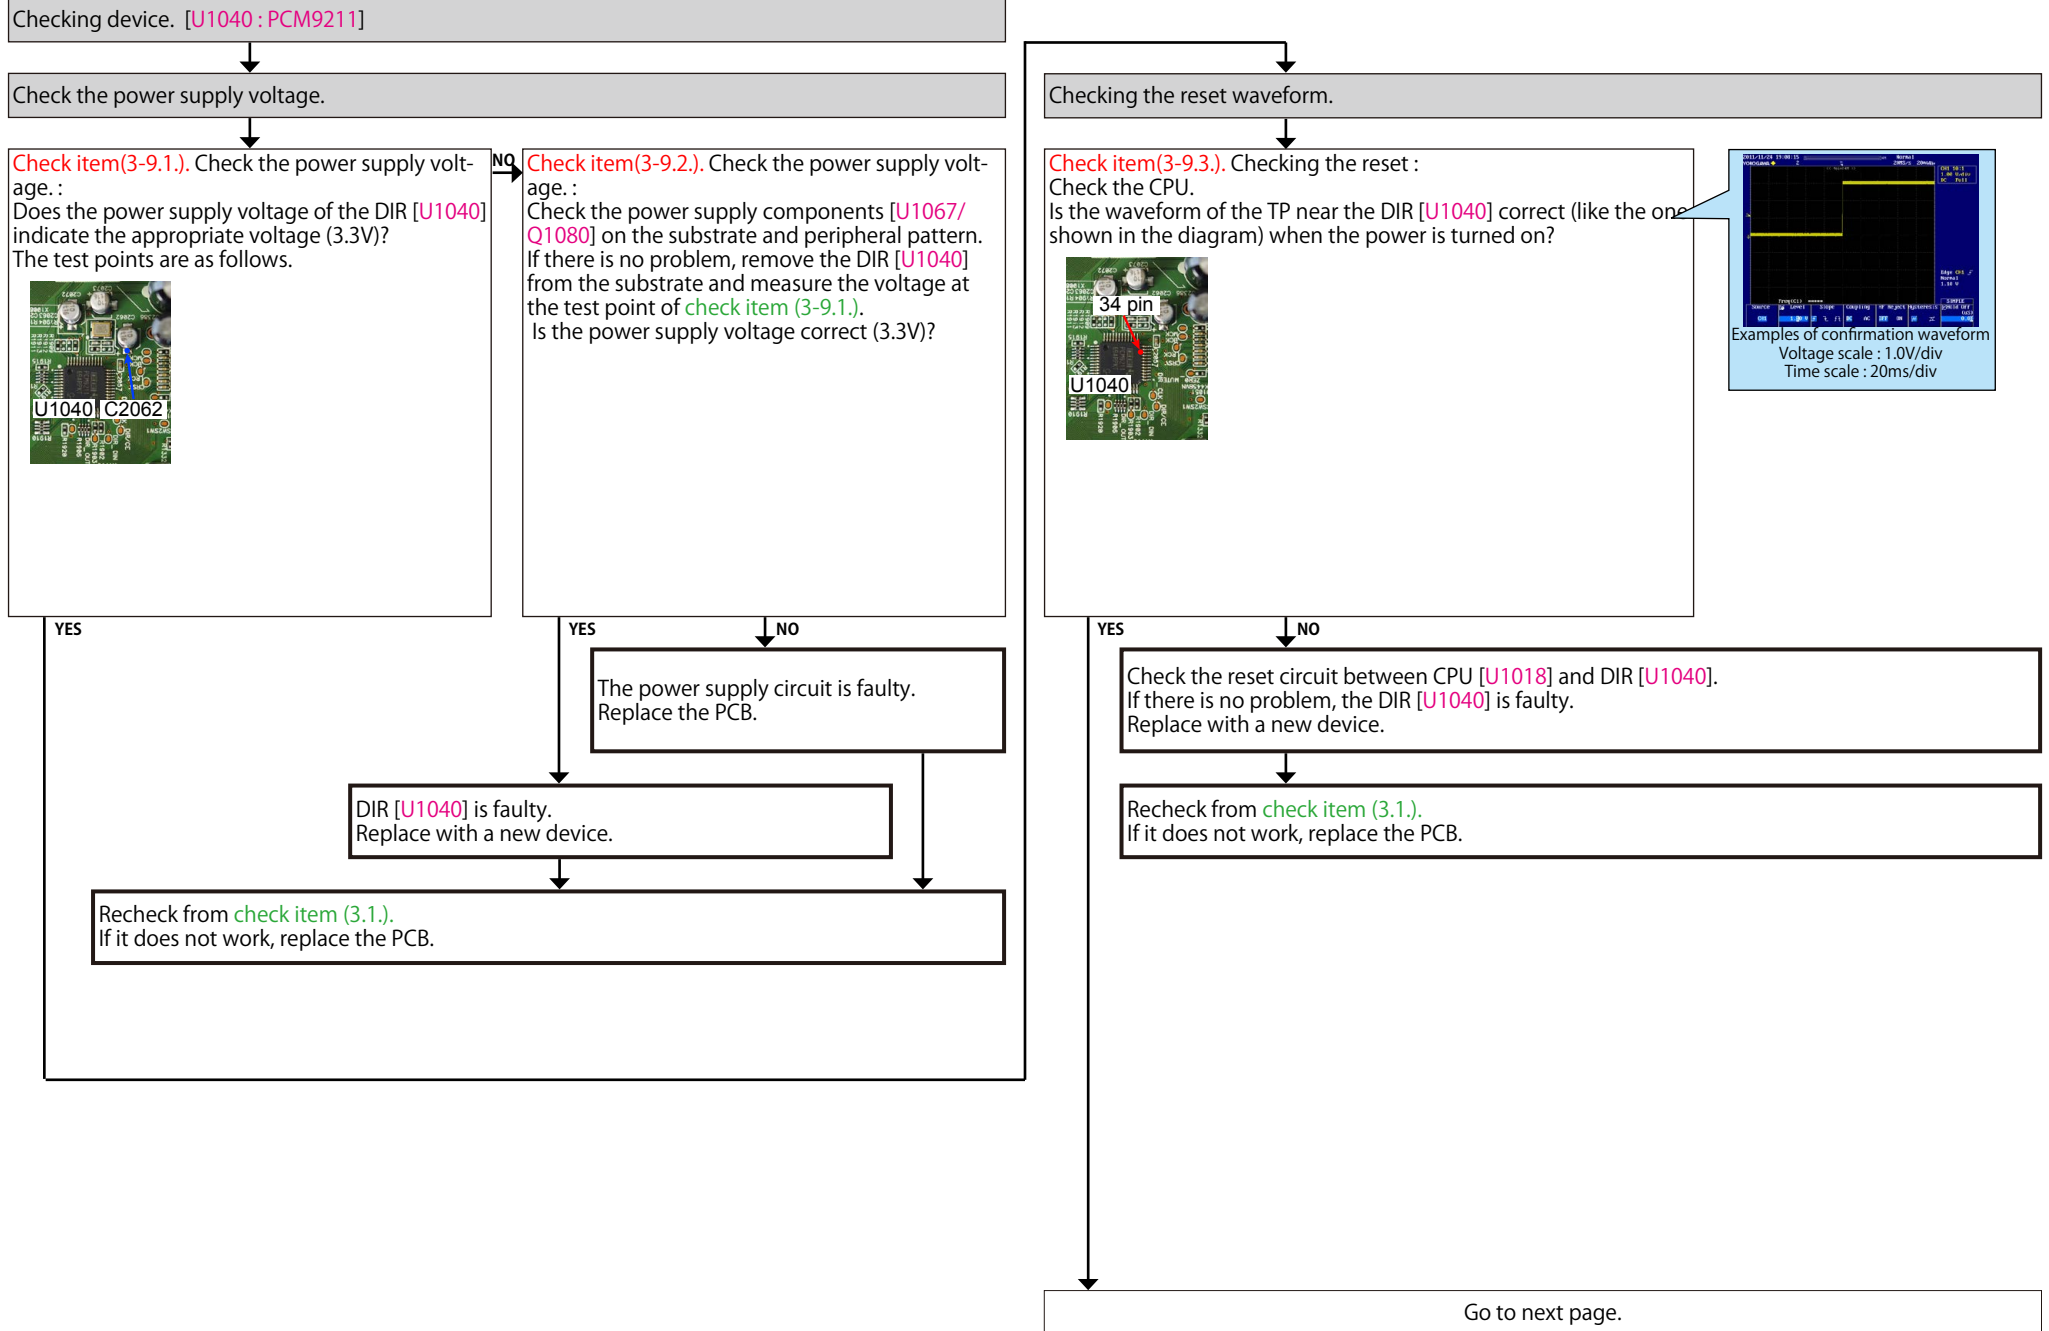

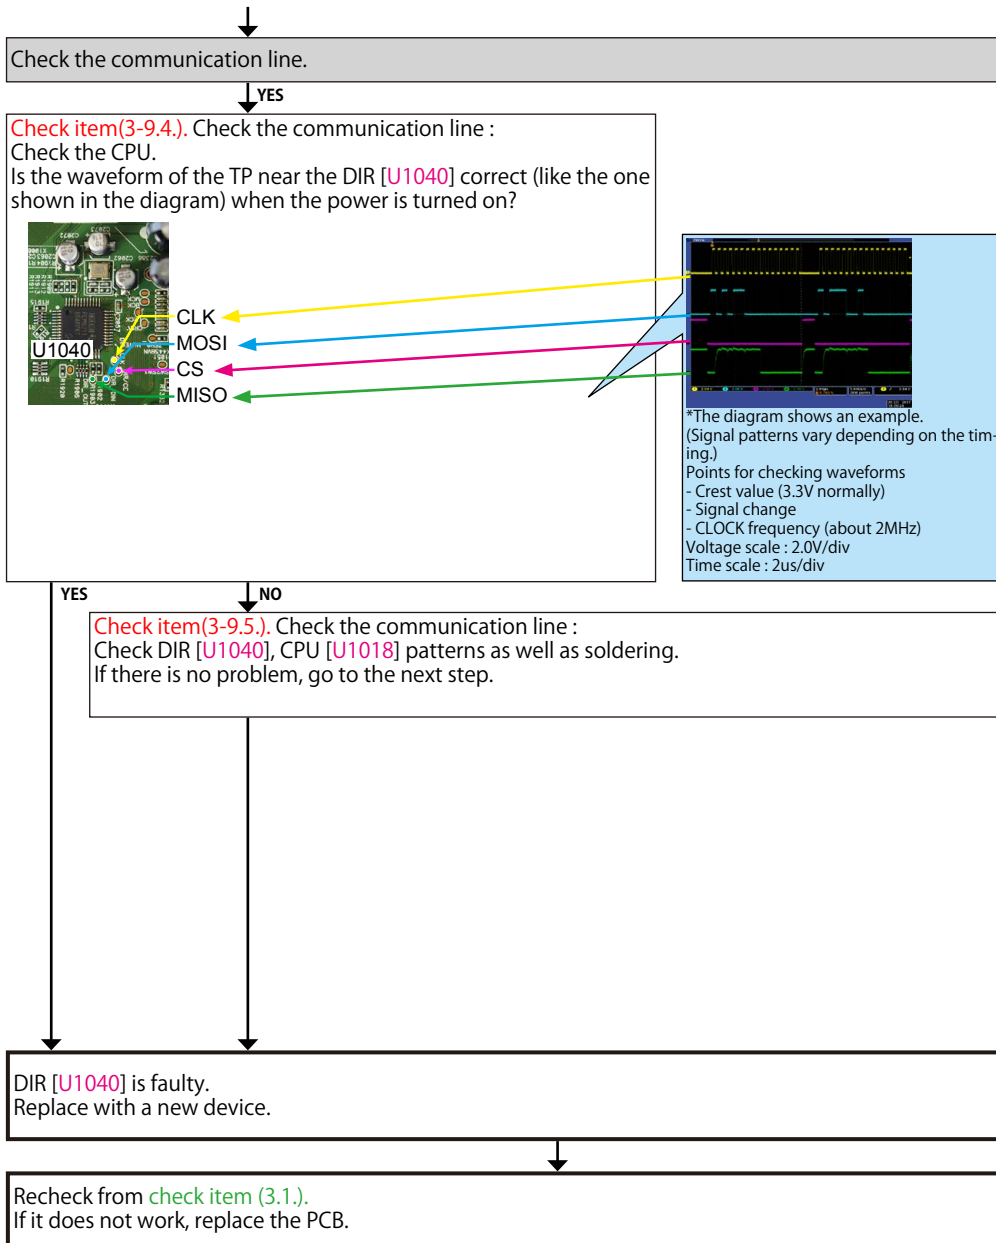


3-10. Error Code H1-16 failure detection procedure

Checking device. [U1007 : SiI9437]

Check the power supply voltage. (ARC IC)

Check item(3-10.1). Check the power supply voltage. :
Does the power supply voltage of the ARC IC [U1007] indicate the correct voltage (1.21V)?
The test points are as follows.
HDMI Rx2

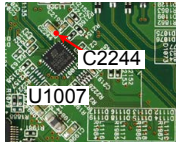

YES

NO

Check item(3-10.2). Check the power supply voltage. :
Check the power components [U1032] and the pattern on the substrate.
If there is no problem, remove the ARC IC [U1007] from the substrate and measure the voltage at the test point of **check item (3-10.1)**.
Is the power supply voltage correct (1.2V)?

YES

NO



Replace with a new device.

The power supply circuit is faulty.
Replace the PCB.

Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

Checking the reset waveform. (ARC IC)

Check item(3-10.3). Checking the reset waveform :
Check the waveform.
Is the "RESET" waveform of the ARC IC [U1007] correct (like the one shown in the diagram) when the power is turned on?
HDMI Rx2

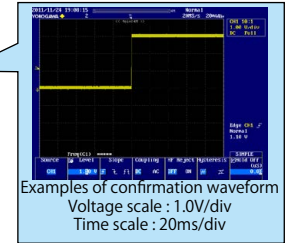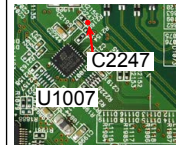


NO


Check the reset circuit between CPU [U1018] and ARC IC [U1007].
If there is no problem, the ARC IC [U1007] is faulty.
Replace with a new device.
Recheck from **check item (3.1)**.
If it does not work, replace the PCB.

YES

Go to next page.

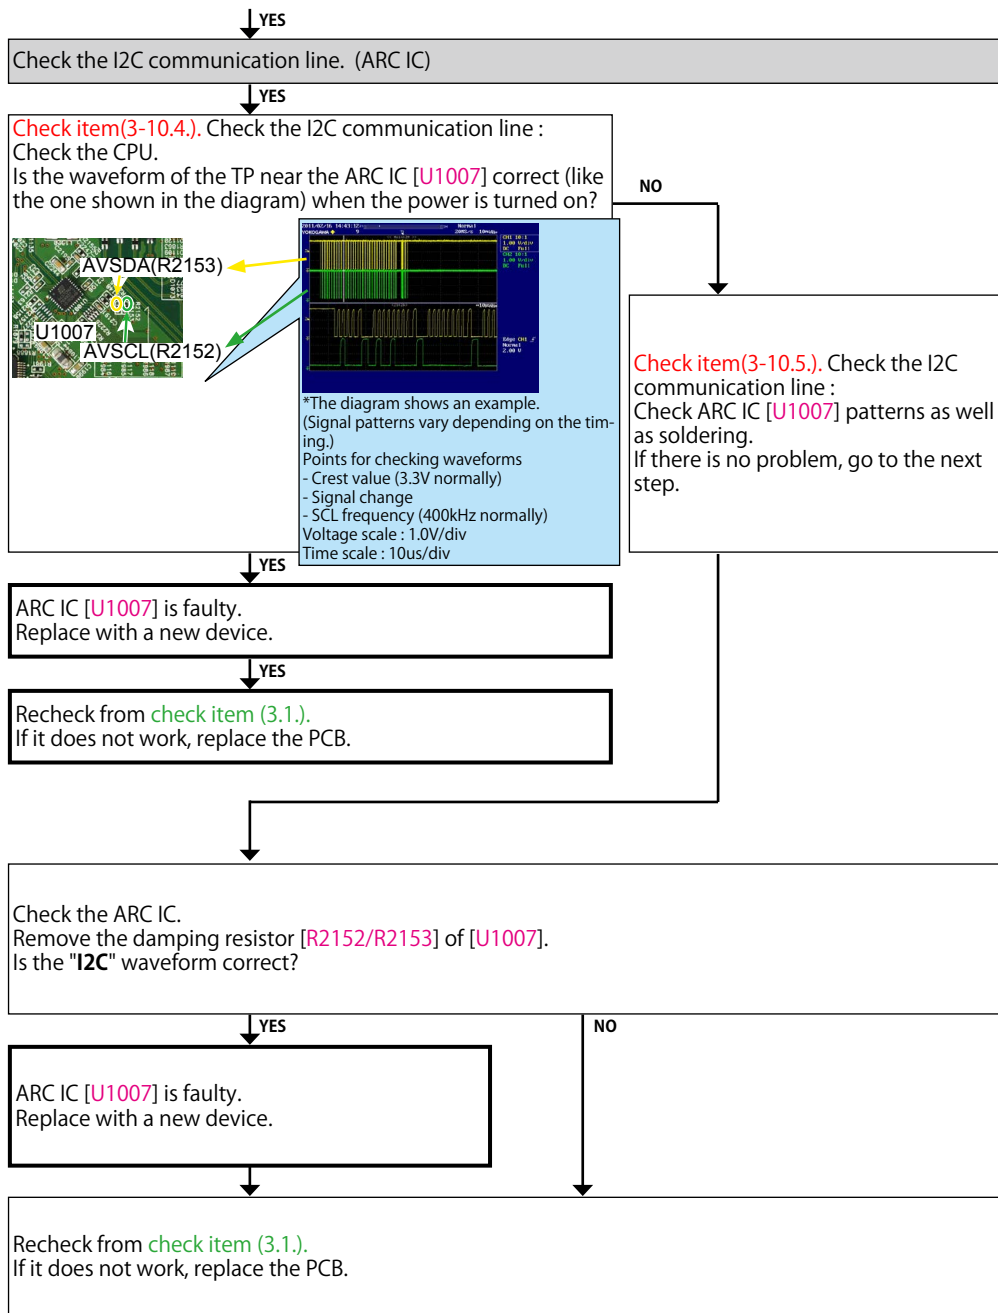

3-11. Switcher1 failure detection procedure




※ In order to check, connect the player to the HDMI terminal and configure the player as AVR source. Next, turn on the power for the player and TV and start playback on the player.

Checking the +5V/DDC status register (HDMI Switcher1)

Check item(3-11.1). Checking the 5V status register :
Send the following command from Termite.exe.

Send the command "i 002E 00FF 0001".

Case of IN5
Is the return value "C4 or C0" ?
(IN6 : "A2 or A0", IN7 : "91 or 90")

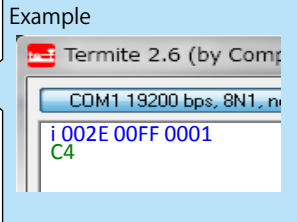


YES

NO

Go to **check item (3-11.3).**

Check item(3-11.2). Checking the DDC status register :
Send the following command from Termite.exe.

Case of IN5
Send the command "i 002B 0084 0001".
Case of IN6
Send the command "i 002B 0054 0001".
Case of IN7
Send the command "i 002B 0024 0001".

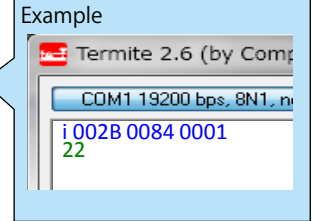

Move to the branch destination according to the value returned.

"00 or 04"
(Detection of DDC is not OK.)

Go to **check item (3-11.4).**

"22 or 11"
(Detection of DDC is OK)

Go to **check item (3-11.5).**

When the results of check item (3-11.1.) are "NO"
(Detection of 5V is not OK)

Check the +5V voltage. (HDMI IN5 - 7)

Check item(3-11.3.). Check the +5V voltage.
Does the test point near HDMI input terminal [N1005/N1006/N1007] indicate 5V?



YES

HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

NO


Check for a short circuit in the 5V line and the 5V Switch IC [U1002].
If there is no problem, the HDMI Switcher1 [U1003] or the 5 V Switch IC [U1002] is faulty.
Replace with a new device.

Recheck from check item (3.2.).
If it does not work, replace the PCB.

When the results of check item (3-11.2.) are "00 or 04"
(Detection of DDC is not OK.)

Check the DDC line. (HDMI IN5 - 7)

Check item(3-11.4.). Check the DDC line :
Are waveforms of "DDCSCK" and "DDCSDA" observed at the test point near the HDMI input terminal [N1005/N1006/N1007]?

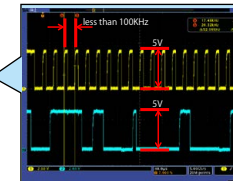

This diagram shows an example of the DDC communication waveform.
-The high level voltage is 5V.
-The frequency of the DDC CLK is 100kHz or less.
Check at each test point.
Voltage scale : 2.0V/div
Time scale : 40us/div



YES

HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

NO

Check for a short circuit in the DDC line.
If there is no problem, the HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

Recheck from check item (3.2.).
If it does not work, replace the PCB.

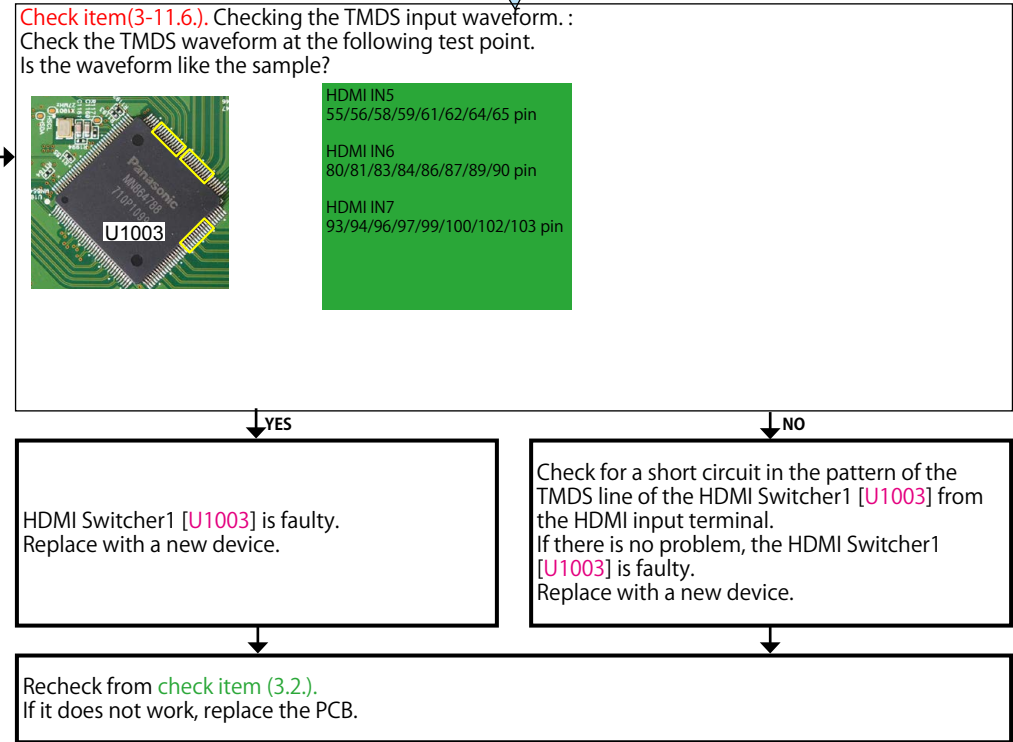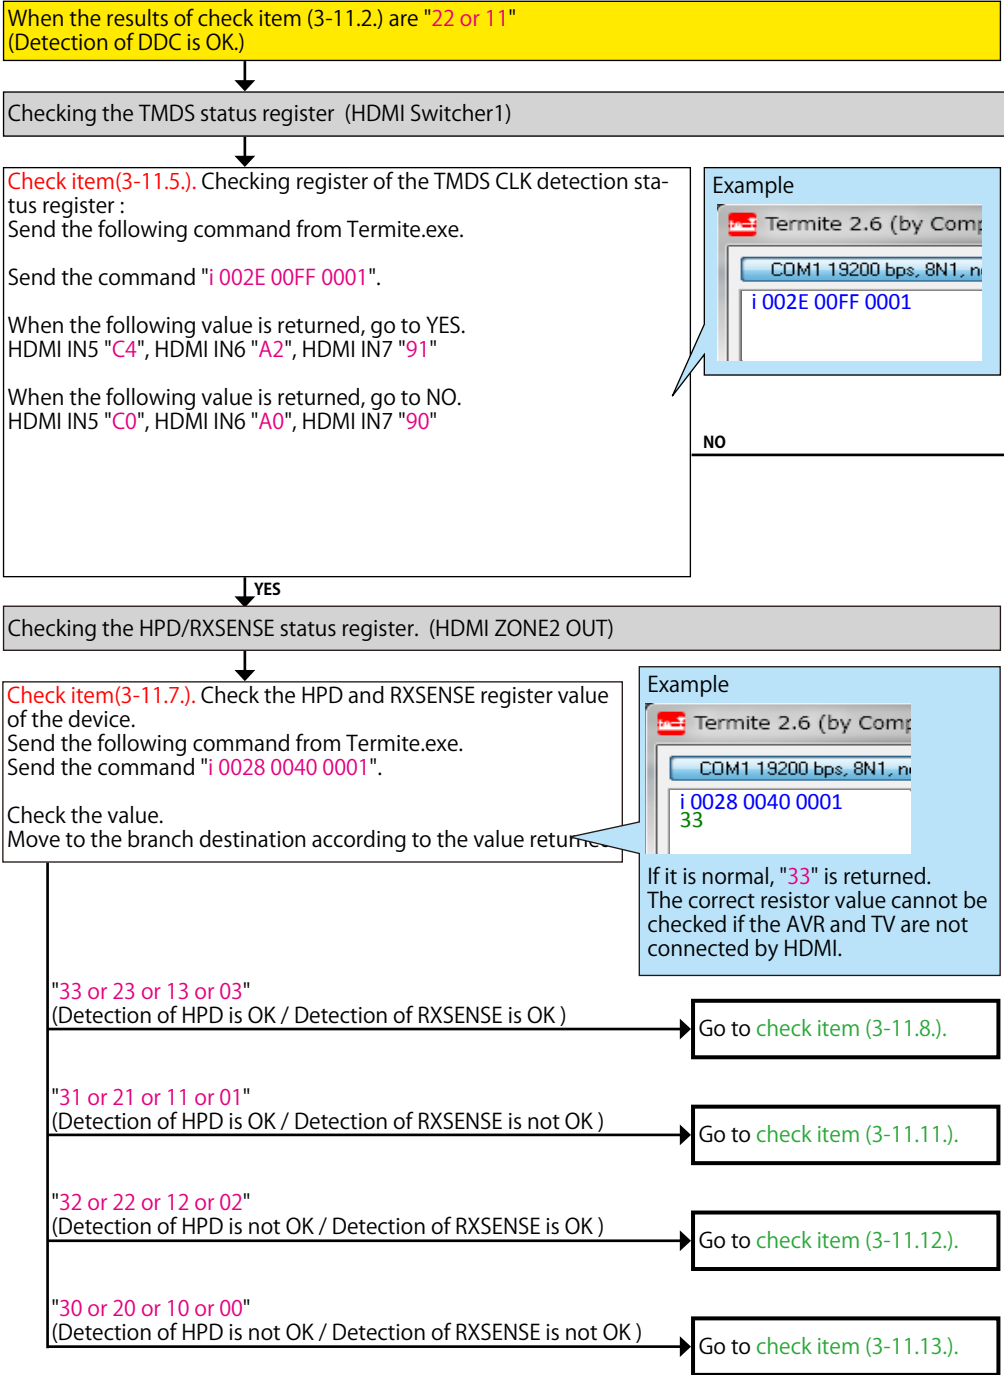

When the results of check item (3-11.7.) are "33 or 23 or 13 or 03"
(Detection of HPD is OK / Detection of RXSENSE is OK)

Checking the EDID register. (HDMI ZONE2 OUT)

Check item(3-11.8). Check the Monitor EDID :
 ① Unplug the AC cord. Plug the AC cord into a power outlet.
 ② Send the transmission command "m_3" from Termite.exe.
 Are the first eight bytes of the returned value "00FFFFFFFFF00"?

Example

The first eight bytes are normally "00FFFFFFFFF00".
 The correct resistor value cannot be checked if the AVR and TV are not connected by HDMI.

YES **NO**

Example of waveform in check ①
 Voltage scale : 1.0V/div
 Time scale : 20ms/div

Example of waveform in check ②
 Voltage scale : 1.0V/div
 Time scale : 1s/div

This diagram shows an example of the DDC communication waveform.
 -The high level voltage is 5V.
 -The frequency of the DDC CLK is 100kHz or less.
 Check at each test point.
 Voltage scale : 2.0V/div
 Time scale : 40us/div

Check item(3-11.9). Checking the TMDS :
 Check the TMDS waveform at the following test point.

Check item(3-11.10). Check the communication :
 Do "CK" and "DA" indicate (5V) at the test point near HDMI output connector [N1030]?

YES **NO**

Check for a short circuit in the TMDS line.
 If there is no problem, the HDMI Switcher1 [U1003] is faulty.
 Replace with a new device.

YES **NO**

Check for a short circuit in the DDC line.
 If there is no problem, the HDMI Switcher1 [U1003] is faulty.
 Replace with a new device.

HDMI Switcher1 [U1003] is faulty.
 Replace with a new device.


HDMI Switcher1 [U1003] is faulty.
 Replace with a new device.

Recheck from check item (3.2).
 If it does not work, replace the PCB.

When the results of check item (3-11.7.) are "31 or 21 or 11 or 01"
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Check the TMDS. (HDMI ZONE2 OUT)

Check item(3-11.11.). Checking the RXSENSE :
Does the test point near HDMI output terminal [N1030] indicate (3.3V)?

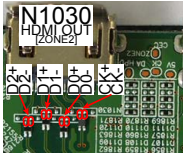

YES NO

Check for a short circuit in the TMDS line.
If there is no problem, the HDMI Switcher1 [U1003] is faulty.
Replace with a new device.


HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

Recheck from check item (3.2.).
If it does not work, replace the PCB.

When the results of check item (3-11.7.) are "32 or 22 or 12 or 02"
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Check the HPD. (HDMI ZONE2 OUT)

Check item(3-11.12.). Checking the HPD :
Does the test point near HDMI output terminal [N1030] indicate Hi(3-5V)?

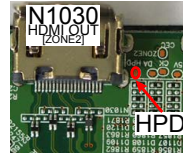

YES NO

Check for a short circuit in the HPD line.
If there is no problem, the HDMI Switcher1 [U1003] is faulty.
Replace with a new device.


HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

Recheck from check item (3.2.).
If it does not work, replace the PCB.

When the results of check item (3-11.7.) are "30 or 20 or 10 or 00"
(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Check the TMDS/HPD. (HDMI ZONE2 OUT)

Check item(3-11.13.). Checking the HPD and RXSENSE. :
Does the test point near HDMI output terminal [N1030] indicate (3.3V)?
Does the test point (HPD) near HDMI output terminal [N1030] indicate "Hi(3-5V)"?

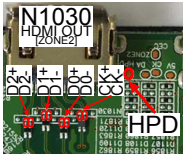


YES NO

Check for a short circuit in the TMDS/HPD line.
If there is no problem, the HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

Recheck from check item (3.2).
If it does not work, replace the PCB.

3-12. Switcher2 failure detection procedure

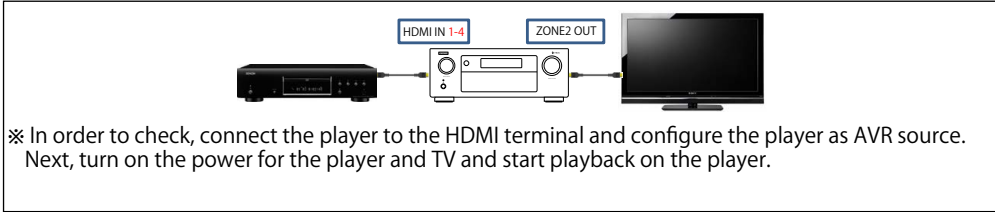


Checking the +5V/DDC status register (HDMI Switcher2)

Check item(3-12.1). Checking the 5V status register :
Send the following command from Termite.exe.

Send the command "i 0056 00FF 0001".

Case of IN1
Is the return value "88 or 80" ?
(IN2 : "44 or 40", IN3 : "22 or 20", IN4 : "11 or 10")

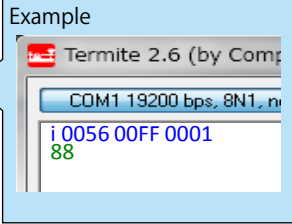

YES


NO

Go to **check item (3-12.3).**

Check item(3-12.2). Checking the DDC status register :
Send the following command from Termite.exe.

Case of IN1
Send the command "i 0053 00B4 0001".
Case of IN2
Send the command "i 0053 0084 0001".
Case of IN3
Send the command "i 0053 0054 0001".
Case of IN4
Send the command "i 0053 0024 0001".

Move to the branch destination according to the value returned.

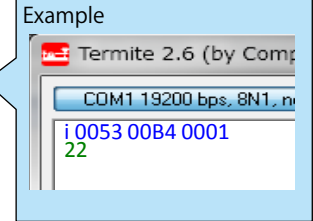

"00 or 04"
(Detection of DDC is not OK.)

Go to **check item (3-12.4).**


"22 or 11"
(Detection of DDC is OK)

Go to **check item (3-12.5).**

When the results of check item (3-12.1.) are "NO"
(Detection of 5V is not OK)

Check the +5V voltage. (HDMI IN1 - 4)

Check item(3-12.3.). Check the +5V voltage.
Does the test point near HDMI input terminal [N1001/N1002/N1003/N1004] indicate 5V?

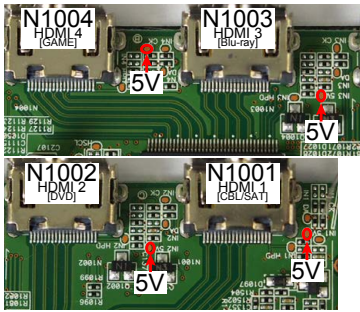

YES

HDMI Switcher2 [U1000] is faulty.
Replace with a new device.

NO


Check for a short circuit in the 5 V line and the 5 V Switch IC [U1002].
If there is no problem, the HDMI Switcher2 [U1000] or the 5 V Switch IC [U1002] is faulty.
Replace with a new device.

Recheck from check item (3.3.).
If it does not work, replace the PCB.

When the results of check item (3-12.2.) are "00 or 04"
(Detection of DDC is not OK)

Check the DDC line. (HDMI IN1 - 4)


Check item(3-12.4.). Check the DDC line :
Are waveforms of "DDCSCK" and "DDCSDA" observed at the test point near the HDMI input terminal [N1001/N1002/N1003/N1004]?

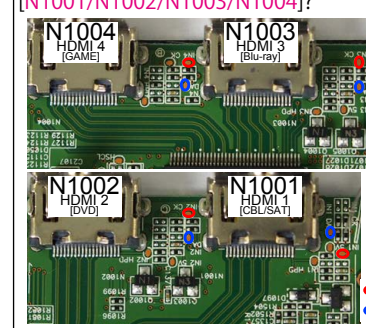

YES

HDMI Switcher2 [U1000] is faulty.
Replace with a new device.

Recheck from check item (3.3.).
If it does not work, replace the PCB.

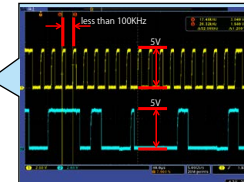

This diagram shows an example of the DDC communication waveform.
-The high level voltage is 5V.
-The frequency of the DDC CLK is 100kHz or less.
Check at each test point.
Voltage scale : 2.0V/div
Time scale : 40us/div

NO

Check for a short circuit in the DDC line.
If there is no problem, the HDMI Switcher2 [U1000] is faulty.
Replace with a new device.

When the results of check item (3-12.2.) are "22 or 11"
(Detection of DDC is OK.)


Checking the TMDS status register (HDMI Switcher2)

Check item(3-12.5). Checking register of the TMDS CLK detection status register :

Send the following command from Termit.exe.
Send the command "i 0056 00FF 0001".

When the following value is returned, go to YES.
HDMI IN1 "88", HDMI IN2 "44", HDMI IN3 "22", HDMI IN4 "11"

When the following value is returned, go to NO.
HDMI IN1 "80", HDMI IN2 "40", HDMI IN3 "20", HDMI IN4 "10"

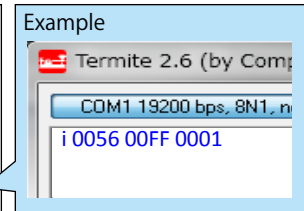

NO


YES

Checking the TMDS status register (HDMI Switcher2 -> HDMI Switcher1)

Check item(3-12.7). Check the TMDS CLK detection status of the register.

Send the following command from Termit.exe.
Send the command "i 002E 00FF 0001".

Is the return value "88" ?

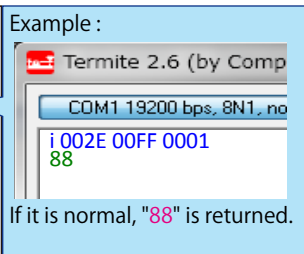

If it is normal, "88" is returned.

NO

YES

HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

Recheck from check item (3.3).
If it does not work, replace the PCB.

Check item(3-12.6). Checking the TMDS input waveform. :
Check the TMDS waveform at the following test point.
Is the waveform like the sample?



- HDMI IN1
42/43/45/46/48/49/51/52 pin
- HDMI IN2
55/56/58/59/61/62/64/65 pin
- HDMI IN3
80/81/83/84/86/87/89/90 pin
- HDMI IN4
93/94/96/97/99/100/ 102/103 pin

YES

NO

HDMI Switcher2 [U1000] is faulty.
Replace with a new device.

Check for a short circuit in the pattern of the TMDS line of the HDMI Switcher2 [U1000] from the HDMI input terminal.
If there is no problem, the HDMI Switcher2 [U1000] is faulty.
Replace with a new device.

Recheck from check item (3.3).
If it does not work, replace the PCB.

Check item(3-12.8). Checking the TMDS input waveform. :
Check the TMDS waveform at the following test point.
Is the waveform like the sample?




42/43/45/46/48/49/51/52 pin


YES

NO


Check for a short circuit in the TMDS line.
If there is no problem, the HDMI Switcher2 [U1000] is faulty.
Replace with a new device.

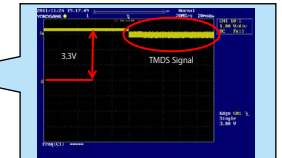


Example of waveform in check ①
Voltage scale : 1.0V/div
Time scale : 20ms/div

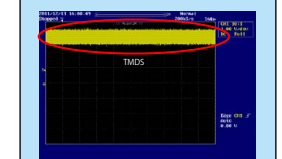

Example of waveform in check ②
Voltage scale : 1.0V/div
Time scale : 1s/div

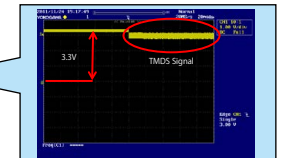

Example of waveform in check ①
Voltage scale : 1.0V/div
Time scale : 20ms/div

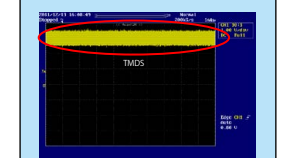

Example of waveform in check ②
Voltage scale : 1.0V/div
Time scale : 1s/div

3-13. Tx failure detection procedure

Check the output terminal.

Check item(3-13.1). Check the video output port for failure. :
Check the Monitor 1 output video signal is correct.

After checking the Monitor 1, change the HDMI cable connection from OUT1 to OUT2.
Turn off the AV AMP and turn it on again.
To check under the same conditions, use the same procedure as that for checking Monitor 1 when checking the Monitor 2 output.


No video signal is output from both Monitor 1 and
Monitor 2.

Also, No video signal is output from Monitor 1 only.

Go to [check item \(3-13.2\).](#)

No video signal is output from Monitor 2 only.

Go to [check item \(3-13.11\).](#)

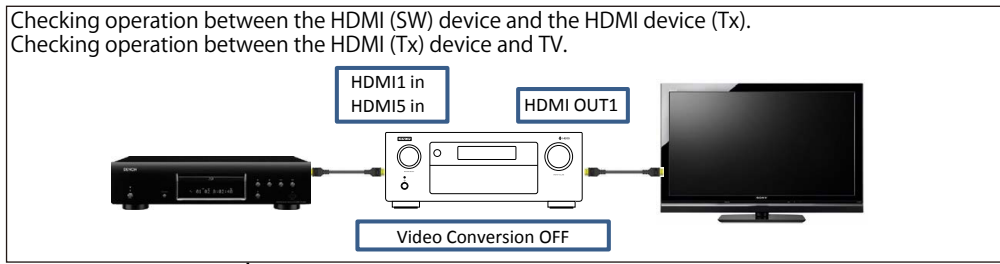

Checking the TMDS status register (Switcher1/2 -> HDMI Tx)

Check item(3-13.2). Check the TMDS CLK detection status of the register.
Send the following command from Termit.exe.


Send the command "i 0006 00FF 0001".
When checking the signal path from HDMI1 to HDMI OUT1
"72" : Go to YES.
"74" : Go to No.

When checking the signal path from HDMI5 IN to HDMI OUT1
"71" : Go to YES.
"74" : Go to No.

Example


YES

The first operation : Checking between Monitor 1 and the TV.
Go to [check item \(3-13.4\).](#)
Next operation : Checking between Monitor 2 and the TV.
Go to [check item \(3-13.11\).](#)

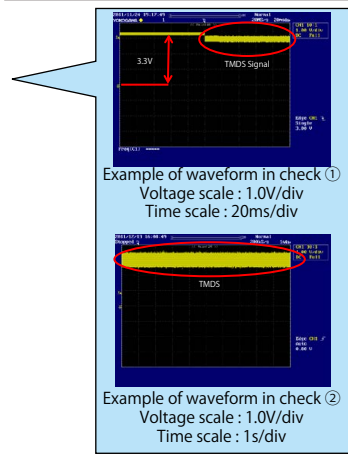

NO

Check item(3-13.3). Checking the TMDS input :
TMDS waveform at the following points.

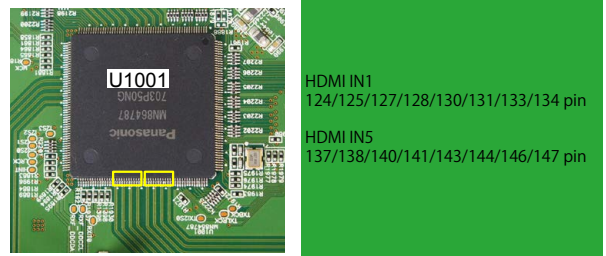

NO

HDMI Tx [U1001] is faulty.
Replace with a new device.

YES

Recheck from [check item \(3.4\).](#)
If it does not work, replace the PCB.

NO

Case of HDMI IN1
HDMI Switcher2 [U1000] is faulty.
Replace with a new device.


Case of HDMI IN5
HDMI Switcher1 [U1003] is faulty.
Replace with a new device.

Checking between Monitor1 and the TV.
Connect Monitor1 to the TV and check the following items with the TV turned on.

Checking the HPD/RXSENSE status register. (HDMI Tx -> Monitor)

Check item(3-13.4). Check the HPD and RXSENSE register value of the HDMI TX device :
Send the following command from Termit.exe.
Send the command "i 0000 0040 0001".
Move to the branch destination according to the value returned.

Example

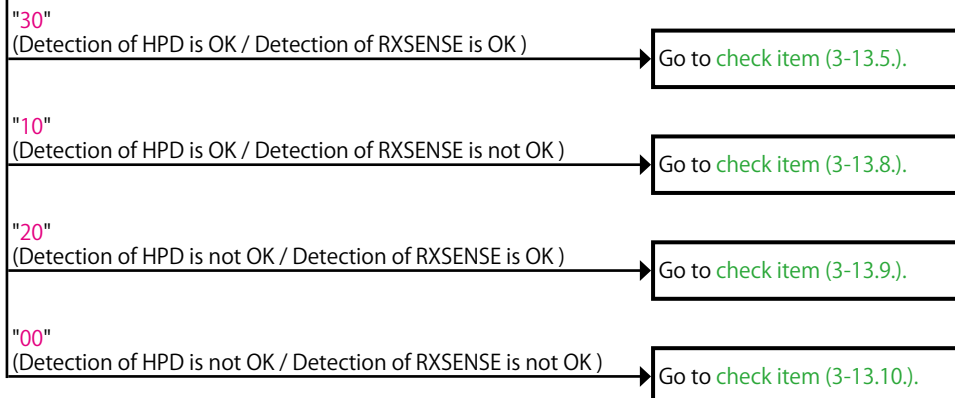

When the results of check item (3-13.4.) are "30"
(Detection of HPD is OK / Detection of RXSENSE is OK)

Checking the EDID register. (HDMI OUT1)

Check item(3-13.5). Check the Monitor EDID :
 ① Unplug the AC cord. Plug the AC cord into a power outlet.
 ② Send the transmission command "m_1" from Termite.exe.
 Are the first eight bytes of the returned value "00FFFFFFFFF00"?

Example

The first eight bytes are normally "00FFFFFFFFF00".
 The correct resistor value cannot be checked if the AVR and TV are not connected by HDMI.

YES **NO**

Example of waveform in check ①
 Voltage scale : 1.0V/div
 Time scale : 20ms/div

This diagram shows an example of the DDC communication waveform.
 -The high level voltage is 5V.
 -The frequency of the DDC CLK is 100kHz or less.
 Check at each test point.
 Voltage scale : 2.0V/div
 Time scale : 40us/div

Check item(3-13.6). Checking the TMDS :
 Check the TMDS waveform at the following test point.

Check item(3-13.7). Check the communication :
 Are the waveforms for "CKL" and "DATA" at the test point near the HDMI output connector [N1031] correct (as shown in the figure)?

YES **NO**

Check for a short circuit in the TMDS line.
 If there is no problem, the HDMI Tx [U1001] is faulty.
 Replace with a new device.

YES **NO**

Check for a short circuit in the DDC line.
 If there is no problem, the HDMI Tx [U1001] is faulty.
 Replace with a new device.

HDMI Tx [U1001] is faulty.
 Replace with a new device.


HDMI Tx [U1001] is faulty.
 Replace with a new device.

Recheck from check item (3.4).
 If it does not work, replace the PCB.

When the results of check item (3-13.4.) are "10"
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Check the TMDS. (HDMI OUT1)

Check item(3-13.8). Checking the RXSENSE :
Does the test point near HDMI output terminal [N1031] indicate (3.3V)?

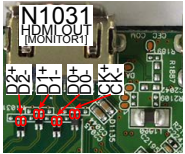

YES NO

Check for a short circuit in the TMDS line.
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.


HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

When the results of check item (3-13.4.) are "20"
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Check the HPD. (HDMI OUT1)

Check item(3-13.9). Checking the HPD :
Does the test point (HPD) near HDMI output terminal [N1031] indicate "Hi(3-5V)"?

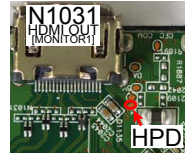

YES NO

Check for a short circuit in the HPD line.
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.


HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

When the results of check item (3-13.4.) are "00"
(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Check the TMDS/HPD. (HDMI OUT1)

Check item(3-13.10.). Checking the HPD and RXSENSE. :
Does the test point near HDMI output terminal [N1031] indicate (3.3V)?
Does the test point (HPD) near HDMI output terminal [N1031] indicate "Hi(3-5V)"?

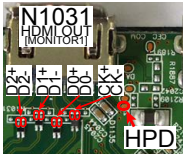

YES NO

Check for a short circuit in the TMDS/HPD line.
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.


HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

Checking between Monitor 2 and the TV.
Connect Monitor2 to the TV and check the following items with the TV turned on.

Checking the HPD/RXSENSE status register. (HDMI OUT2)

Check item(3-13.11). Check the HPD and RXSENSE register value of the HDMI TX device. :
Send the following command from Termite.exe.
Send the command "i 0000 0040 0001".
Move to the branch destination according to the value returned.

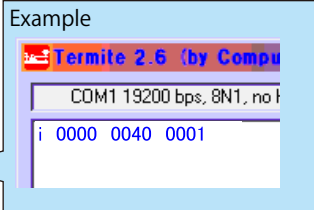

"03"
(Detection of HPD is OK / Detection of RXSENSE is OK)

Go to [check item \(3-13.12\).](#)

"01"
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Go to [check item \(3-13.15\).](#)

"02"
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Go to [check item \(3-13.16\).](#)

"00"
(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Go to [check item \(3-13.17\).](#)

When the results of check item (3-13.11.) are "03"
(Detection of HPD is OK / Detection of RXSENSE is OK)

Checking the EDID register. (OUT2)

Check item(3-13.12.). Check the Monitor EDID :
 ① Unplug the AC cord. Plug the AC cord into a power outlet.
 ② Send the transmission command "m_2" from Termite.exe.
 Are the first eight bytes of the returned value "00FFFFFFFFF00"?

Example

The first eight bytes are normally "00FFFFFFFFF00".
 *If the AVR and the TV are not connected via HDMI, the correct register value cannot be verified.

YES

NO

Check item(3-13.13.). Checking the TMDS :
 Check the TMDS waveform at the following test point.

Check item(3-13.14.). Check communication with the monitor :
 Are waveforms of "DDCSCK" and "DDCSDA" observed at the test point near the HDMI output terminal [N1037]?

This diagram shows an example of the DDC communication waveform.
 -The high level voltage is 5V.
 -The frequency of the DDC CLK is 100kHz or less.
 Check at each test point.
 Voltage scale : 2.0V/div
 Time scale : 40us/div

YES NO

YES NO

Check for a short circuit in the TMDS line.
 If there is no problem, the HDMI Tx [U1001] is faulty.
 Replace with a new device.

HDMI Tx [U1001] is faulty.
 Replace with a new device.

HDMI Tx [U1001] is faulty.
 Replace with a new device.


HDMI Tx [U1001] is faulty.
 Replace with a new device.

Recheck from **check item (3.4.)**.
 If it does not work, replace the PCB.

When the results of check item (3-13.11.) are "01"
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Check the RXSENSE. (OUT2)

Check item(3-13.15.). Checking the RXSENSE :
Does the test point of RXSENSE close to the HDMI output terminal
[N1037] indicate the (3.3V)?

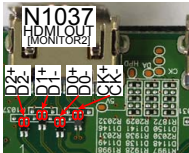

YES NO

Check for a short circuit in the TMDS line.
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.


HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

When the results of check item (3-13.11.) are "02"
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Check the HPD. (OUT2)

Check item(3-13.16.). Checking the HPD :
Does the voltage of HPD test point close to the HDMI output terminal
[N1037] indicate Hi (3-5 V)?

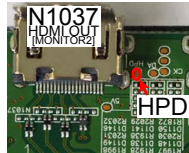

YES NO

Check for a short circuit in the HPD line.
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.


HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

When the results of check item (3-13.11.) are "00"
(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Checking the HPD/RXSENSE status register. (OUT2)

Check item(3-13.17.). Checking the HPD and RXSENSE. :
Does the test point of RXSENSE close to the HDMI output terminal
[N1037] indicate the (3.3V)?
Does the voltage of HPD test point close to the HDMI output terminal
[N1037] indicate Hi (3-5 V)?

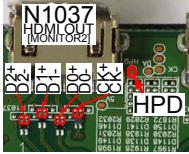

YES NO


Check for a short circuit in the TMDS/ HPD line.
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.

HDMI Tx [U1001] is faulty.
Replace with a new device.


Recheck from check item (3.4).
If it does not work, replace the PCB.

3-14. Front HDMI Buffer failure detection procedure

Checking operation between the HDMI (Front HDMI Buffer) and the player




※ In order to check, connect the player to the HDMI terminal and configure the player as AVR source. Check the sound output while turning on the player.

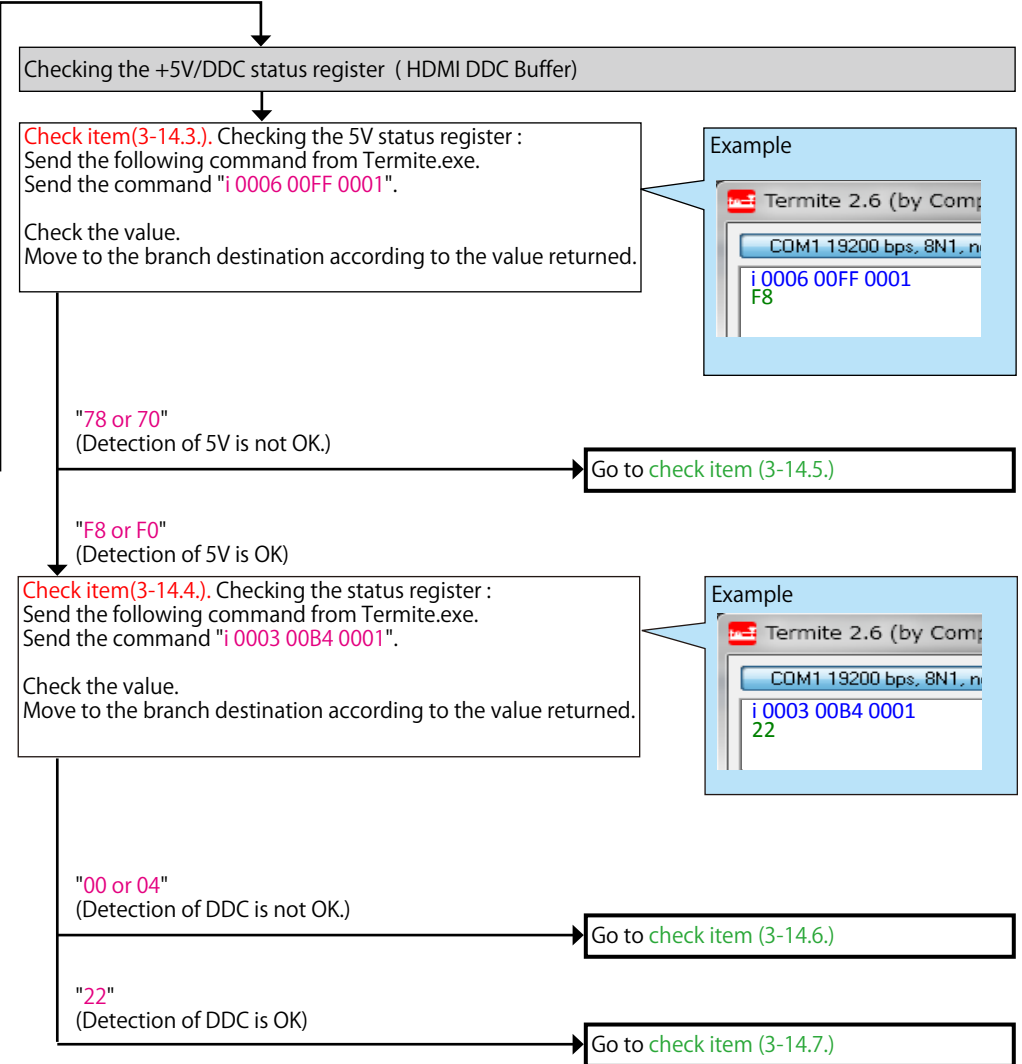

When the results of check item (3-14.3.) are "78 or 70"
(Detection of 5V is not OK.)

Check the +5V voltage. (HDMI DDC Buffer)

Check item(3-14.5). Check the +5V voltage.
Does the HDMI Tx [U1001] test point indicate (5V)?
The test points are as follows.

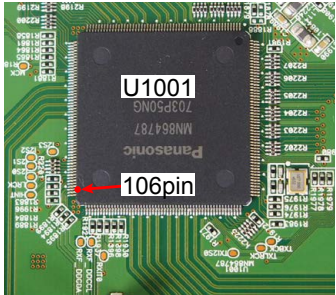

NO
Check for a short circuit in the 5V line, the HDMI Cable, and the 5V Switch [U1002].
If there is no problem, the HDMI Tx [U1001] or the 5 V Switch [U1002] is faulty.
Replace with a new device.

YES


HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

When the results of check item (3-14.4.) are "00 or 04"
(Detection of DDC is not OK.)

Check the DDC Line. (HDMI DDC Buffer)

Check item(3-14.6). Check the DDC line :
Are the "DDCCK" and "DDCSDA" waveforms for the HDMI Tx [U1001] signal correct (as shown in the figure)?
The test points are as follows.

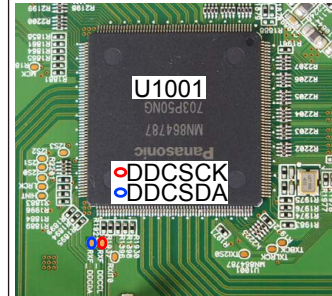

This diagram shows an example of the DDC communication waveform.
-The high level voltage is 5V.
-The frequency of the DDC CLK is 100kHz or less.
Check at each test point.
Voltage scale : 2.0V/div
Time scale : 40us/div

NO

Check for a short circuit in the DDC line and check the HDMI Cable.
If there is no problem, the HDMI DDC Buffer [IC201] is faulty.
Replace with a new device.

YES

HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

When the results of check item (3-14.4.) are "22"
(Detection of DDC is OK)

Checking the TMDS status register (HDMI DDC Buffer)


Check item(3-14.7.). Check the TMDS CLK detection status of the register.

Send the following command from Termite.exe.
Send the command "i 0006 00FF 0001".

When the following value is returned, go to YES.
"F8"

When the following value is returned, go to NO.
"F0"



Example

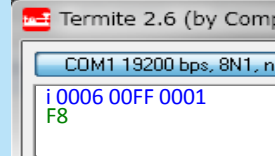

NO

YES

Check item(3-14.9.). Check the AUDIO signal output :
Check the AUDIO signal waveform at the following test point.
Is the waveform like the sample?

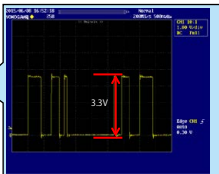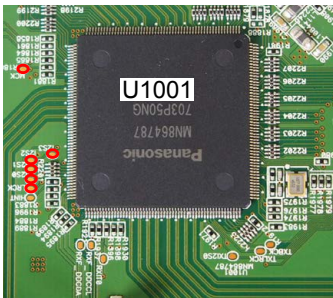

The diagram shows an example of the waveform of I2S0.
Waveform check points
- Crest value (3.3V normally)
- Signal change
Check the waveform of each pin.
Voltage scale : 1.0V/div
Time scale : 500us/div

YES


NO

The DIGITAL AUDIO block is faulty.
Check the DIGITAL AUDIO device.
Check "AUDIO" in troubleshooting.
If it does not work, replace the PCB.

HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

Check item(3-14.8.). Checking the TMDS input waveform :
Check the TMDS waveform at the following test point.
Is the waveform like the sample?

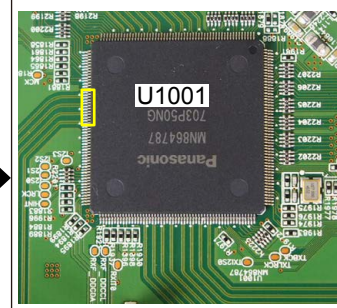

70/71/73/74/76/77/79/80 pin


YES

NO

HDMI Tx [U1001] is faulty.
Replace with a new device.


Check for a short circuit in the TMDS line and the HDMI Cable.
If there is no problem, the HDMI DDC Buffer [IC201] is faulty.
Replace with a new device.

Recheck from check item (3.4).
If it does not work, replace the PCB.

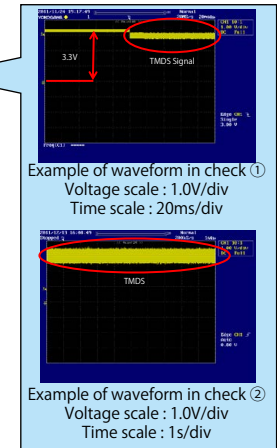


3-15. GUI and PLD failure detection procedure

Check item(3-15.1). Does a video signal come from HDMI OUT to TV correctly? :

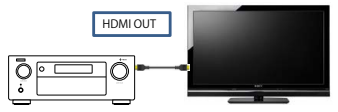

Turn Video Conversion "ON" on the setup menu.
(SETUP MENU-> Video-> Output Settings-> Video Conversion = On)
When the "SETUP" button on a remote control is pressed, is "MENU" displayed on TV which is connected to the HDMI output terminal on the AVR?

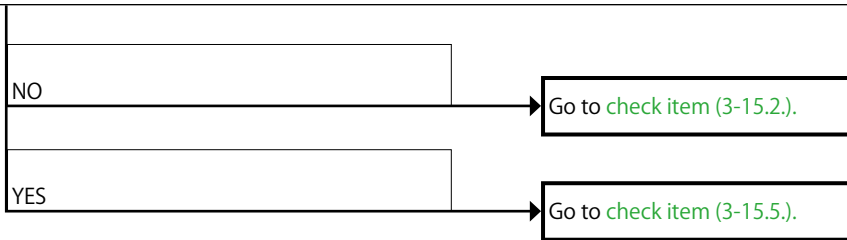



When the results of check item (3-15.1.) are "NO"
(When the menu display is not OK)

Check the Video signal line. (GUI -> HDMI Tx)

Check item(3-15.2). Check the format of the resistor video signal :




Send the following command from Termit.exe.
Send the command "i 0020 0070 0001".

Is the return value "22/21/20/1F/15/14/13/11/10/06/05/04/02" ?


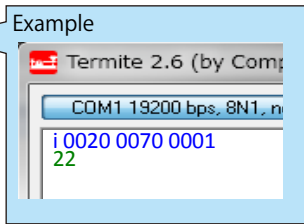
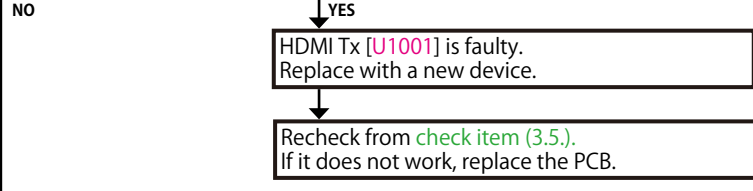
Check the Video signal line. (GUI -> PLD)

Check item(3-15.3). Check the PLD video signal line from the GUI :
Check the video signal waveform at the following test point.
Is the waveform like the sample?

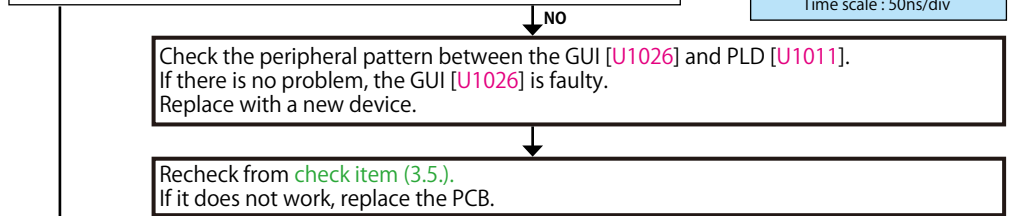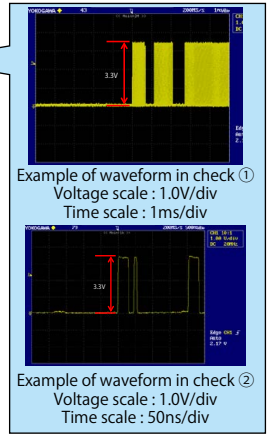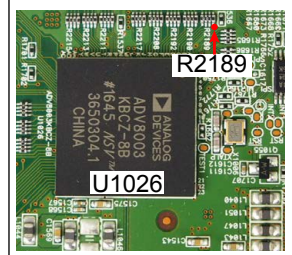


Check the Video signal line. (PLD -> HDMI Tx)

Check item(3-15.4). Check the HDMI Tx video signal line from the PLD :
Check the video signal waveform at the following test point.
Is the waveform like the sample?

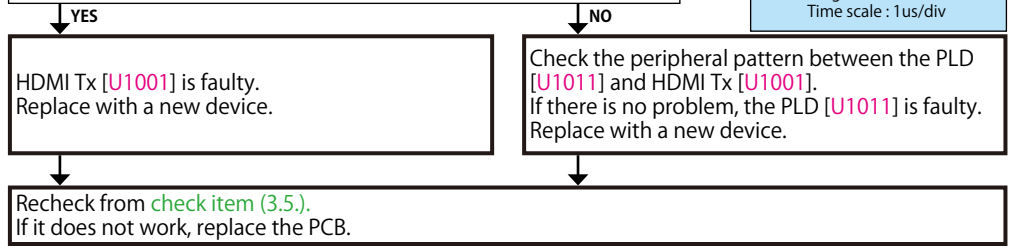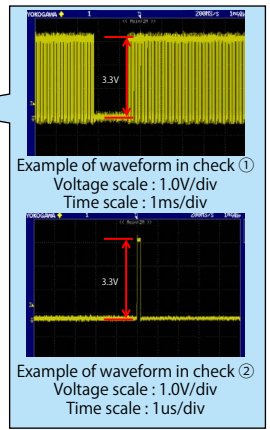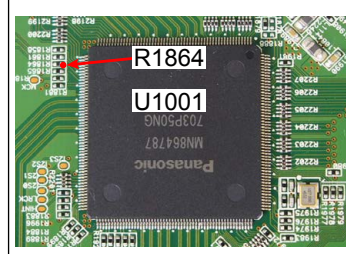


Before Servicing This Unit
 Electrical
 Mechanical
 Repair Information
 Updating

When the results of check item (3-15.1.) are "YES"
(When the menu display is OK)

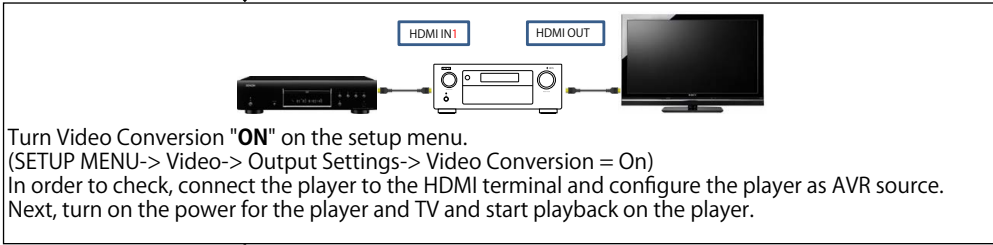

Check the Video signal line. (HDMI Tx -> PLD)

Check item(3-15.5.). Check the PLD video signal line from the HDMI Tx:
Check the video signal waveform at the following test point.
Is the waveform like the sample?

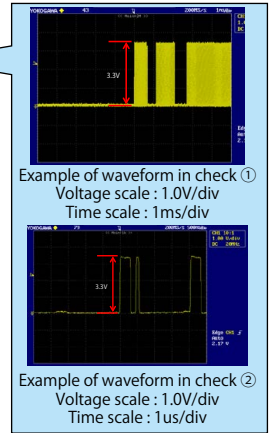

YES



NO

Check the peripheral pattern between the HDMI Tx [U1001] and PLD [U1011].
If there is no problem, the HDMI Tx [U1001] is faulty.
Replace with a new device.

Recheck from check item (3.5.).
If it does not work, replace the PCB.

Check the Video signal line. (PLD -> GUI)

Check item(3-12.6.). Check the GUI video signal line from the PLD :
Check the video signal waveform at the following test point.
Is the waveform like the sample?

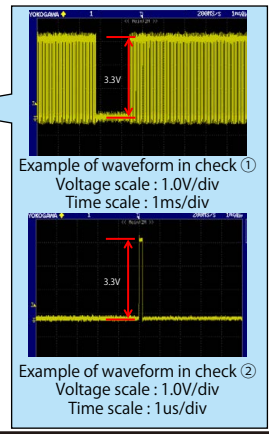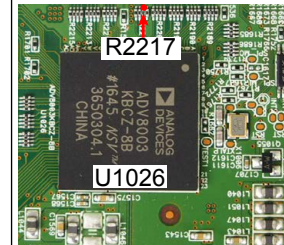

YES

NO

GUI [U1026] is faulty.
Replace with a new device.

Check the peripheral pattern between the PLD [U1011] and GUI [U1026].
If there is no problem, the PLD [U1011] is faulty.
Replace with a new device.

Recheck from check item (3.5.).
If it does not work, replace the PCB.

Before Servicing This Unit
Electrical
Mechanical
Repair Information
Updating

SPECIAL MODE

Special mode setting button


※ No. 1 - 4, 6 - 8: While holding down buttons "A", "B" and "C" simultaneously, press the power button to turn on the power.

※ No. 5, 9, 10: While the power is on, hold down buttons "A", "B", and "C" for at least 3 seconds.

No.	Mode	Button A	Button B	Button C	Descriptions
1	Version Display Mode (MCU / DSP Error Display)	DIMMER	STATUS	-	Displays the version of firmware such as the MCU or DSP. Errors that have occurred are displayed. (See 1. Version Display Mode)
2	PANEL / REMOTE LOCK Selection Mode	TUNER PRESET CH +	ZONE2 SOURCE	-	Activates the unit in PANEL/REMOTE LOCK selection mode to enable PANEL LOCK and Remote Lock On/Off to be set. (See 2. PANEL / REMOTE LOCK Selection Mode)
3	Selecting the Mode for Service-related	ZONE2 SOURCE	DIMMER	STATUS	A selection mode for entering service-related modes. Service-related modes : No. 3-1 - No. 3-6 (See 3-1. Selecting the Mode for Service-related)
3-1	Check the Video/Audio path Mode	↑	↑	↑	This is a special mode for service confirmation used during repair work to simplify the confirmation work for the Audio channel / video channel. (See Service Path Check Mode)
3-2	Protection history display mode	↑	↑	↑	Displays the latest occurred protection history. (See 3-2. Protection History Display Mode)
3-3	232C Standby Clear Mode	↑	↑	↑	Switches from 232C standby mode to normal standby mode. (See 3-3. 232C Standby Clear Mode)
3-4	Operation Info Mode	↑	↑	↑	Displays the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection. (See 3-4. Operation Info Mode)
3-5	TUNER STEP Mode (E3 and E2 model only)	↑	↑	↑	Enables the FM/AM tuner reception frequency step to be changed. (See 3-5. TUNER STEP mode (E3 / E2 only))
3-6	Remote ID Setup Mode	↑	↑	↑	If there are multiple DENON AV receivers in the same area, this mode prevents other AV receivers from being operated concurrently with this device. (See 3-6. Remote ID Setup Mode)
4	Protection Pass Mode	TUNER PRESET CH +	ZONE2 SOURCE	STATUS	Enables the power to be turned on when protection detection is disabled. (See 4. Protection Pass Mode)
5	Network Initialization Mode	TUNER PRESET CH +	ZONE2 ON/OFF	-	Network module backup data is initialized. (See 5. Network Initialization Mode)
6	User Initialization Mode	TUNER PRESET CH -	TUNER PRESET CH +	-	Initialize the backup data for the MCU and network module. (Settings for the Installer Setup are not initialized.)
7	Factory Initialization Mode	ZONE2 SOURCE	DIMMER	-	Initialize the backup data only for MCU. (Settings for the Installer Setup are initialized) (Network function settings are not initialized.) (See POST-SERVICE PRECAUTIONS)
8	Clearing of Operation Info	ZONE2 SOURCE	STATUS	-	Clear the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection. (See 6. Clearing of Operation Info)
9	HDMI Diagnostics Mode	TUNER PRESET CH -	ZONE2 SOURCE	-	This mode is used to identify and solve the cause when there is a connectivity issue with this unit and an HDMI device. For details on the operating methods and diagnosis procedures, see the HDMI Diagnostics and Troubleshooting guide issued on SDI.
10	Log Capture feature	TUNER PRESET CH +	ZONE2 SOURCE	STATUS	Acquires the Network Module log. As the Network Module reboots, the log is deleted. Make sure to obtain the log before turning off the unit's power. (See 7. Log Capture feature)

NOTE : If the volume indicator displays "-00.8", the unit has entered the developer's special mode. In this case, the RS-232C communication is not available.

To release this special mode, press and hold the "TUNER PRESET CH +" and "ZONE2 SOURCE" buttons for 3 seconds or more while the power is ON. When the volume indicator returns to the normal display, the RS-232C communication is available.

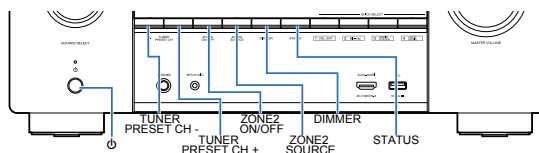

1.4. Error display

See the table below for descriptions of the displayed errors and countermeasures for these.

If multiple errors occur, only one item is displayed.

The priority order is ②, ③, ④, ⑤, ⑥, ①.


Condition	States	Display	TROUBLE SHOOTING
① Firm Check Error	<p>The model name, brand name and region information written in the firmware are compared to the region settings in the PCB. This error is displayed if the information does not match.</p> <p>"▲" is not displayed if firmware information is correct.</p>	<pre>FIRM ERROR ▲M:***** ▲Main FBL :**,** ▲DSP :**,** ▲A.PLD :***** ▲U.PLD :***** ▲GUI :*****</pre>	<ul style="list-style-type: none"> •Check the resistor for setting the region [R1524, 1525, DIGITAL PCB]. •Write the firmware for the correct region.
② IP SCALER Error	<p>An error occurs in Loop back Test of the DDR memory which is performed during the initial setting of i/p Scaler(ADV8003).</p> <p>During the initial setting of i/p Scaler (ADV8003) , there is not the reply of the Loop back Test result of the DDR memory .</p>	<pre>IP SCALER ERR 01 IP SCALER ERR 02</pre>	<ul style="list-style-type: none"> •Check the circuits around the IP SCALER [U1026, DIGITAL PCB] and DDR2 [U1028/U1029]. If there appear to be no problems, [U1026] or [U1028/U1029] is faulty.
③ GUI Serial Flash Error	<p>If the MCU version is not supported by the GUI Serial Flash (ADV8003), "▼" is displayed as the first character of the GUI firmware version.</p> <p>If GUI Serial Flash is damaged, "▲" is displayed as the first character.</p>	<pre>GUI VER. ERROR ▼GUI :***** ▲GUI :*****</pre>	<ul style="list-style-type: none"> •Check the firmware version.
④ DIR Error	<p>This error is displayed if there is no response from the DIR.</p>	<pre>DIR ERROR 01</pre>	<ul style="list-style-type: none"> •Check the DIR [U1040, DIGITAL PCB] and surrounding circuits.
⑤ DSP Error	<p>Boot error 1 (After reset the DSP, DSP_Flag0 port is "Low")</p> <p>Boot Error 2 (After reset the DSP, MCU received state error command)</p> <p>Signal Detect Error (No response after input set for 1sec)</p> <p>Mode Change Error (No response after mode change for 1sec)</p> <p>Invalid situation (Detecting invalid situation with autodetect)</p> <p>Busy Error ("Busy" port remains "Low" for 1sec)</p> <p>Output Fs Error (Fs status between MCU output and actual DSP is different)</p> <p>Input Fs Error (Fs status between AutoDetect Msg and ACCN Msg is different)</p> <p>SPI communication error</p>	<pre>DSP ERROR 01 DSP ERROR 02 DSP ERROR 03 DSP ERROR 04 DSP ERROR 05 DSP ERROR 06 DSP ERROR 07 DSP ERROR 08 DSP ERROR 09</pre>	<ul style="list-style-type: none"> •Check the DSP [U1073, DIGITAL PCB] and surrounding circuits.
⑥ BACKUP Error	<p>Error occurred in BACKUP. it is an error of the check sum.</p>	<pre>BACKUP ERROR</pre>	

1.5. Version Display in the Setup Menu

Follow the steps below to display the firmware information.


- (1) Press the "SETUP" button on the remote control.
- (2) Select "General - Information - Firmware".

The version information is displayed as a 16-digit number as shown in the screenshot below.

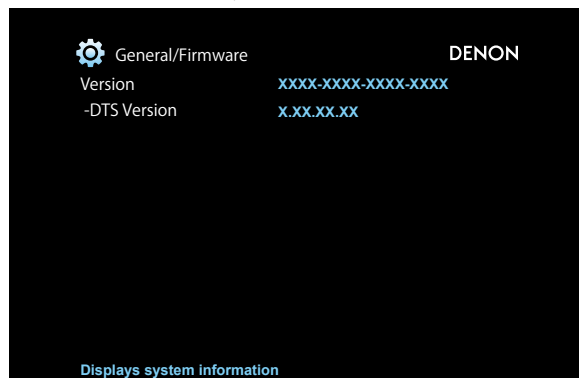

GUI Image

This 16-digit number comprises a part of the version number of each device and module. Numerics and version numbers correspond as shown below.

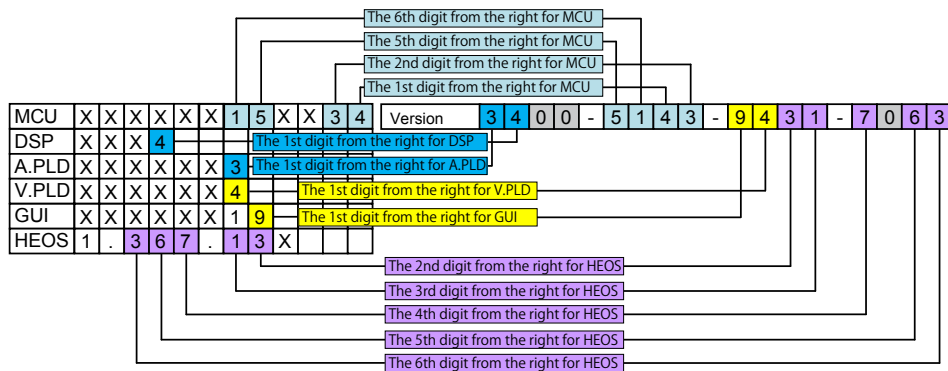

※ The firmware version numbers and this 16-digit version information are written in the Service Information.

※ Replace as follows for the 5th to 7th digits of HEOS version.

X.XXX.X → X.XXX.00X
 X.XXX.XX → X.XXX.0XX
 X.XXX.XXX → X.XXX.XXX

2. PANEL / REMOTE LOCK Selection Mode

2.1. Actions

Switch the PANEL LOCK and REMOTE LOCK modes between on and off.

- PANEL LOCK Mode (with Volume)
Disables reception from all keys and encoders on the front panel except the power button (including the volume).
- PANEL LOCK Mode (without Volume)
Disables reception from all keys and encoders on the front panel except the power button and volume encoder.
- PANEL LOCK mode is turned off

2.2. Starting up

While holding down buttons "TUNER PRESET CH +" and "ZONE2 SOURCE" simultaneously, press the power button to turn on the power.

Select the desired mode using the "TUNER PRESET CH +/-" button, then press the "STATUS" button to confirm.

2.3. Displaying and Selecting Each Mode

The information shown on the display switches each time the "TUNER PRESET CH +/-" button is pressed.

Press the "STATUS" button to set the currently displayed mode and restart the device.

The setting with "*" is selected for each mode.

①

FP/VOL LOCK*On

The buttons on the unit and the master volume knob does not function.



②

FP LOCK On

The buttons on the unit does not function.



③

FP LOCK Off

The PANEL LOCK mode is turned off.



④

RC LOCK On

The device cannot be operated by the remote control.



⑤

RC LOCK *Off

The REMOTE LOCK mode is turned off.

3-1. Selecting the Mode for Service-related

3-1.1. Actions

Select diagnostic mode (service path check mode), protection history display mode, 232C standby clear mode, Operation Info mode, TUNER STEP mode or Remote ID Setup Mode.

3-1.2. Starting up

While holding down buttons "ZONE2 SOURCE", "DIMMER" and "STATUS" simultaneously, press the power button to turn on the power.

Select the desired mode using the "TUNER PRESET CH +/-" button, then press the "STATUS" button to confirm.

3-1.3. Displaying and Selecting Each Mode

The information shown on the display switches each time the "TUNER PRESET CH +" button is pressed.

Press the "STATUS" button to set the currently displayed mode and restart the device.

①

1. SERVICE CHECK

Service Path Check Mode : See "[DIAGNOSTIC MODE](#)"

The Video and Audio paths can be checked.

This function is convenient for confirming problem paths in the product and checking the paths after repairing.



②

2. PROTECTION

The protection history can be checked.



③

3. RS232C RESET

Switches from 232C standby mode to normal standby mode.



④

4. OP INFO

Operation Info for the unit can be checked.



⑤ E3 and E2 model only

5. TUNER FREQ SET

Enables the reception frequency STEP of the ANALOG TUNER to be changed.



⑥

6. REMOTE ID

This function is for operating only the desired AV receiver.

3-1.4. Canceling the selected mode

Press the power button to turn off the power.

3-2. Protection History Display Mode

3-2.1. Actions

This mode enables the unit to record and display the event when the THERMAL, ASO or DC protection is activated.

If protections have been activated multiple times, the latest protection operation is recorded.

3-2.2. Starting up

While holding down buttons "ZONE2 SOURCE", "DIMMER" and "STATUS" simultaneously, press the power button to turn on the power.

Select the "2. PROTECTION" using the "TUNER PRESET CH +/-" button, then press the "STATUS" button then to confirm.

3-2.3. Protection information and displays

- Press the "STATUS" button in Protection History Display Mode.
- The protection history can be checked.

- (1) If no protections has occurred.

NO PROTECT

- (2) ASO (if the last protection is ASO)

PRT:ASO

Cause A short circuit occurred between the speaker terminals, or speakers with an impedance outside the rating were connected.

Note : Short circuits in speaker terminals or speakers can be identified.

If the power is turned on in the abnormal state, protection is activated after around 6 seconds and the power is turned off.

- (3) DC (if the last protection is DC)

PRT:DC

Cause : DC output of the power amplifier is abnormal.

If the power is turned on in the abnormal state, protection is activated after around 6 seconds and the power is turned off.

- (4) THERMAL (if the last protection is THERMAL(A) or THERMAL(E) or THERMAL(F))

PRT:THERMAL A

PRT:THERMAL E

PRT:THERMAL F

Cause : Abnormal heat sink temperature.

If the power is turned on in the abnormal state, protection is activated after around 6 seconds and the power is turned off.

- (5) Case of CURRENT (when the last protection incident is CURRENT protection)

:CURRENT

Cause : An over current flowed in power amp.

If the power is turned on in the abnormal state, protection is activated after around 90 seconds and the power is turned off.

Caution : These protections may also be activated due to other factors such as disconnection of connectors or operations around the MCU.

After viewing the above protection history, press the "STATUS" button to return to the normal display.

3-2.4. Clearing the Protection History

There are two ways to clear the protection history.

- (1) Activate Protection History Display Mode. Press the **"STATUS"** button to display the protection history.

PRT:DC

Press and hold the **"DIMMER"** button for 3 seconds.



PRT: CLEAR

The above is displayed and protection history is cleared.



NO PROTECT

- (2) Initialize this unit. (See ["POST-SERVICE PRECAUTIONS"](#))

※ Use the method in **3-2.4. (1)** if you do not want to erase your settings from this unit.

Warning Displays by POWER LED

If the power is turned Off while a protection is being detected, the POWER LED flashes in red to warn you depending on the protection status as follows.

- (1) ASO/DC protection: Flashes at 0.5-second intervals (0.25 seconds lit, 0.25 seconds unlit)
- (2) THERMAL (A/E/F) protection: Flashes at 2-second intervals (1 seconds lit, 1 seconds unlit)
- (3) CURRENT protection: Flashes at 4-second intervals (2 seconds lit, 2 seconds unlit)

3-3. 232C Standby Clear Mode

3-3.1. Actions

Switches from 232C standby mode to normal standby mode.

3-3.2. Starting up

While holding down buttons **"ZONE2 SOURCE"**, **"DIMMER"** and **"STATUS"** simultaneously, press the power button to turn on the power.

Select the **"3.RS232C RESET"** using the **"TUNER PRESET CH +/-"** button, then press the **"STATUS"** button then to confirm.

3.RS232C RESET

3-4. Operation Info Mode

3-4.1. Actions

This mode enables the unit to display the accumulated operating time, power On count and each protection count.

3-4.2. Starting up


While holding down buttons "ZONE2 SOURCE", "DIMMER" and "STATUS" simultaneously, press the power button to turn on the power.

Select the "4. OP INFO" using the "TUNER PRESET CH +/-" button, then press the "STATUS" button then to confirm.


3-4.3. Operations

Press the "STATUS" button after starting up this device in Operation Info mode. The following information is displayed in the following order.


- (1) Accumulated operating time




- (2) Power On time




- (3) DC / ASO Protection count




- (4) Thermal Protection (A) count



- (5) Thermal Protection (E/F) count



- (6) Current Protection count



(Returns to normal display)

3-5. TUNER STEP mode (E3 / E2 only)

3-5.1. Actions

This is a special mode that enables the reception frequency STEP of the ANALOG TUNER to be changed.

3-5.2. Starting up

While holding down buttons "ZONE2 SOURCE", "DIMMER" and "STATUS" simultaneously, press the power button to turn on the power.


Select the "5. TUNER FRQ SET" using the "TUNER PRESET CH +/-" button, then press the "STATUS" button then to confirm.

3-5.3. Displays

Start up this unit in TUNER STEP mode, select the desired option using the "TUNER PRESET CH +/-" button, then enter using the "STATUS" button.

The following information is displayed in the following order.

- (1) AM9 kHz / FM50 kHz is selected



- (2) AM10 kHz / FM200 kHz is selected



- (3) Press the power button to turn off the power.
(4) Press the power button to turn on the power.

3-6. Remote ID Setup Mode

3-6.1. Actions

This function allows only the desired AV receiver to be operated if multiple DENON AV receivers are used in the same room.

3-6.2. Starting up

While holding down buttons "ZONE2 SOURCE", "DIMMER" and "STATUS" simultaneously, press the power button to turn on the power.

Select the "6. REMOTE ID" using the "TUNER PRESET CH +/-" button, then press the "STATUS" button then to confirm.

3-6.3. Operations

- (1) When Remote ID Setup mode is activated, the following message is displayed.

REMOTE ID ?

- (2) Press the desired "QUICK SELECT 1 - 4" button.

Button	Display
QUICK SELECT 1	REMOTE ID 1
QUICK SELECT 2	REMOTE ID 2
QUICK SELECT 3	REMOTE ID 3
QUICK SELECT 4	REMOTE ID 4

- (3) Press the power button to turn off the power.
(4) Press the power button to turn on the power.

※ Only "QUICK SELECT 1 - 4" and the POWER button on the unit can be used in Remote ID Setup Mode.

※ The remote ID of the remote control supplied with this unit cannot be changed.

NOTE :

If the ID of the unit and remote control do not match, "AVAMP*" appears on the display of the unit when the remote control is used

(* : own remote control ID).

4. Protection Pass Mode

4.1. Actions

- This mode allows the power to be turned on without activating protections.
- This mode functions in the same way as normal power-on, except that protections are not activated.
- When using the protection pass mode, do not connect speakers to the speaker terminals.

4.2. Operations

While holding down buttons "TUNER PRESET CH +", "ZONE2 SOURCE" and "STATUS" simultaneously, press the power button to turn on the power.

The device returns to the normal display message after the following is displayed.



Protection Pass

This is displayed for 5 seconds before returning to the normal display.

5. Network Initialization Mode

5.1. Actions

The following items are initialized.

- (1) Network setup
- (2) Friendly Name
- (3) Auto Update setting
- (4) Allow Update setting
- (5) Time Zone setting
- (6) Queue list
- (7) Internet Radio recently played station
- (8) Quick Select playback station
- (9) AirPlay Password
- (10) Bluetooth Pairing History
- (11) Crestron Connected Setup

5.2. Operations

When the power is on and the input source is HEOS Music, press and hold the "TUNER PRESET CH +" and "ZONE2 ON/OFF" buttons for more than 3 seconds.

Initializing Display



Network Reset...

Complete Display



Completed

This is displayed for 5 seconds before returning to the normal display.

6. Clearing of Operation Info

6.1. Actions

- Displays the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection.

6.2. Operations

Remove all input/output terminals and the AC plug.

Connect the AC plug again and place the product in standby mode.

While holding down buttons "**ZONE2 SOURCE**" and "**STATUS**" simultaneously, press the power button to turn on the power.

PRODUCT MODE P

When "**PRODUCT MODE**" appears on the display, release the button and press the button "**power**" → "**ZONE2 ON/OFF**" to place the product in standby mode.

7. Log Capture feature

7.1. Actions

- Acquires the Network Module log.
- The log is deleted when the Network Module is deleted.
If an error occurs, it is acquired without turning off the power of this unit.
- The log can be copied to a writable USB flash drive.
It can also be sent to a server if this unit is connected to the Internet.
- The log is stored in the root folder of the USB flash drive with the name "**logs-<friendlyname>-<number>.tar.gz**".
<friendlyname> indicates the friendly name and <number> indicates the sequence number.
Previous logs on the USB flash drive are not overwritten. The log is encrypted.

7.2. Starting up

While the power is On, hold down buttons "**TUNER PRESET CH +**", "**ZONE2 SOURCE**" and "**STATUS**" for at least 3 seconds.

7.2.1. If the USB flash drive is connected after starting the unit

- (1) The log is written to the USB flash drive and "**Storing Logs...**" is displayed.
The log is also sent to the server.

Storing Logs...

- (2) When a log package is saved to a USB flash drive, "**USB SUCCESS**" appears in the display for 5 seconds, regardless of whether the upload to the server was successful.

USB SUCCESS

- (3) When saving of the log package fails, "**USB FAILED**" appears in the display for 5 seconds, regardless of whether the upload to the server was successful.

USB FAILED

7.2.2. When the USB flash drive is not connected after startup, and this unit is connected to the Internet.

- (1) The log is sent to the server and the display shows "**Storing Logs...**" for 5 seconds.

Storing Logs...

- (2) When the log package is uploaded, the ticket numbers "**XXXXX**" and "**Push ENTER**" are displayed until the "**Enter**" or "**Back**" button of RC is pressed.

XXXXX Push ENTER

- (3) If the log package upload fails, "**FAILED**" is displayed for 5 seconds.

FAILED

Service Path Check Mode

1.1. Actions

This function is convenient for confirming problem paths in the product and checking the paths after repairing.
The video system and audio system operation paths can be checked.
The backup data is not rewritten.

1.2. Starting up

While holding down buttons "ZONE2 SOURCE", "DIMMER" and "STATUS" simultaneously, press the power button to turn on the power.
Select the "1. SERVICE CHECK" using the "TUNER PRESET CH +" button, then press the "STATUS" button then to confirm.
The "TUNED", "STEREO" and "RDS" segments are lit in this mode.

1.3. Canceling diagnostic mode

Press the power button to turn off the power.

1.4. Selecting items to check

Press the ① button to switch between video items and audio items.
Press the ② or ③ button to select the previous or next item.

Actions	The unit			Remote control unit		
	①	②	③	①	②	③
	Audio ⇄ Video	PREVIOUS	NEXT	Audio ⇄ Video	PREVIOUS	NEXT
Button	DIMMER	QUICK SELECT 1	QUICK SELECT 2	SLEEP	CURSOR ◀	CURSOR ▶

1.5. Audio system confirmation items

See the block diagram fig.AXXth.

Paths to be confirmed		Display	Settings	What to confirm
1	Analog	fig.A01 A01:ANALOG PASS	Input Source : CBL/SAT Input Mode : Analog (fixed) Sound mode : DIRECT Amp assign : 9.1ch Floor Layout : 5.1&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> Analog input ⇒ Speaker output (Front L/R) Analog input ⇒ Pre OUT output (Front L/R) (※ The input source can be switched to any source except CBL/SAT.)
2	DIGITAL (MAIN)	fig.A02a fig.A02b A02:DIGITAL	Input Source : CBL/SAT Input Mode : DIGITAL (fixed) Sound mode : MULTI CH STEREO Amp assign : 9.1ch Floor Layout : 5.1&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height Speaker Select : Floor Speaker Config ALL Speaker = Small/SW = Yes(2ch) MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> Digital input ⇒ Speaker output (Front L/R, Center, Surround L/R, S.Back L/R) Digital input ⇒ Pre OUT output (Front L/R, Center, Surround L/R, S.Back L/R, Subwoofer1/2) (※ The input source can be switched to any source except CBL/SAT.)

Paths to be confirmed			Display	Settings	What to confirm
3	DIGITAL (ZONE2)	fig.A03a fig.A03b	A03: DIGITAL-Z2	Input Source : HEOS Music Input Mode : Auto Sound mode : STEREO Amp assign : 7.1ch + ZONE2 Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : On	<ul style="list-style-type: none"> • Digital(PCM) input ⇒ Speaker output (Height2 (ZONE2) L/R) • Digital(PCM) input ⇒ Pre OUT output (ZONE2 L/R) (※ The ZONE2 input source can be switched to any source except HEOS Music.) (Do not select "SOURCE" as the input source for Zone2.) (※ Source for ZONE2 does not change even when Source for the MainZone is changed.)
4	HDMI	fig.A04a fig.A04b	A05: HDMI	Input Source : CBL/SAT Input Mode : HDMI (fixed) Sound mode : STEREO Amp assign : 9.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • HDMI input ⇒ Speaker output (Front L/R) • HDMI input ⇒ Pre OUT output (Front L/R) (※ The input source can be switched to any source except CBL/SAT.)
5	Analog AD (MAIN ZONE)	fig.A05a fig.A05b	A06: AD	Input Source : CBL/SAT Input Mode : Analog (fixed) Sound mode : MULTI CH STEREO Amp assign : 9.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height Speaker Select : Floor & Height Speaker Config ALL Speaker = Small/SW = Yes(2ch) MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • Analog input ⇒ Speaker output (Front L/R, Center, Surround L/R, S.Back L/R, Height1 L/R) • Analog input ⇒ Pre OUT output, SW(20Hz) (Front L/R, Center, Surround L/R, S.Back L/R, Height1 L/R, Subwoofer1/2) (※ The input source can be switched to any source except CBL/SAT.)
6	Analog Amp Assign (Amp Assign : ZONE2)	fig.A06	A07: ASSIGN-Z2	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Z2 Source : CBL/SAT Amp assign : 7.1ch + ZONE2 Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : On	<ul style="list-style-type: none"> • Analog input ⇒ Speaker output (Height2 (ZONE2) L/R) • Analog input ⇒ Pre OUT output (ZONE2 L/R) (※ The input source can be switched to any source except CBL/SAT.) (Do not select "SOURCE" as the input source for Zone2.) (※ Source for ZONE2 does not change even when Source for the MainZone is changed.)
7	Amp Assign (Amp Assign : BiAMP)	fig.A07a fig.A07b	A11: ASSIGN-BiAMP	Input Source : CBL/SAT Input Mode : Auto Sound mode : MULTI CH STEREO Amp assign : 7.1ch + BiAMP Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • Analog input ⇒ Speaker output (Height2 L/R (Front L/R)) (※ The input source can be switched to any source except CBL/SAT.)

Paths to be confirmed		Display	Settings	What to confirm
8	Front Height	fig.A08a fig.A08b	A14:FRONT HEIGHT Input Source : CBL/SAT Input Mode : Auto Sound mode : MULTI CH STEREO Amp assign : 9.1ch Floor Layout : 5ch Height Sp : 4ch Dolby Sp : None Height Layout : Top Front & Top Rear MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • Analog input ⇒ Speaker output (Height1 L/R (Top Front), Height2 L/R (Top Rear)) • Analog input ⇒ Pre OUT output (Height1 L/R (Top Front), Height2 L/R (Top Rear)) • Pre OUT output (※ The input source can be switched to any source except CBL/SAT.)
9	Front Amp ⇒ Surround Back	fig.A09a fig.A09b	A20:F-AMP BACK Input Source : CBL/SAT Input Mode : Auto Sound mode : MULTI CH STEREO Amp assign : 11.1ch Height Sp: 4Height Speakers Height Layout : Top Front & Top Rear Pre OUT Channel : Front Speaker Select : Floor & Height MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • Analog input ⇒ Speaker output (S.Back L/R) • Pre OUT output (※ The input source can be switched to any source except CBL/SAT.)
10	ZONE2 Downmix (Amp Assign : ZONE2)	fig.A10a fig.A10b	A22:Z2 Downmix Input Source : CBL/SAT Input Mode : Auto ZONE2 Source : Source Amp Assign : 7.1ch + ZONE2 Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : On	<ul style="list-style-type: none"> • Analog input ⇒ Speaker output (Height 2 (ZONE3) L/R) • Analog input ⇒ Pre OUT output (ZONE2 L/R) (※ Do not change the input source for Zone2 from "SOURCE".) (When the input source for the Main Zone is changed, the input source for Zone2 will also be switched.)

1.6. Confirmation items for the video system

See the block diagram fig.VXXth.

Paths to be confirmed		Display	Settings	What to confirm
1	Analog Video pass fig.V01	V01:VIDEO PASS	Input Source : CBL/SAT Video Conversion (IP Scaler) : OFF, All sources MAIN ZONE : On ZONE2 : On	<ul style="list-style-type: none"> • CVBS input ⇒ CVBS output • Component input ⇒ Component output (※ The input source can be switched to any source except CBL/SAT.)
2	Video Convert (Analog or HDMI ⇒ HDMI) fig.V02	V02:V.CONVERT	Input Source : CBL/SAT Video Conversion (IP Scaler) : ON, All sources IP Scaler : "Analog & HDMI", All sources Resolution : "Auto", All sources MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • CVBS input ⇒ IP Scaler ⇒ HDMI output. • Component input ⇒ IP Scaler ⇒ HDMI output. • HDMI input ⇒ IP Scaler ⇒ HDMI output. • ETHERNET input ⇒ IP Scaler ⇒ HDMI output. (※ The input source can be switched to any source except CBL/SAT.)
3	HDMI pass (MAIN ZONE) fig.V03	V03:HDMI PASS	Input Source : CBL/SAT Video Conversion (IP Scaler) : OFF, All sources MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • HDMI input (MAIN function) ⇒ HDMI output (MAIN) (※ The input source can be switched to any source except CBL/SAT.)
4	HDMI CEC fig.V04	V04:HDMI CEC	Input Source : CBL/SAT HDMI Control : On MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • When the power supply of a TV is put in the standby mode, make sure that the power supply of this unit is also put in the standby mode. (※ The input source can be switched to any source except CBL/SAT.) • The ARC path can also be checked (check this using the TV Audio input source).
5	HDMI Audio (Audio : AVR) fig.V05a fig.V05b	V05:H.AUDIO-AVR	Input Source : CBL/SAT HDMI Control : Off HDMI Audio : AVR (if checking the audio output from AVR)	<ul style="list-style-type: none"> • HDMI input (PCM, DolbyDigital, DTS) ⇒ Speaker output. • HDMI input (HD audio) ⇒ Speaker output. (※ The input source can be switched to any source except CBL/SAT.)
6	HDMI Audio (Audio : TV) fig.V06	V06:H.AUDIO-TV	HDMI Audio : TV (if checking the audio output from TV)	<ul style="list-style-type: none"> • HDMI input (PCM, DolbyDigital, DTS) ⇒ HDMI output (audio output from connected TV) (※ The input source can be switched to any source except CBL/SAT.)
7	GUI fig.V07	V07:GUI MENU ON	Input Source : CBL/SAT Video Conversion (IP Scaler) : ON, All sources IP Scaler : "Analog & HDMI", All sources Resolution : "AUTO", All sources Setup Menu : On MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • GUI display ⇒ HDMI output. (※ The input source can be switched to any source except CBL/SAT.)
8	HDMI pass (ZONE2) fig.V08	V08:ZONE2 HDMI	Input Source : CBL/SAT ZONE2 Source : Source MAIN ZONE : On ZONE2 : On	<ul style="list-style-type: none"> • HDMI input (ZONE2 function) ⇒ HDMI output (ZONE2) (※ ZONE2 入力ソースは、Source のまま変更しないでください。) (MAIN ZONE の入力ソースを変更すると、ZONE2 の入力ソースが連動して切り替わります。)

1.7. Confirmation items for fan operation

Paths to be confirmed		Display	Settings	What to confirm
1	Low-speed fan -	F01:FAN LOW	FAN CONT_LOW = HIGH FAN CONT_HIGH = LOW MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • Low-speed fan
2	High-speed fan -	F03:FAN HIGH	FAN CONT_LOW = LOW FAN CONT_HIGH = HIGH MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> • High-speed fan

DIAGNOSTIC PATH DIAGRAM

fig.A01

AVR_X3600 ANALOG AUDIO DIAGRAM

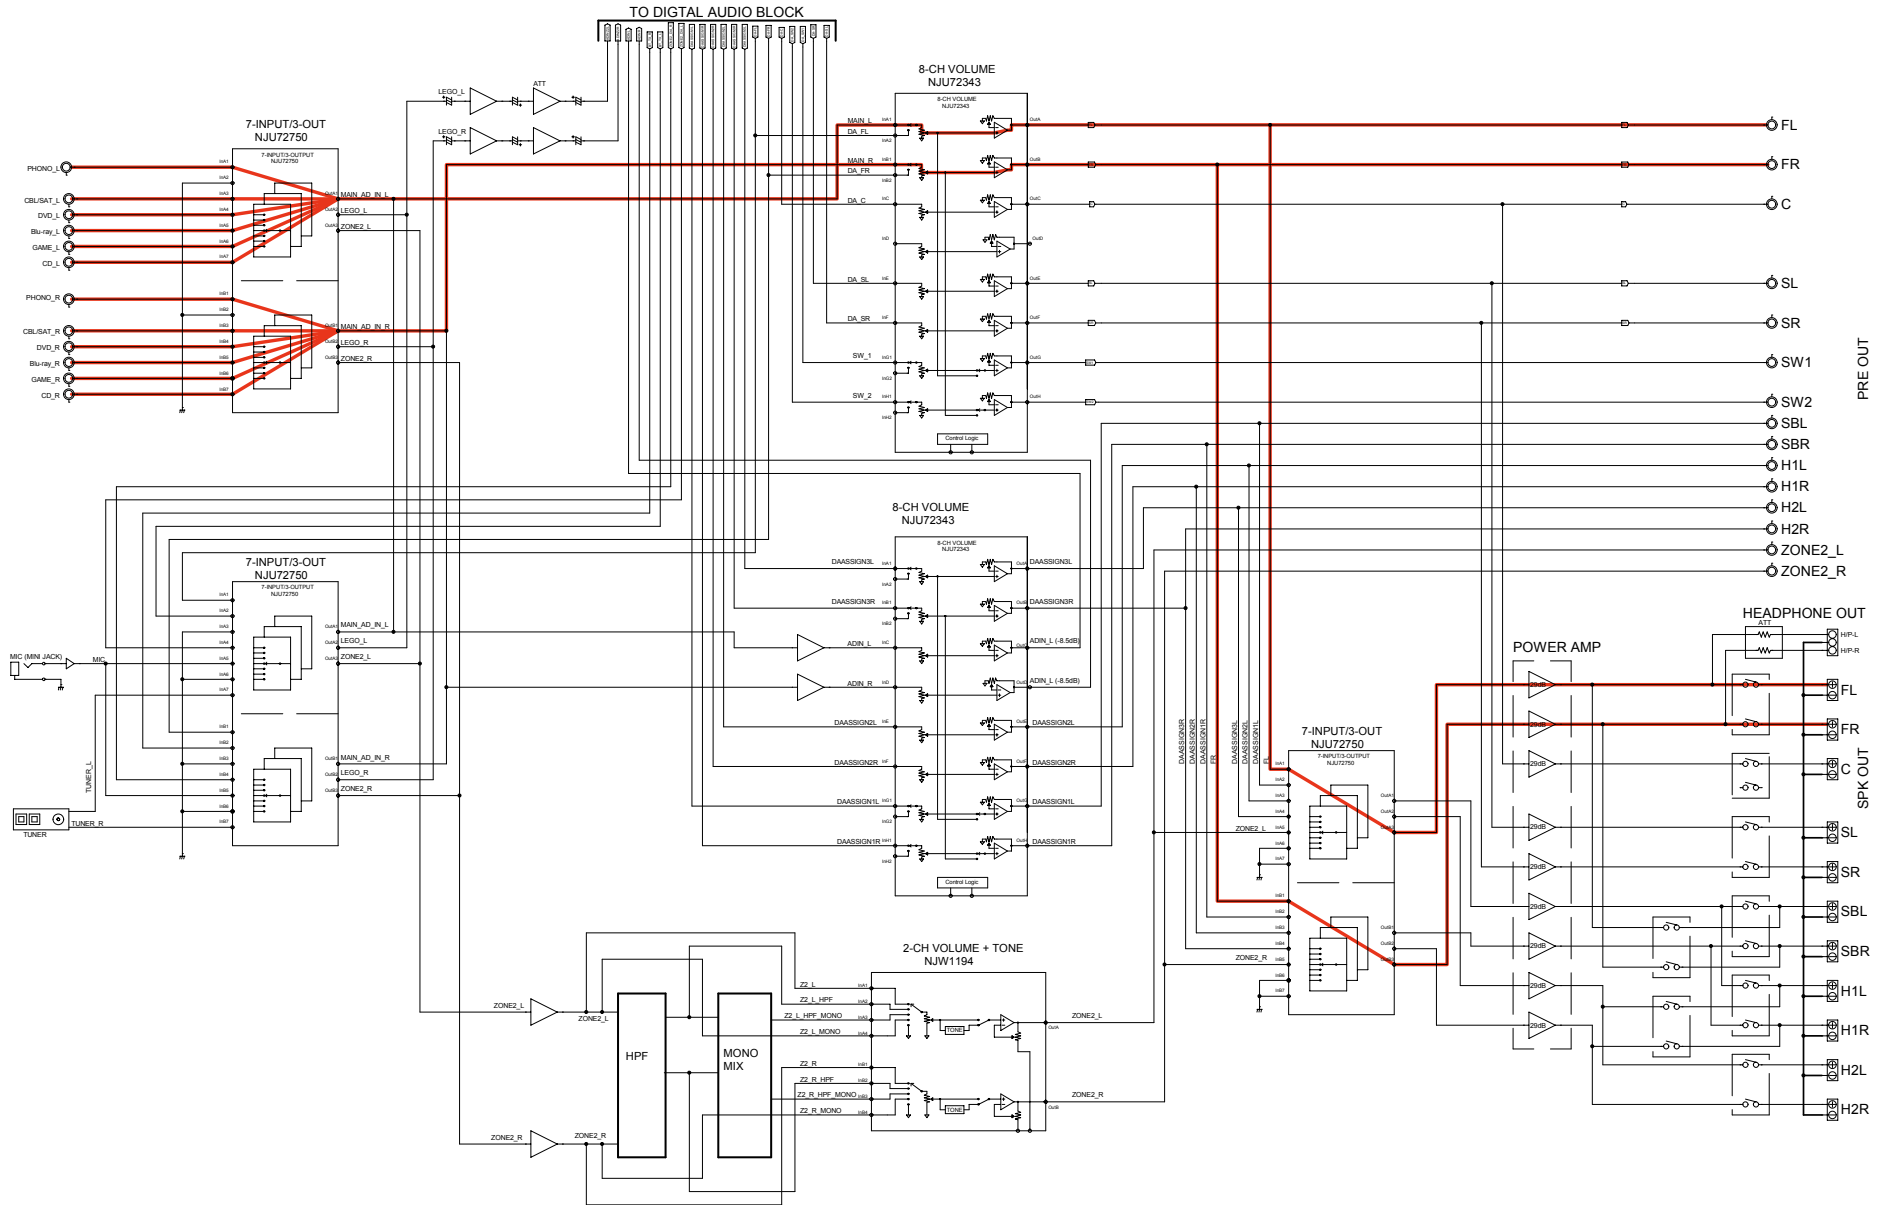


fig.A02a

AVR_X3600 DIGITAL AUDIO DIAGRAM

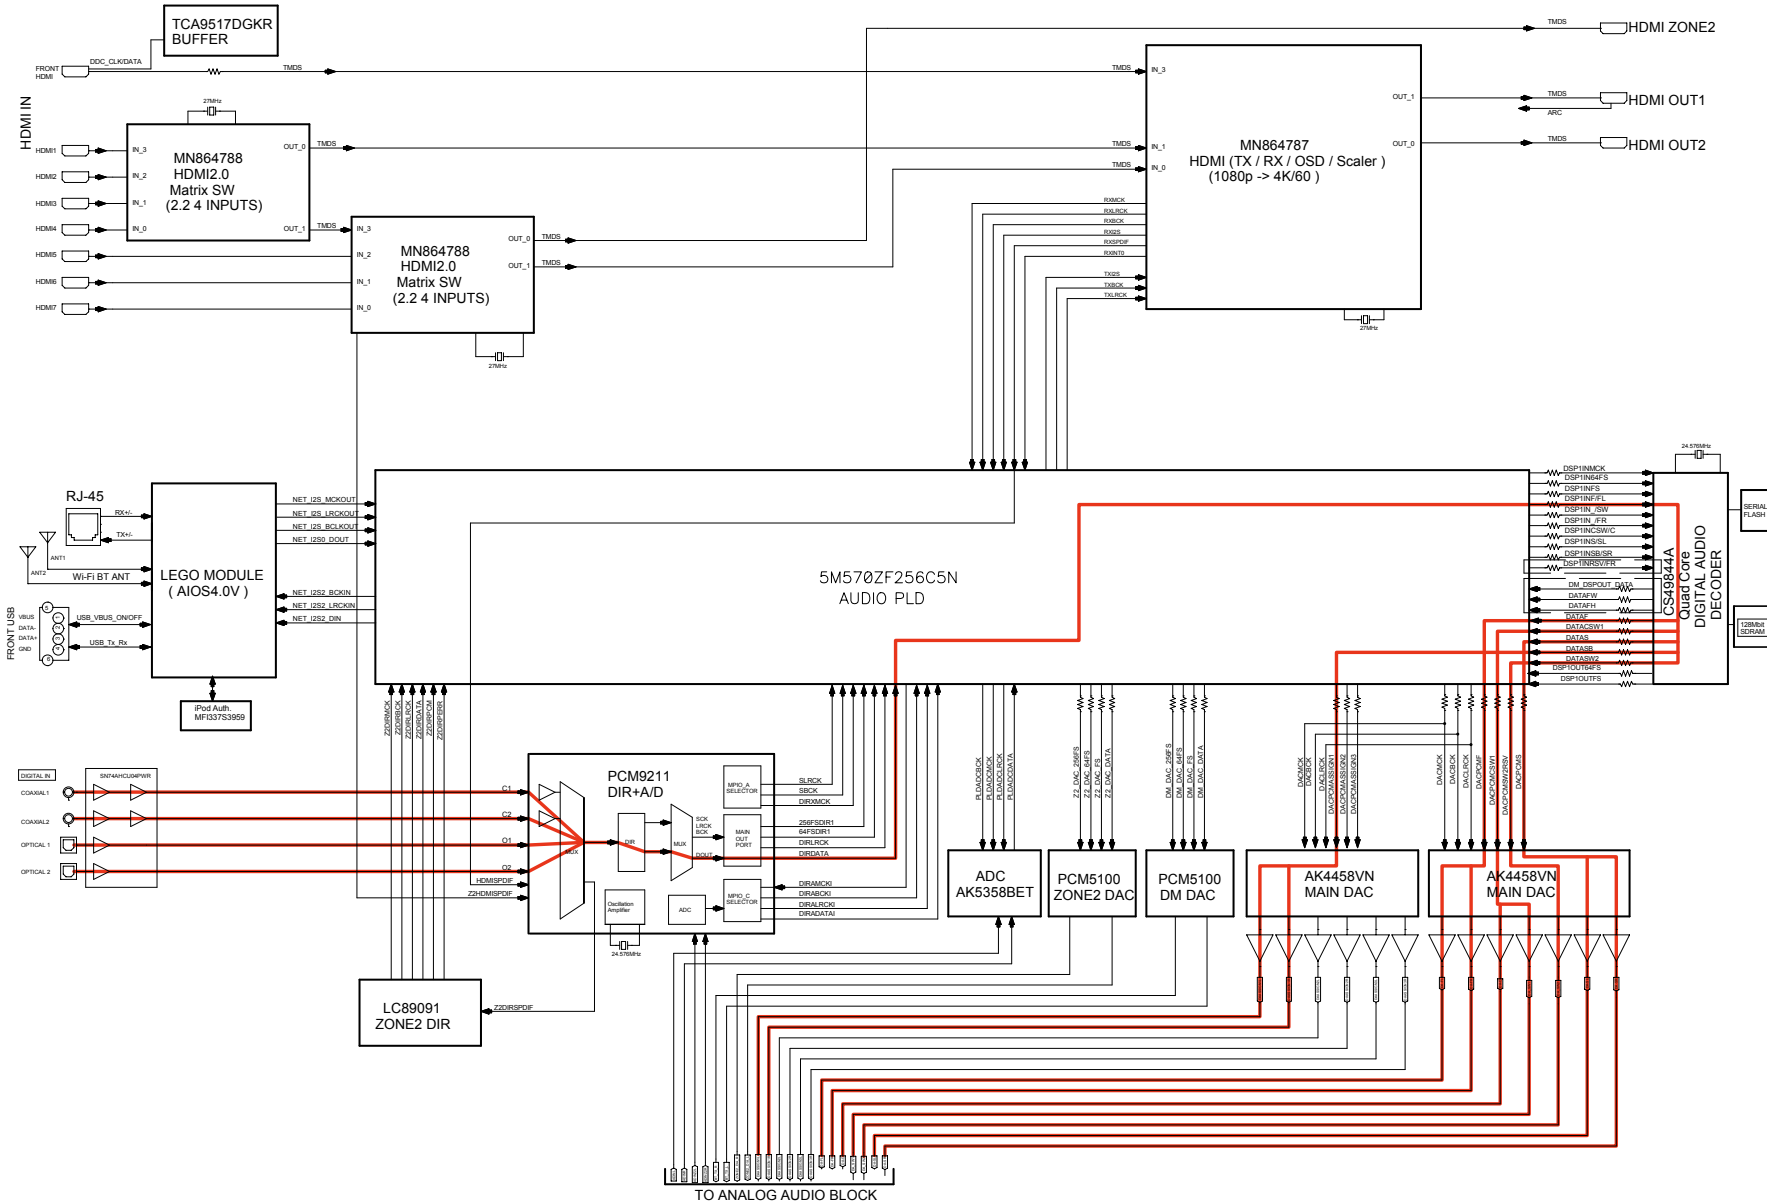


fig.A02b

AVR_X3600 ANALOG AUDIO DIAGRAM

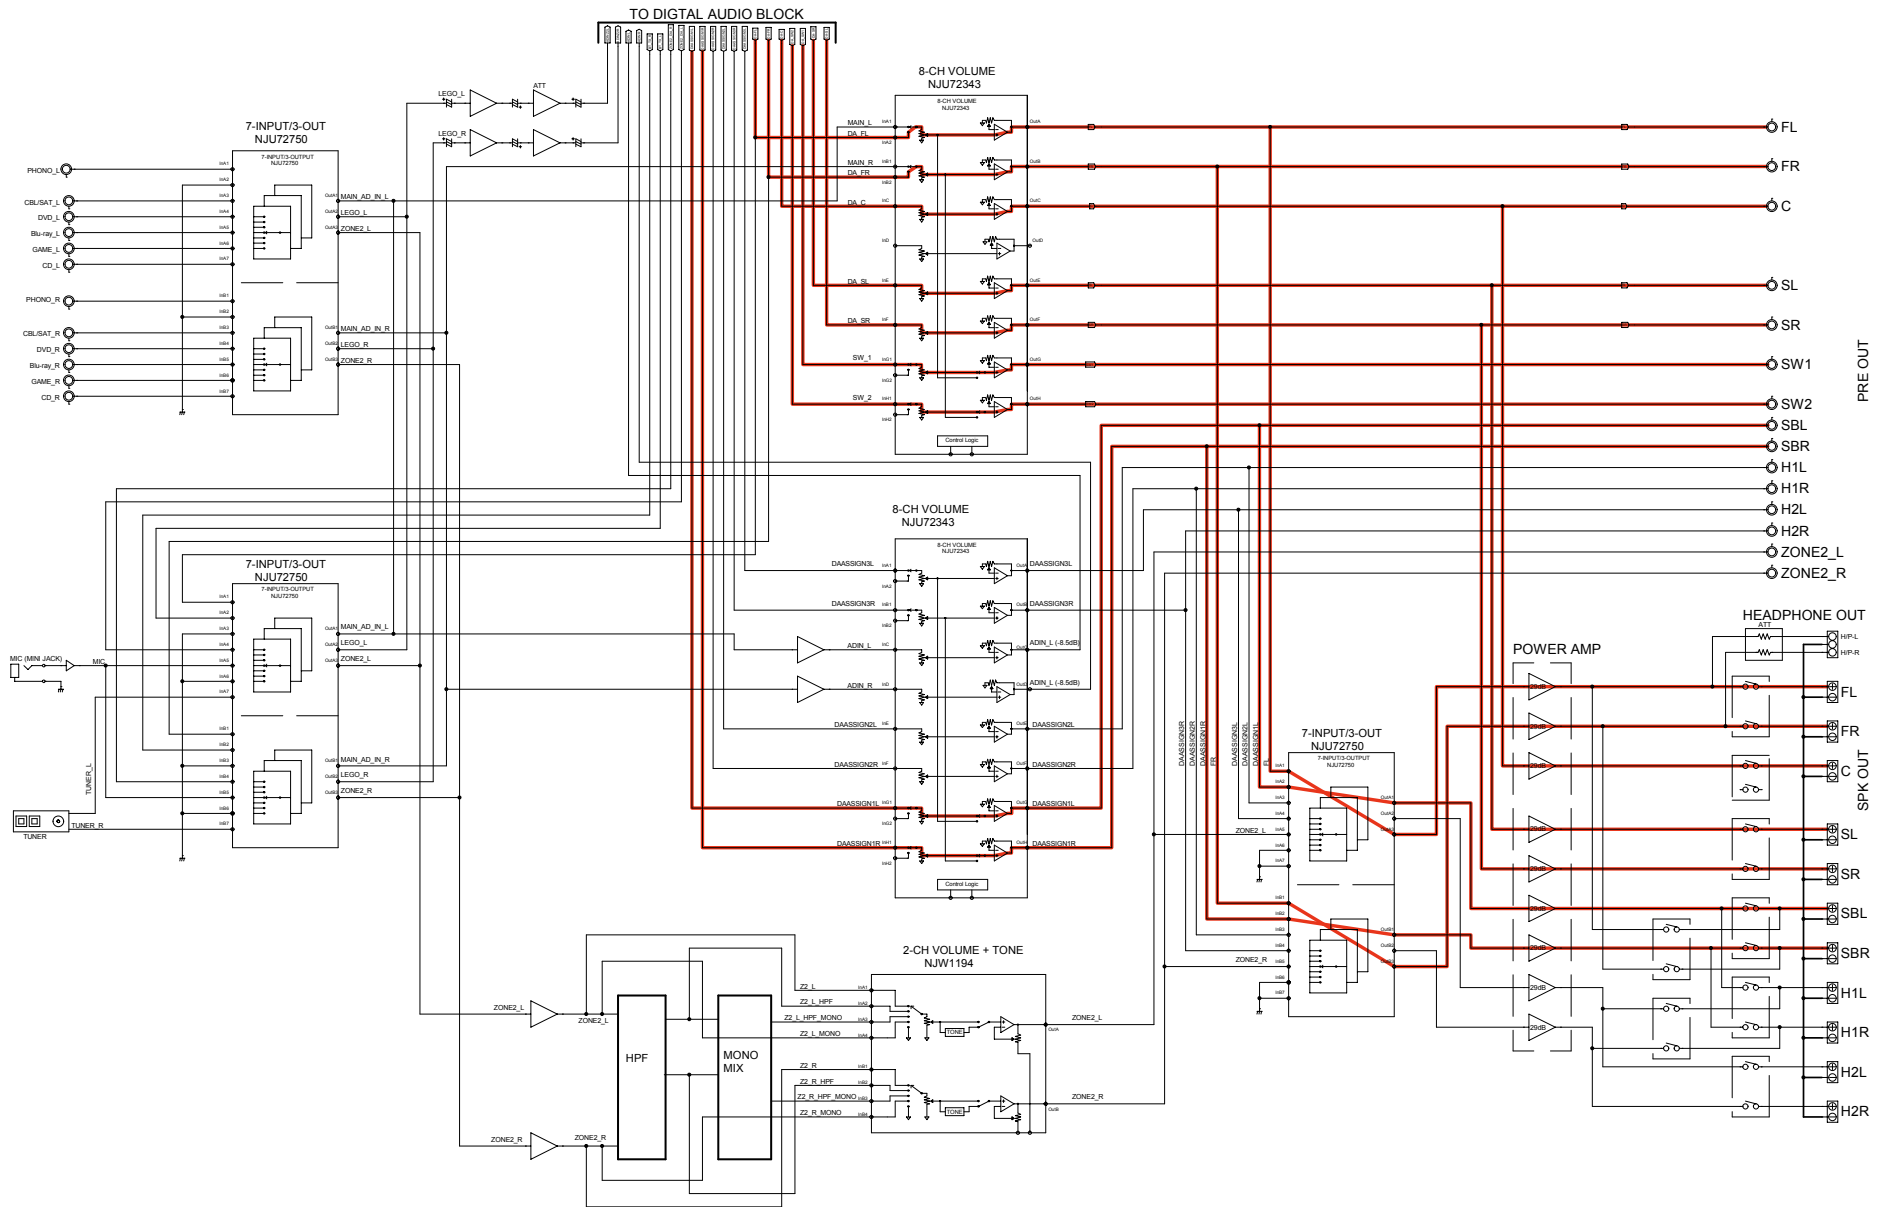


fig.A03a

AVR_X3600 DIGITAL AUDIO DIAGRAM

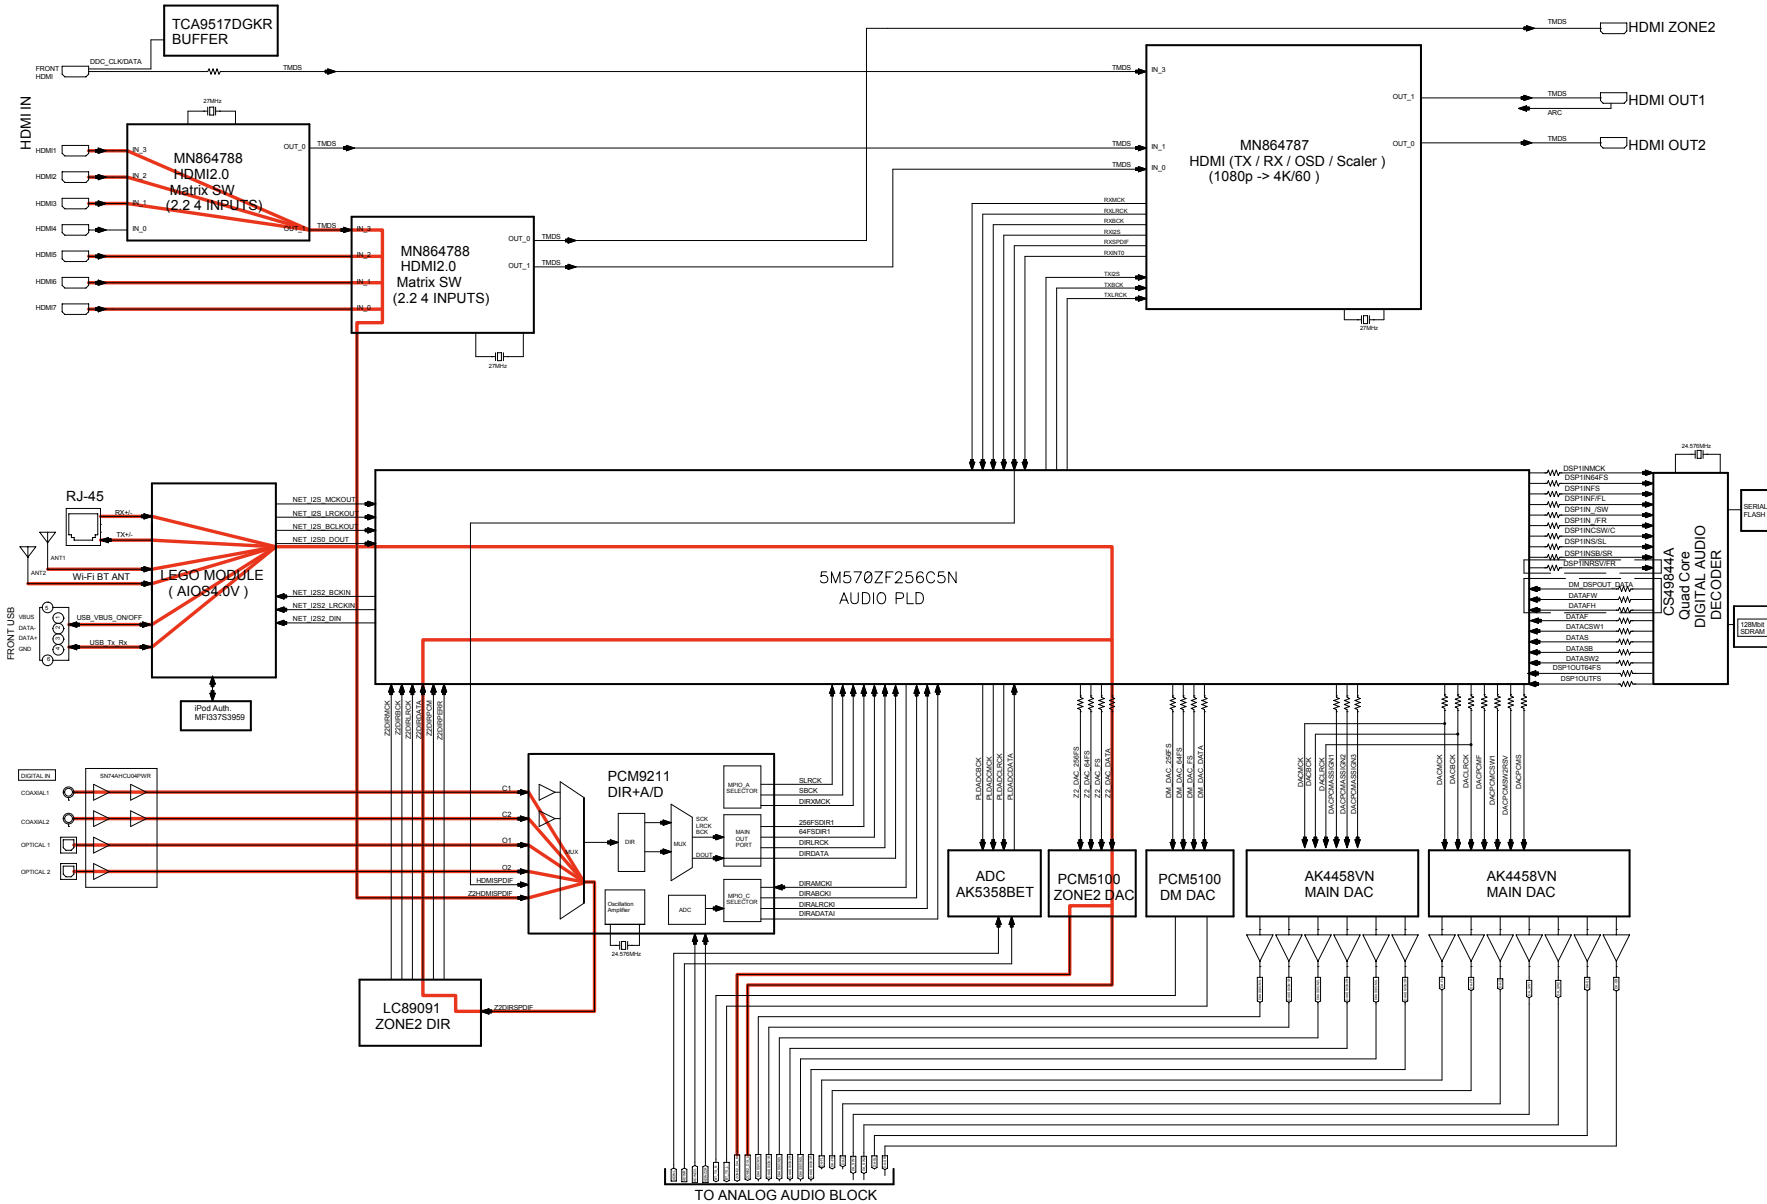


fig.A03b

AVR_X3600 ANALOG AUDIO DIAGRAM

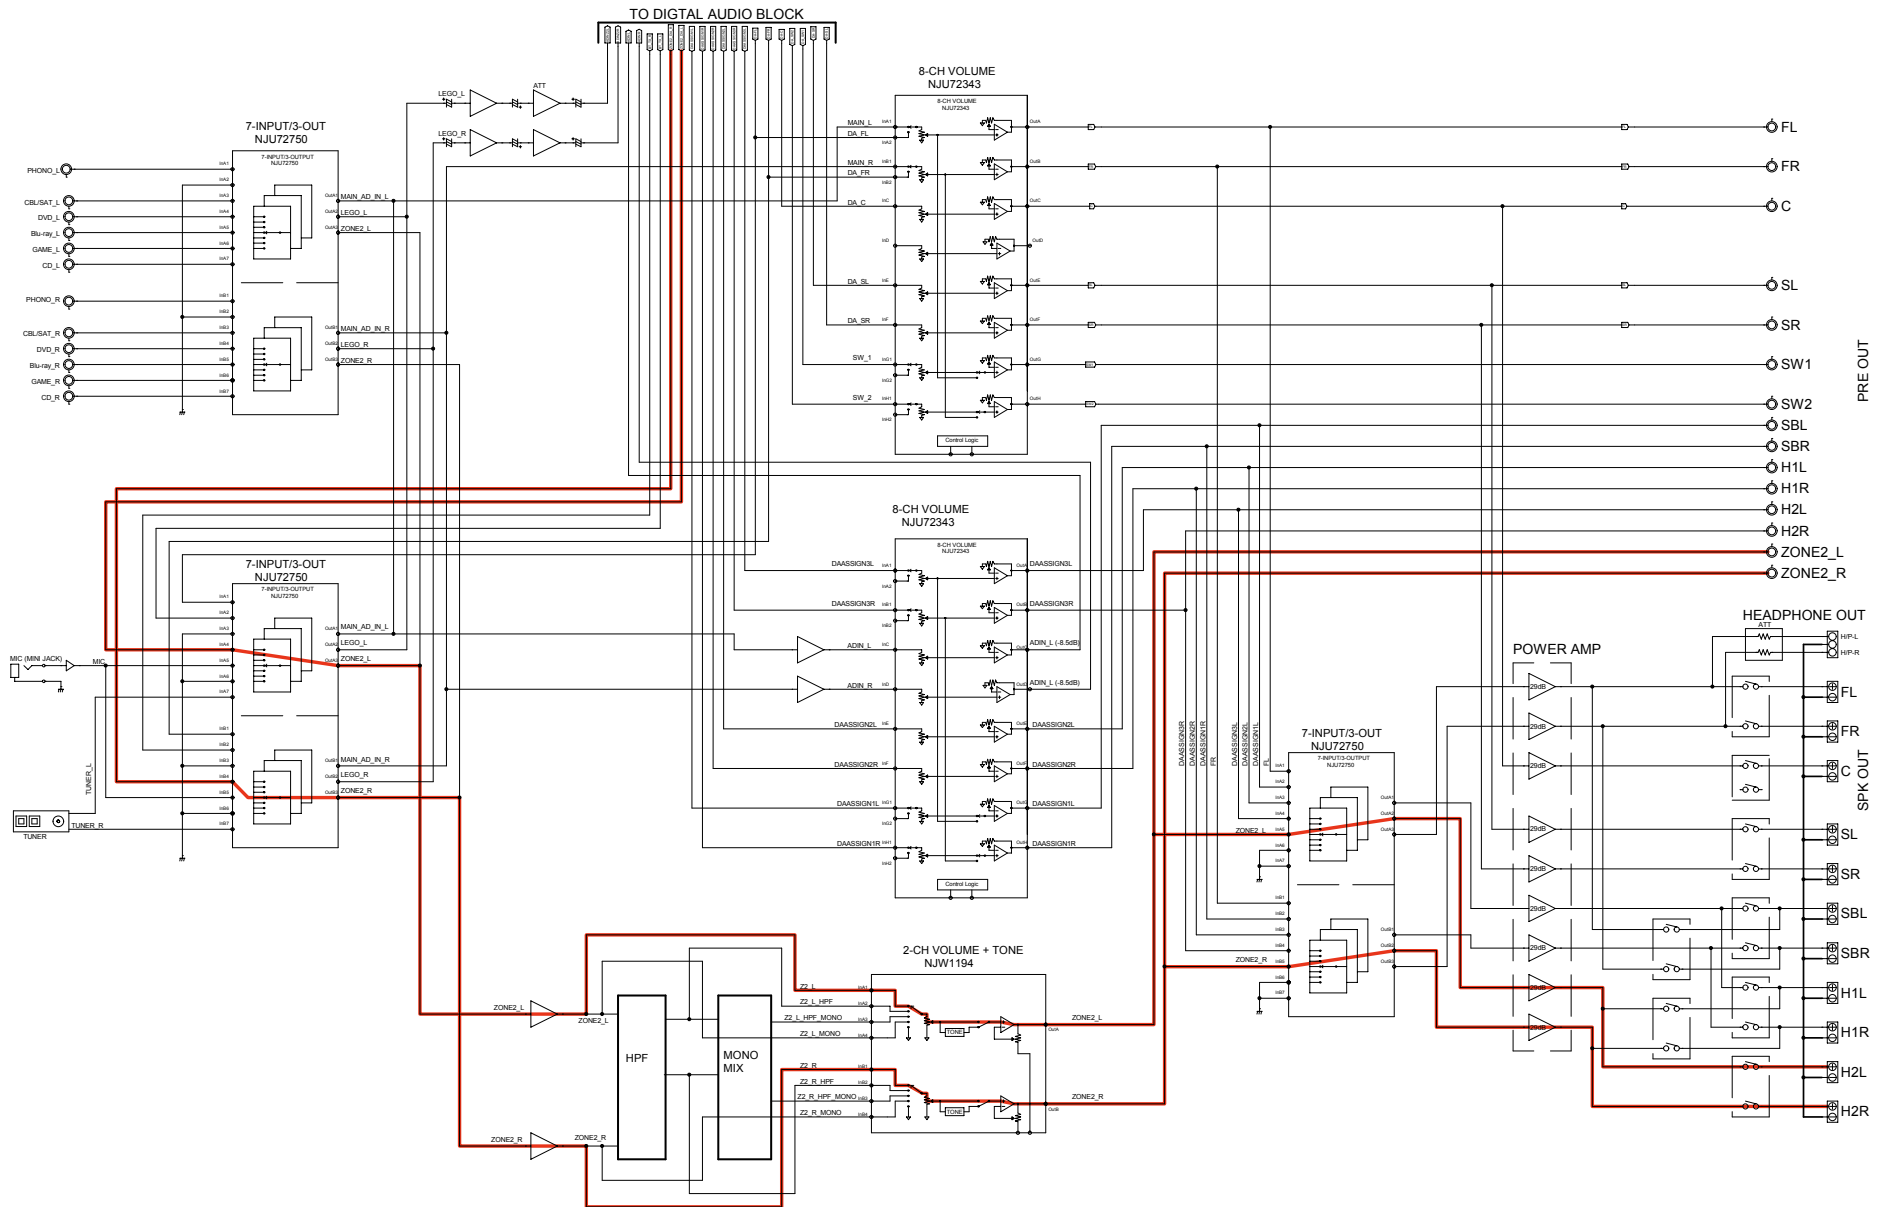



fig.A04a

AVR_X3600 DIGITAL AUDIO DIAGRAM



fig.A04b

AVR_X3600 ANALOG AUDIO DIAGRAM

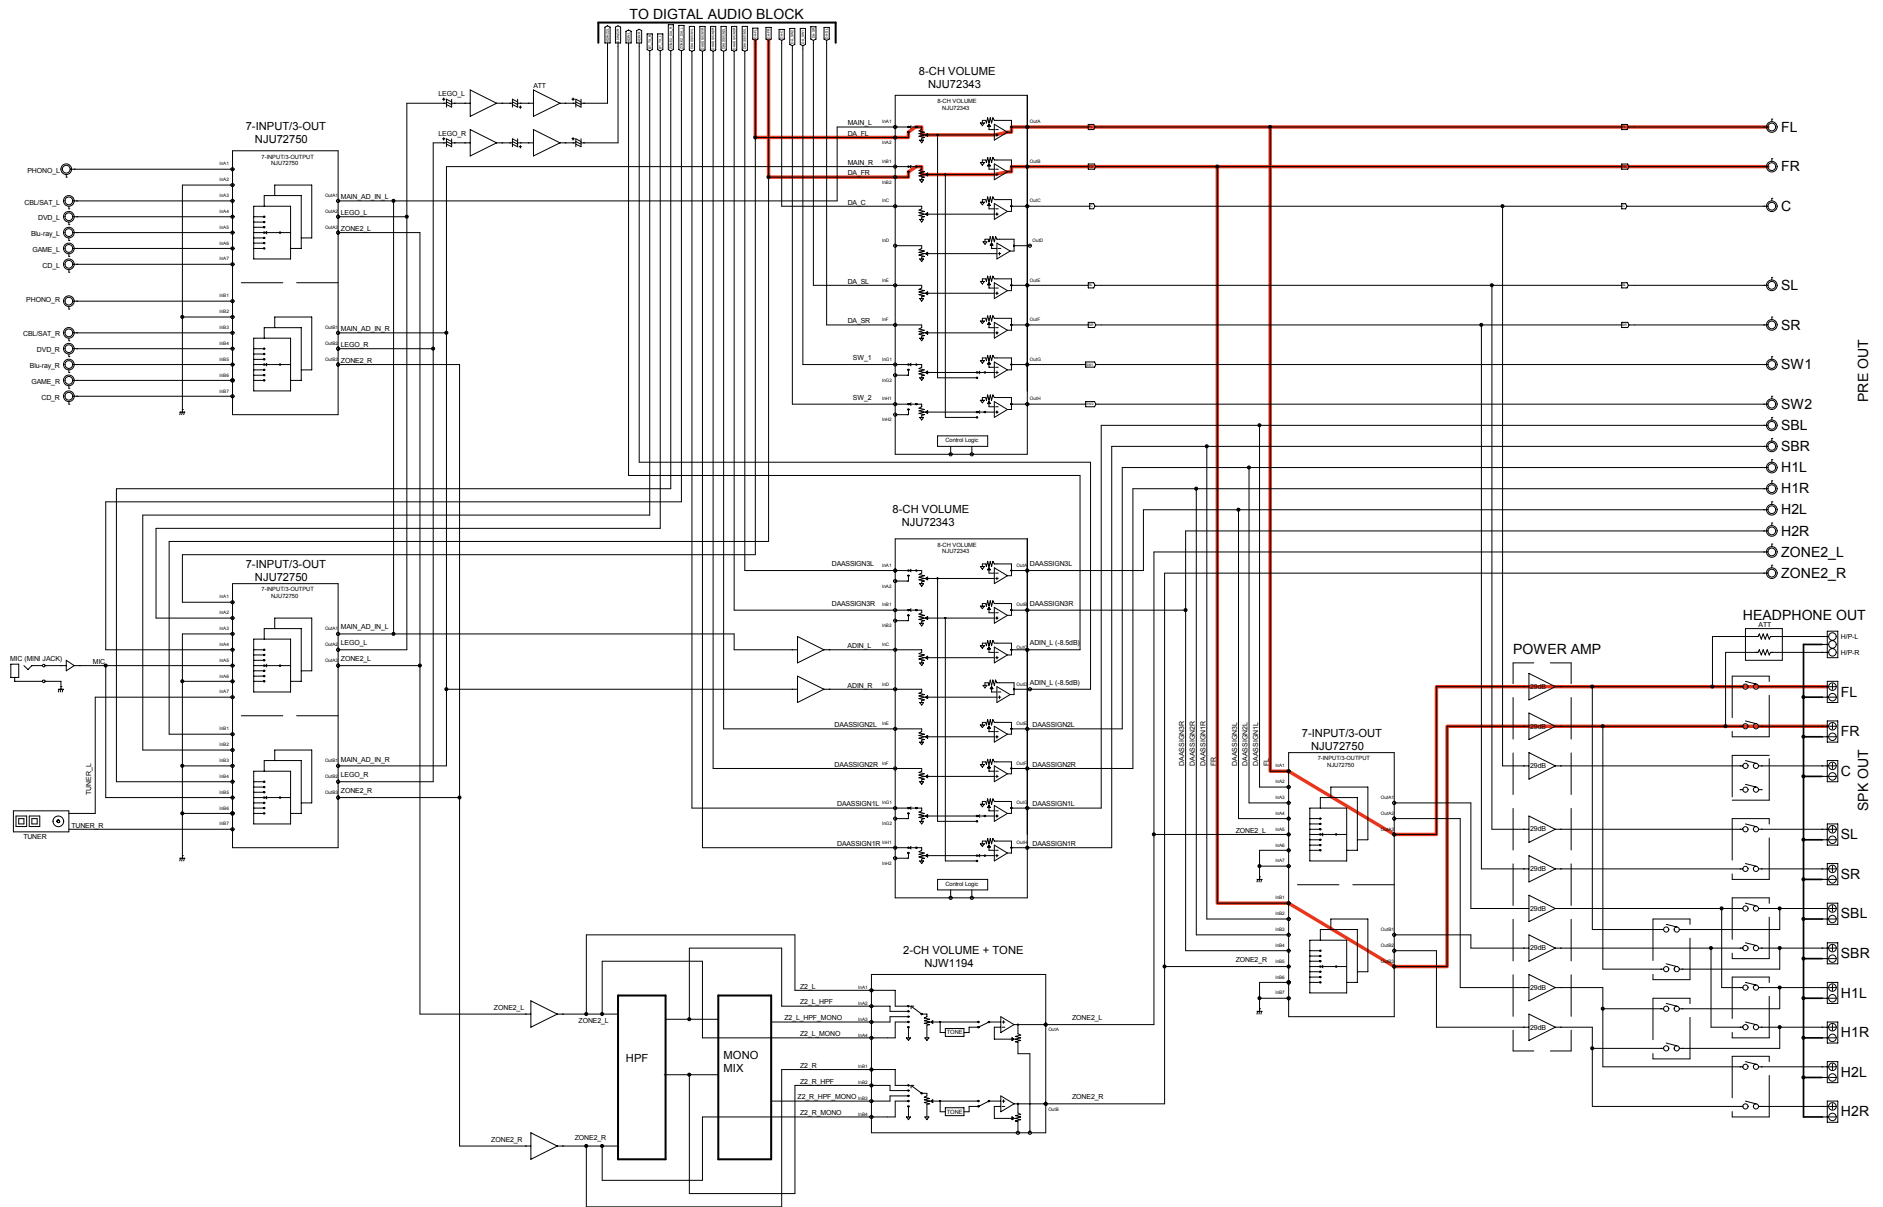

Before Servicing
This Unit

Electrical

Mechanical

Repair Information

Updating

fig.A05a

AVR_X3600 DIGITAL AUDIO DIAGRAM

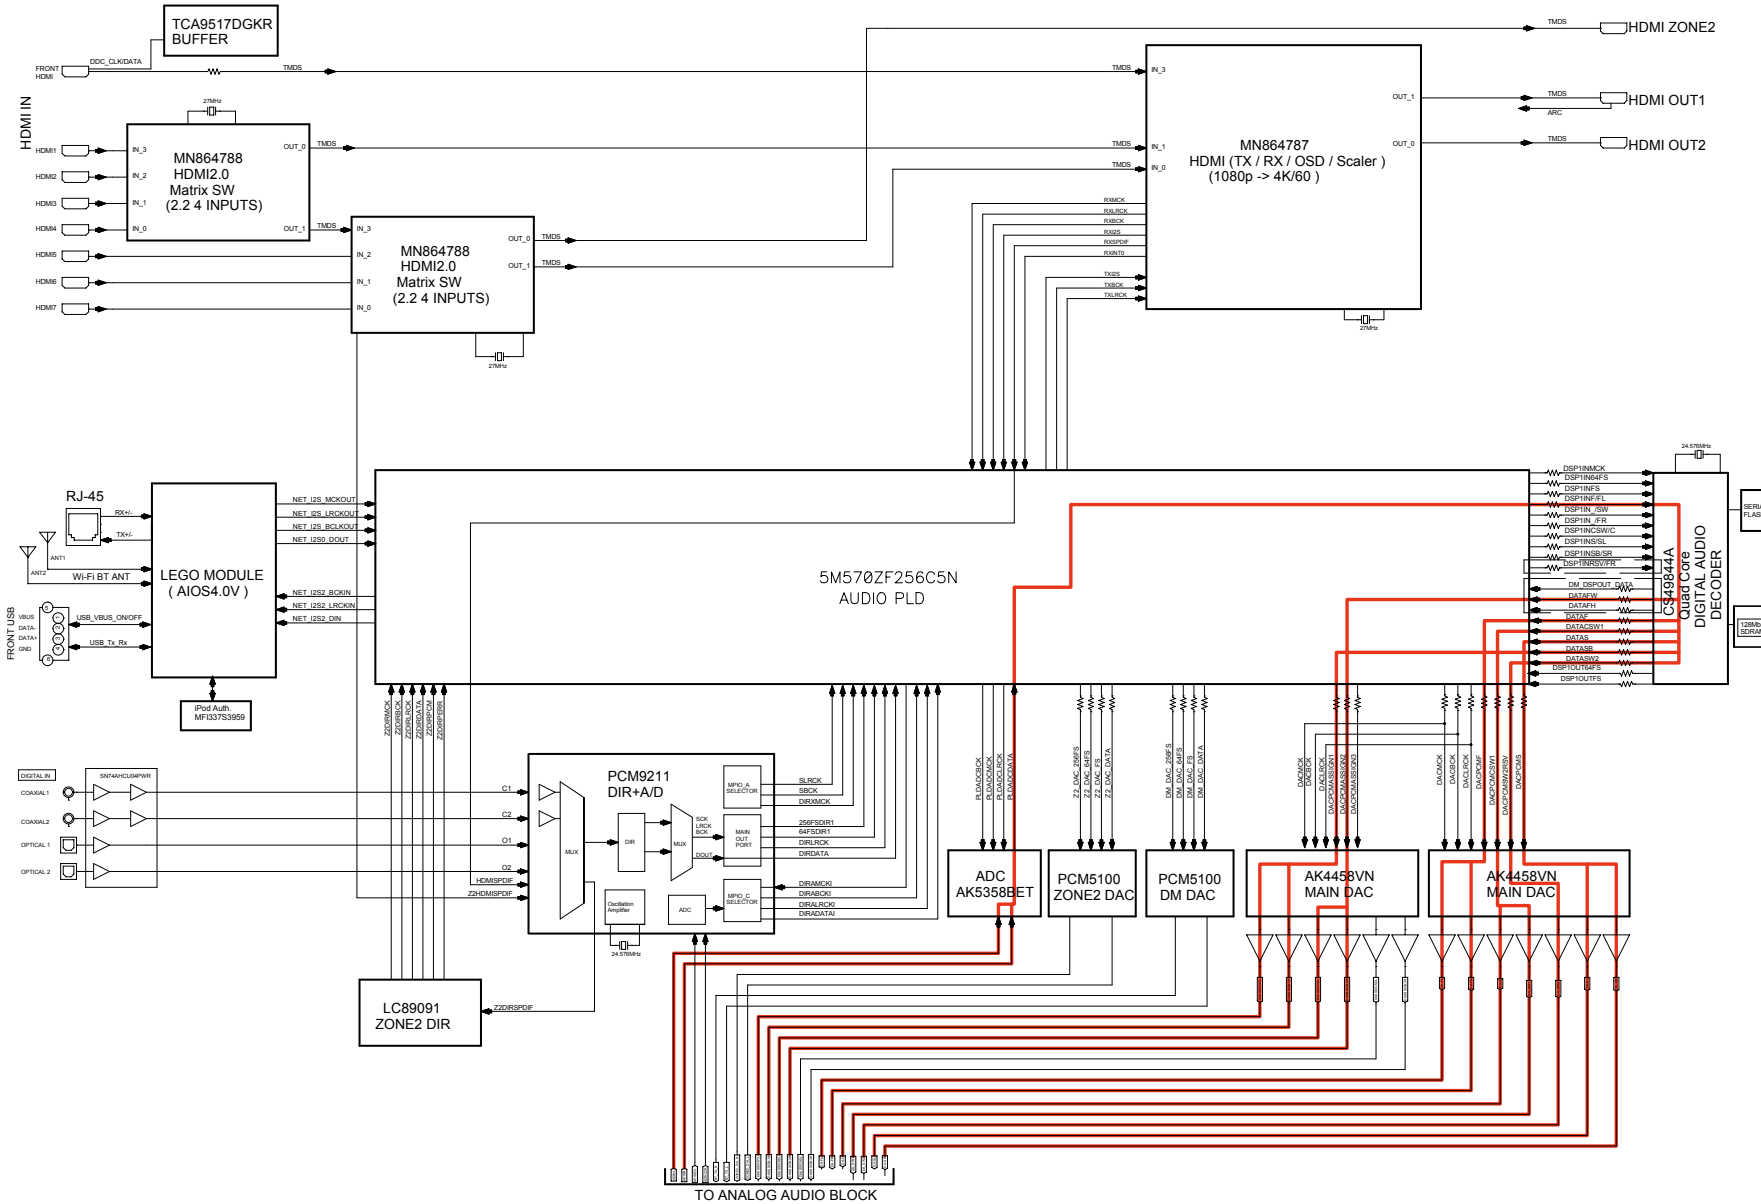


fig.A05b

AVR_X3600 ANALOG AUDIO DIAGRAM

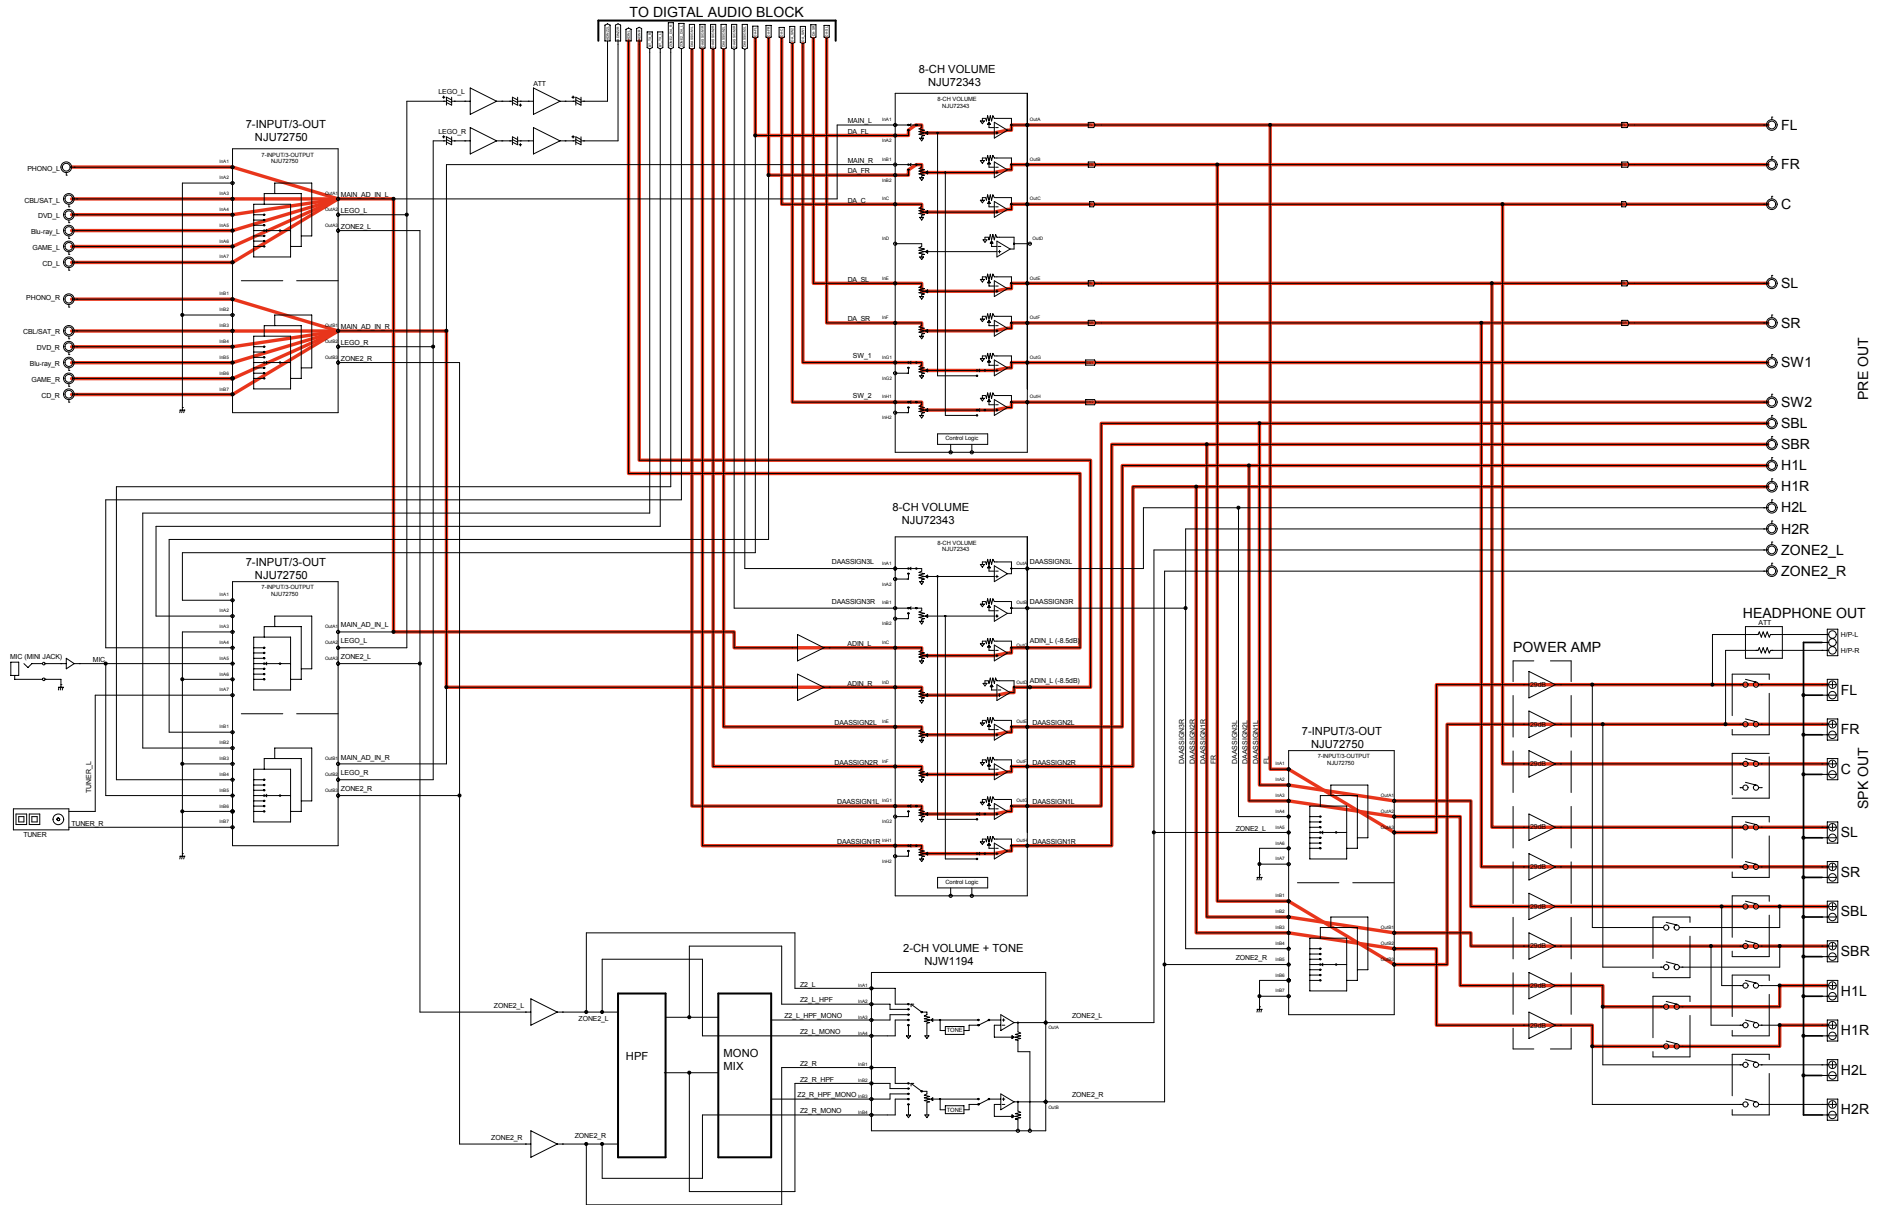


fig.A06

AVR_X3600 ANALOG AUDIO DIAGRAM

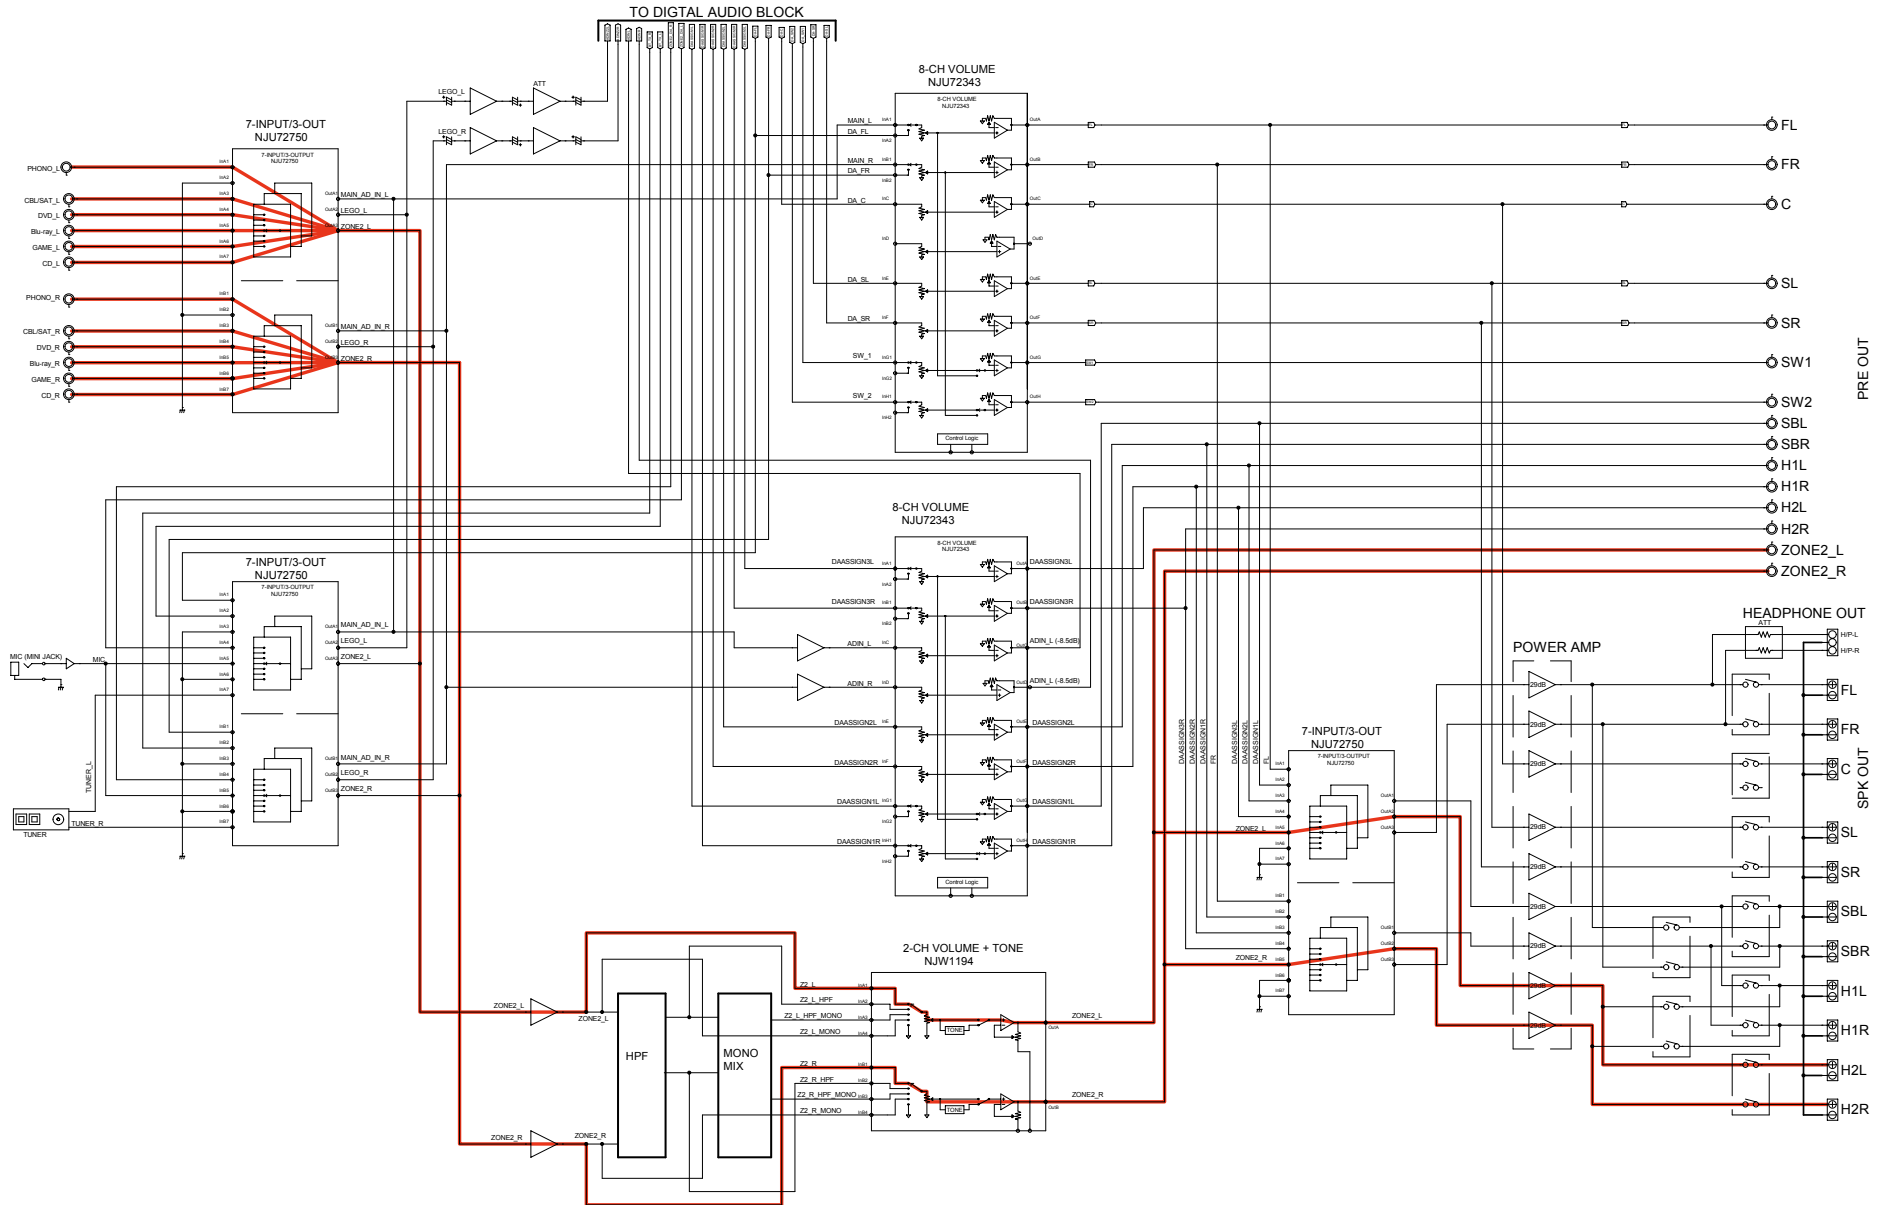


fig.A07b

AVR_X3600 ANALOG AUDIO DIAGRAM

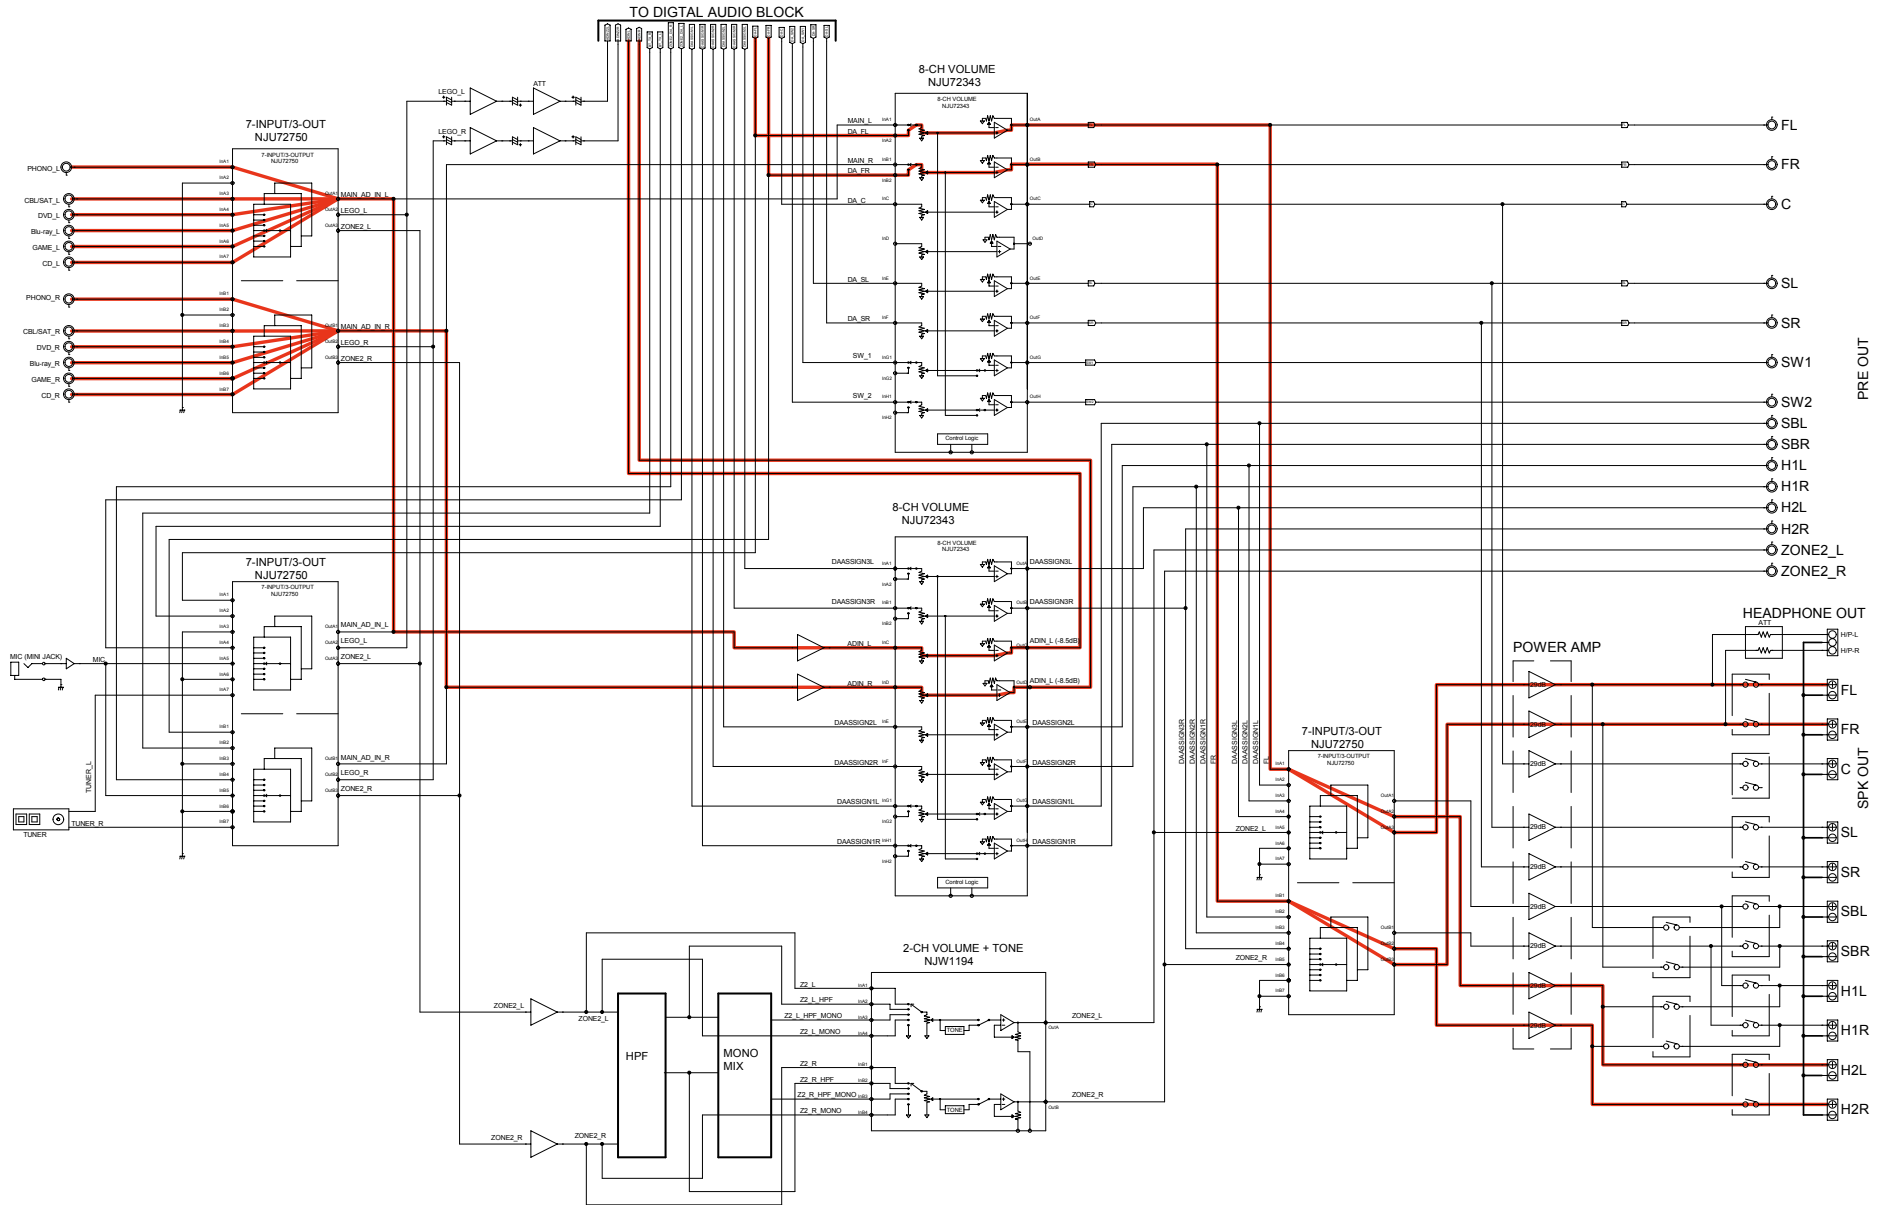


fig.A08b

AVR_X3600 ANALOG AUDIO DIAGRAM

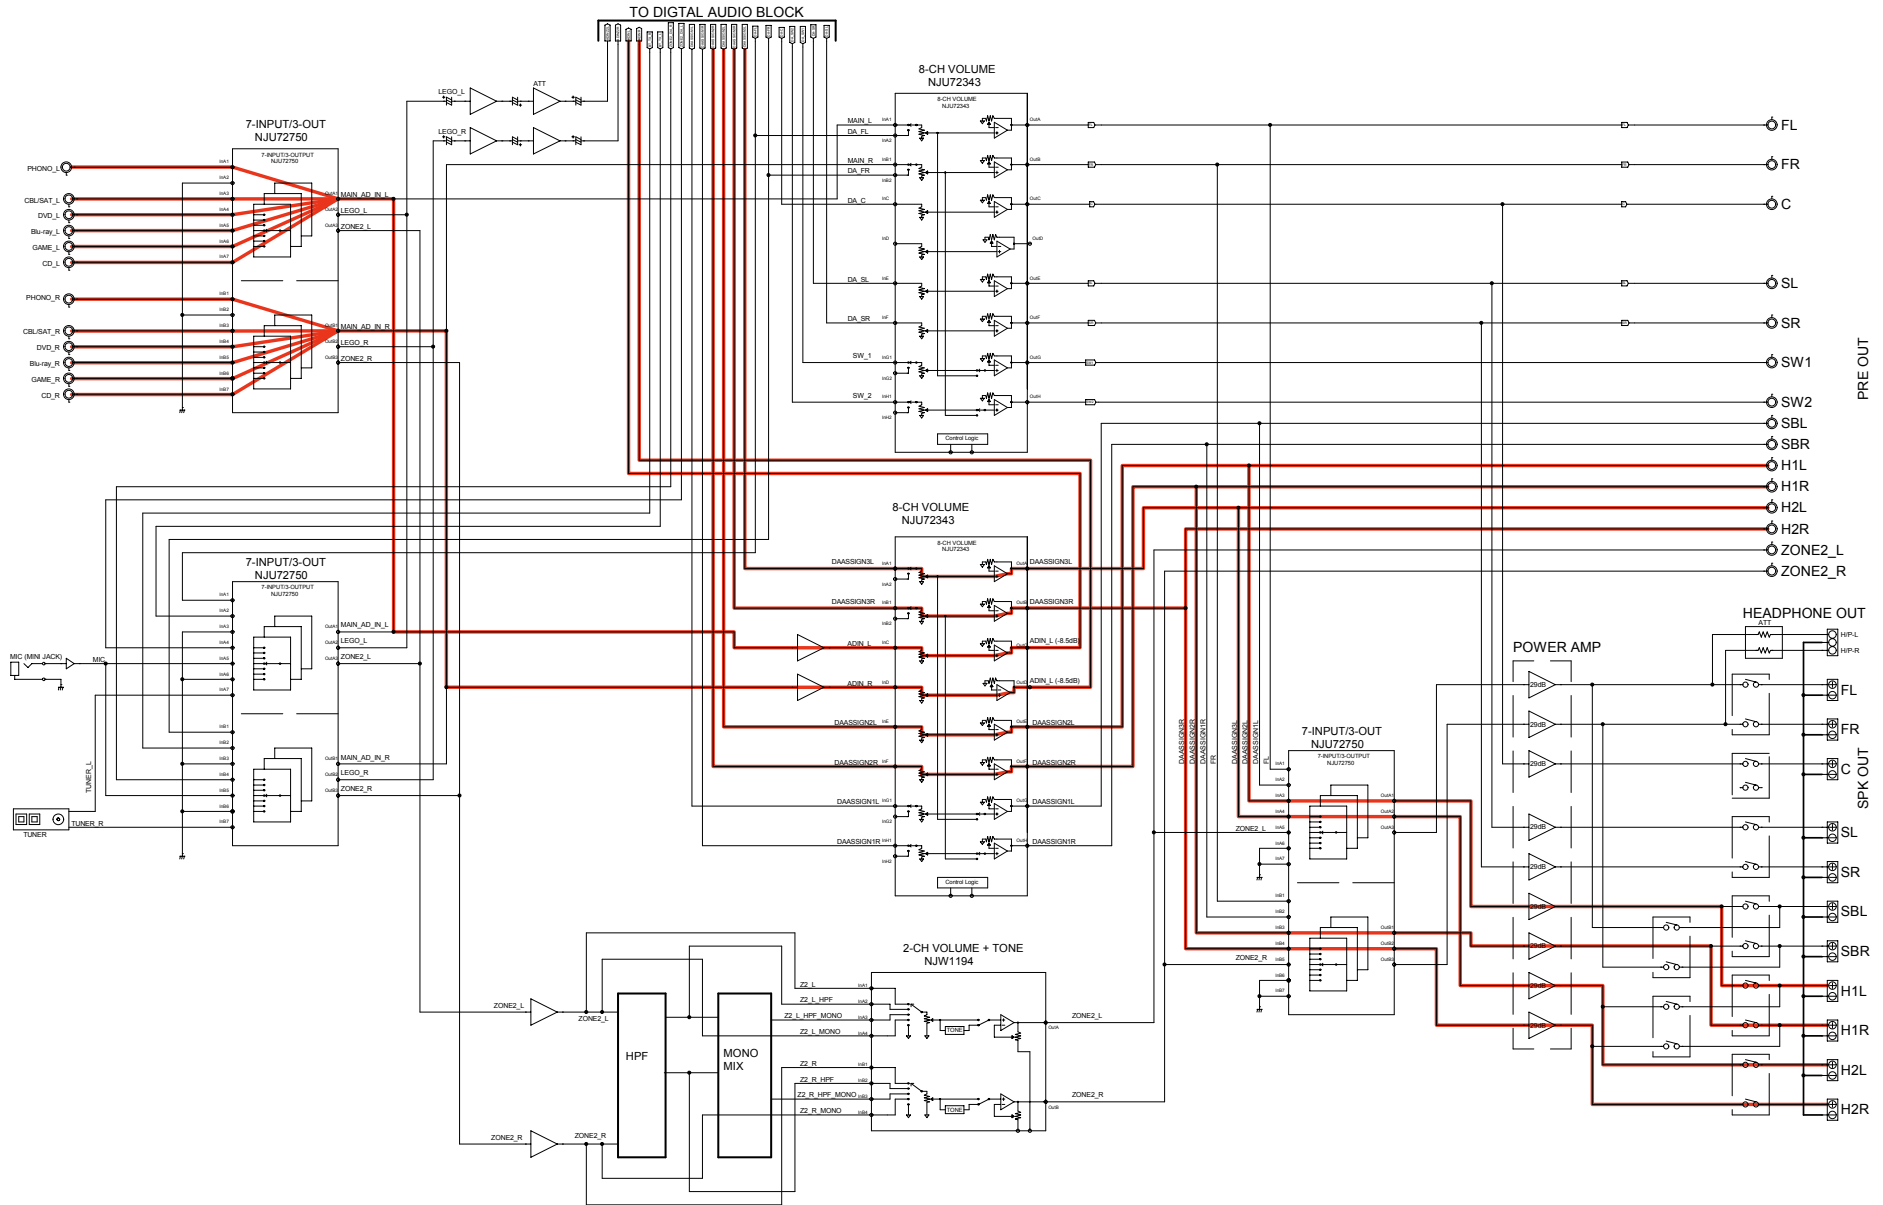


fig.A09a

AVR_X3600 DIGITAL AUDIO DIAGRAM

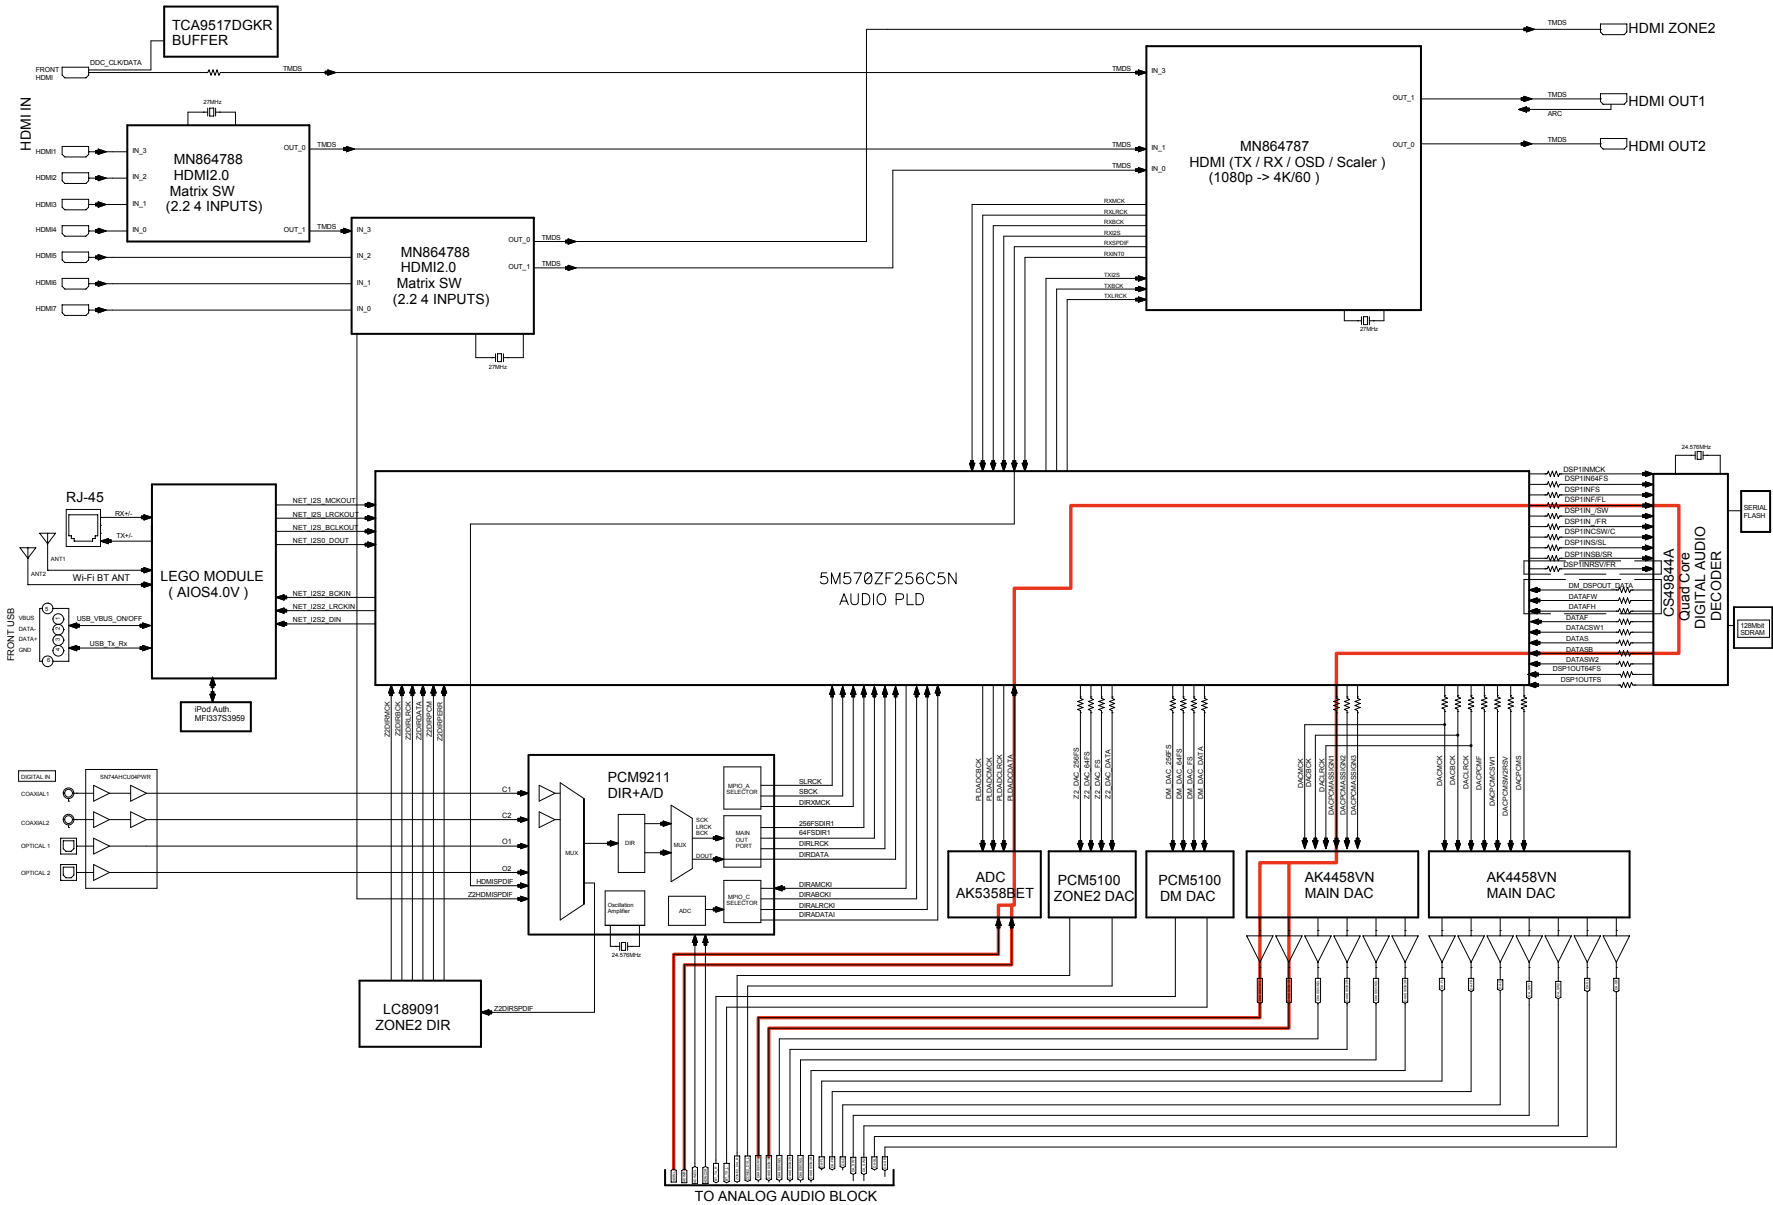


fig.A09b

AVR_X3600 ANALOG AUDIO DIAGRAM

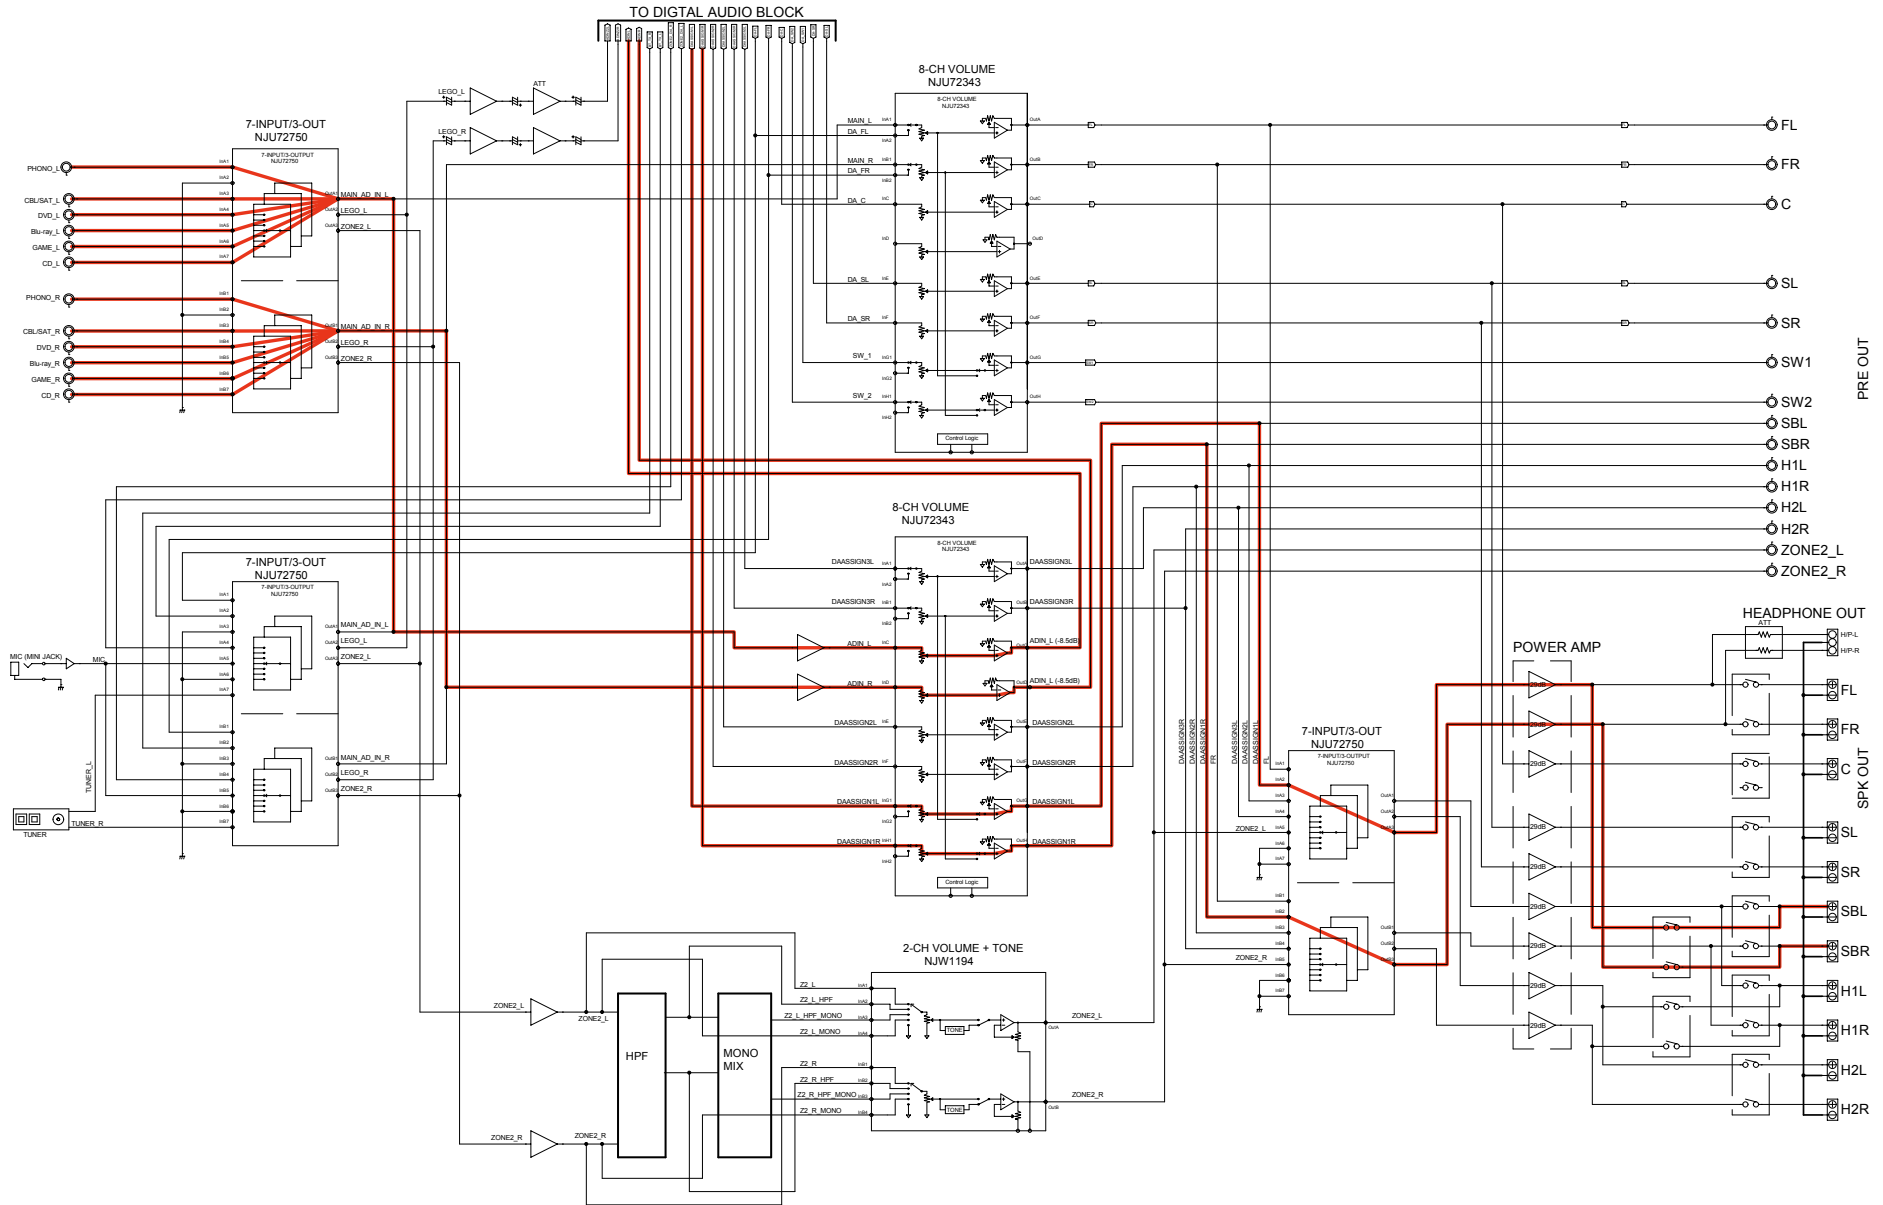


fig.A10a

AVR_X3600 DIGITAL AUDIO DIAGRAM

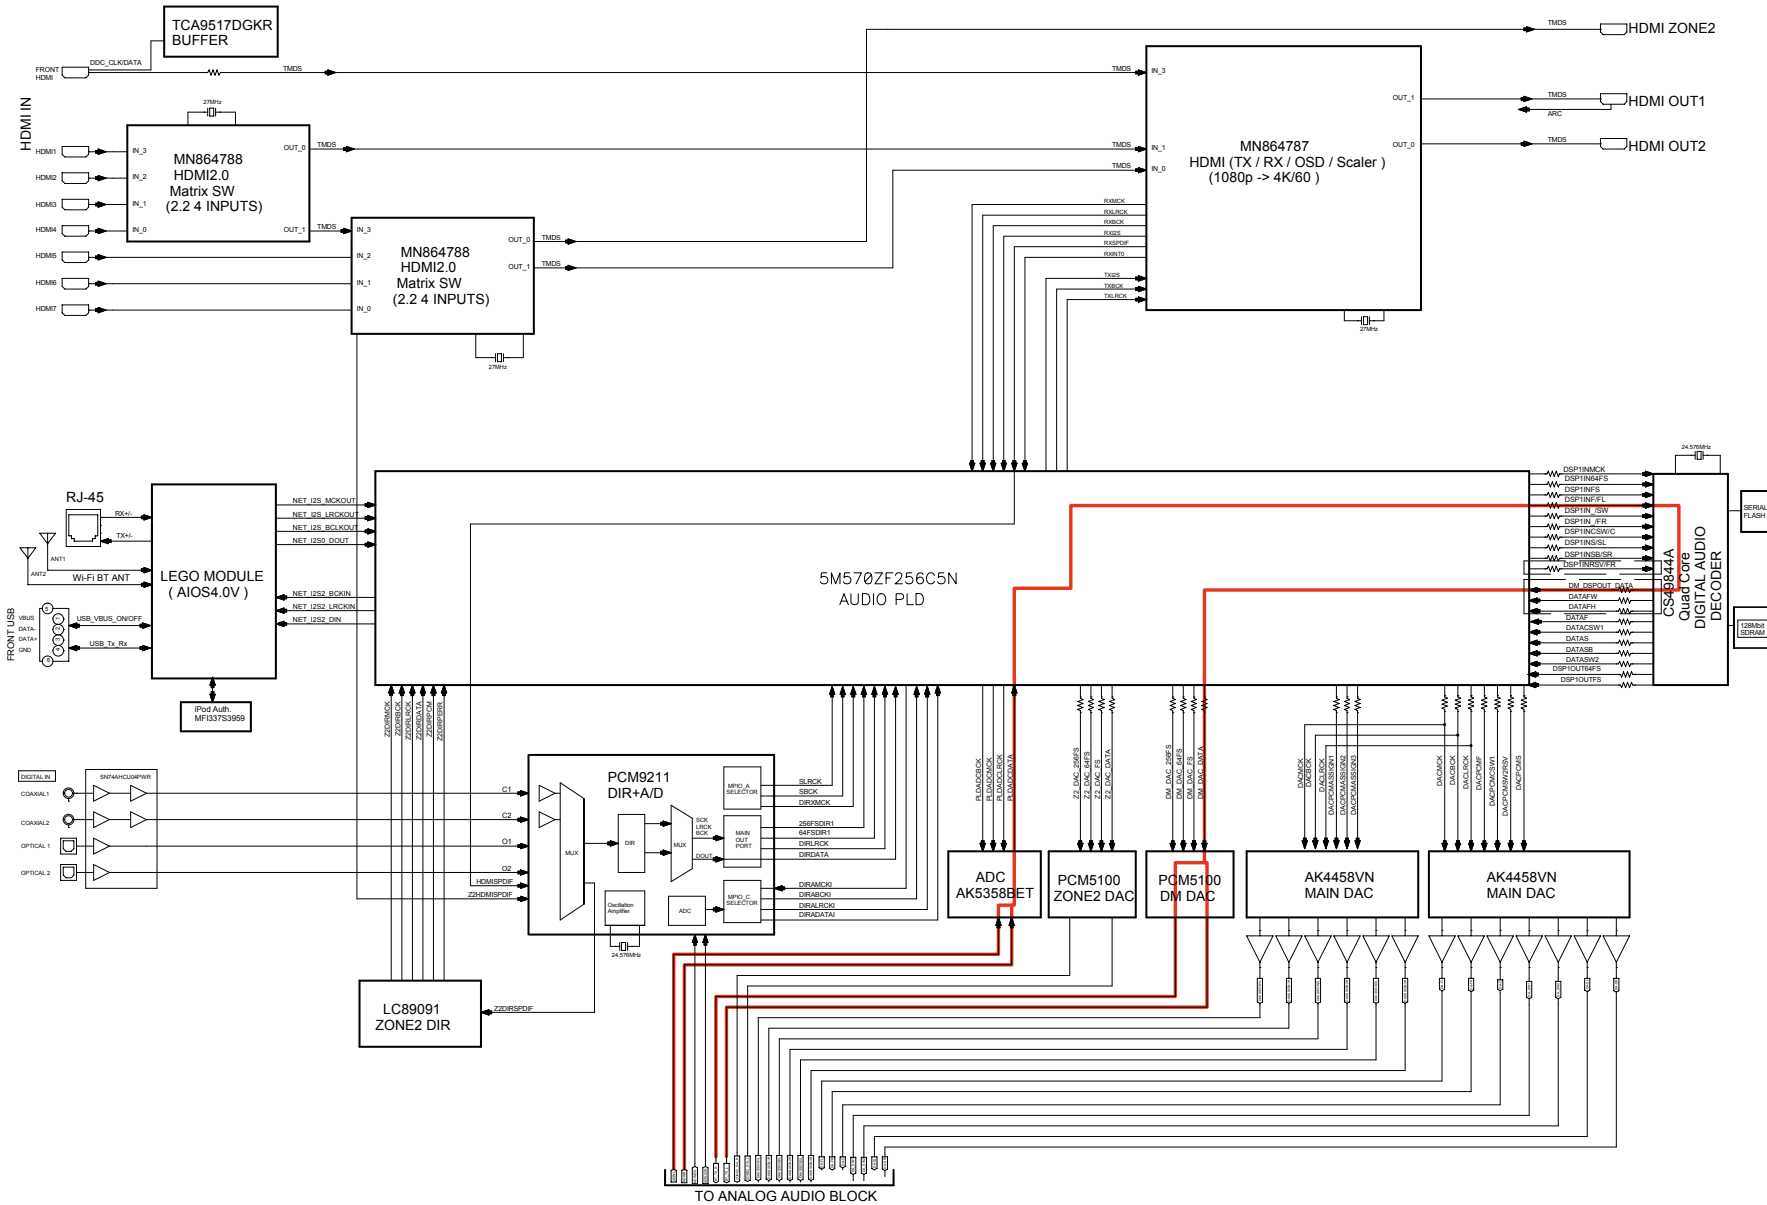


fig.A10b

AVR_X3600 ANALOG AUDIO DIAGRAM


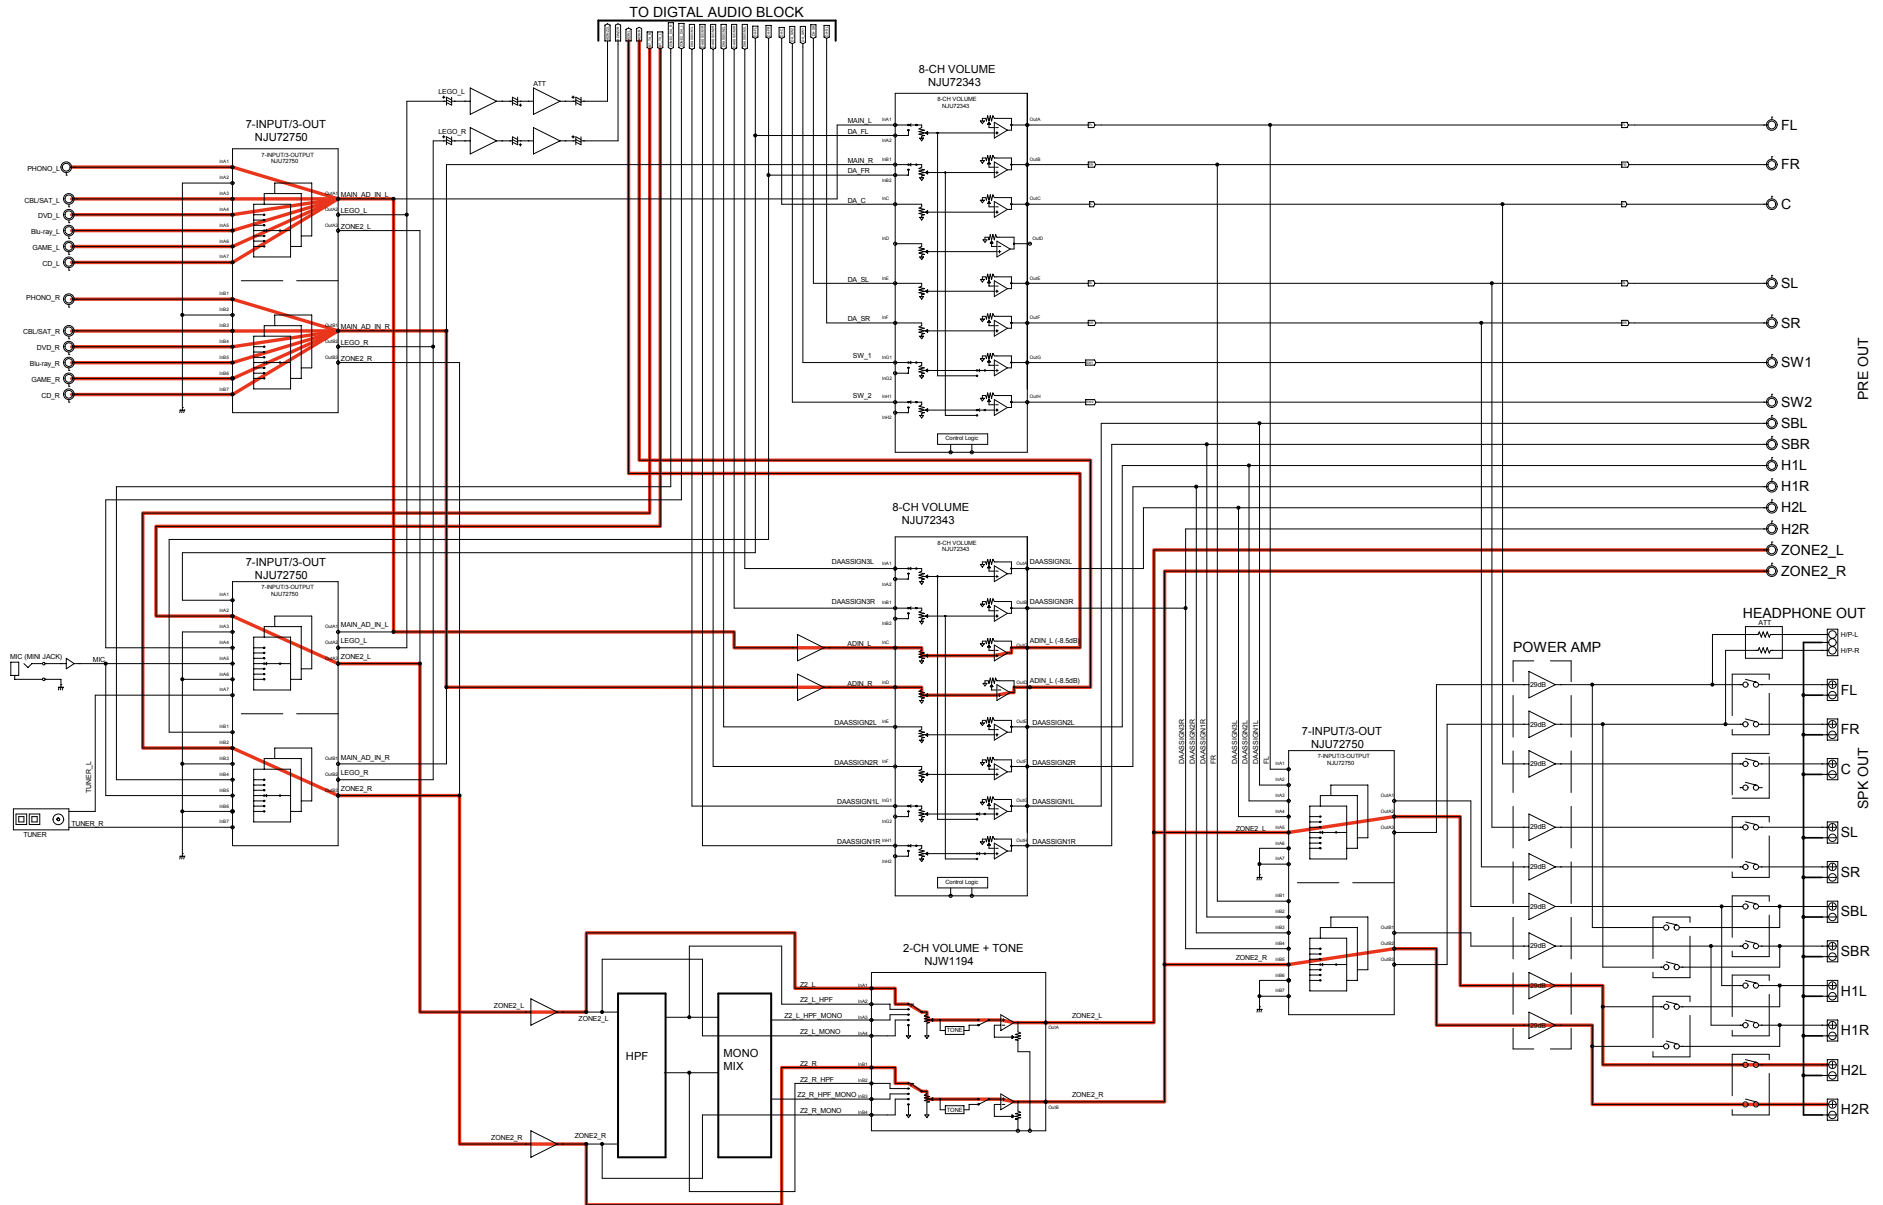


fig.V01

AVR_X3600 VIDEO DIAGRAM

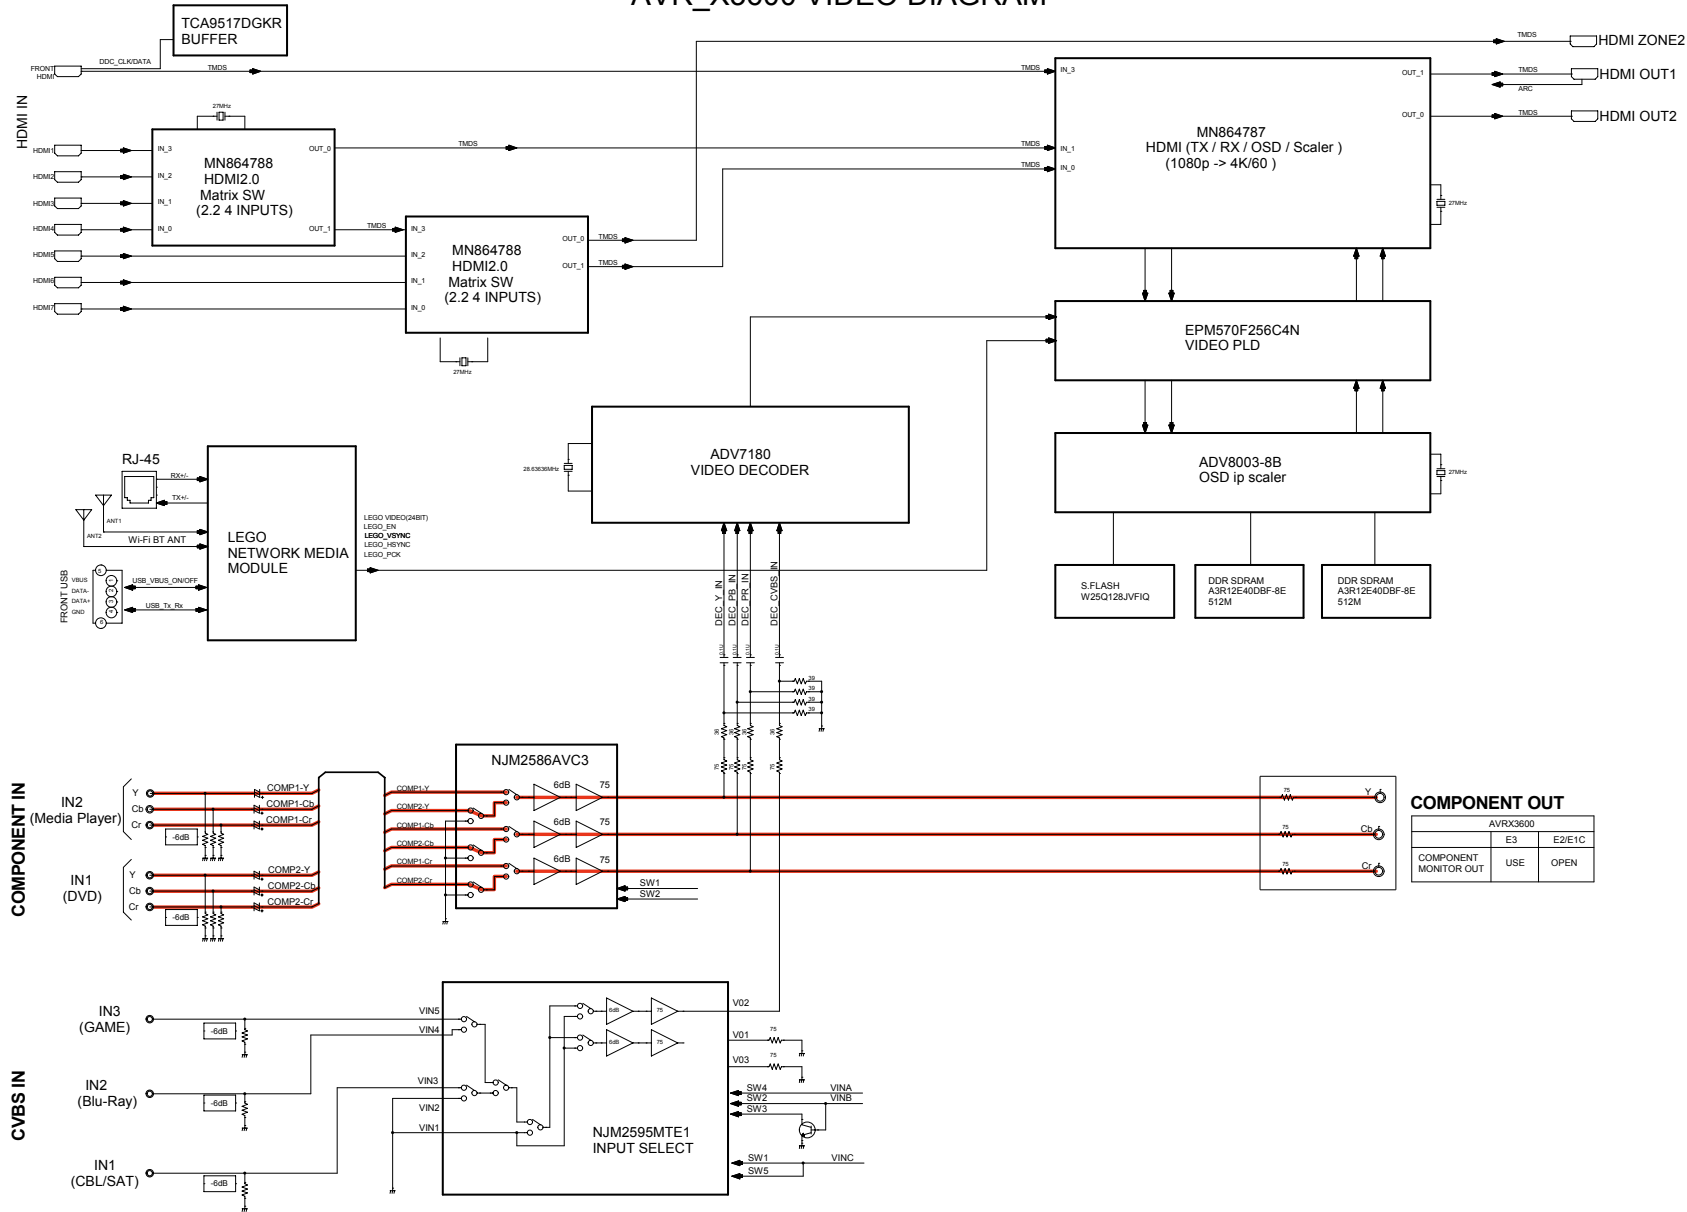


COMPONENT OUT

AVRX3600		
COMPONENT	E3	E2/E1C
MONITOR OUT	USE	OPEN

fig.V02

AVR_X3600 VIDEO DIAGRAM

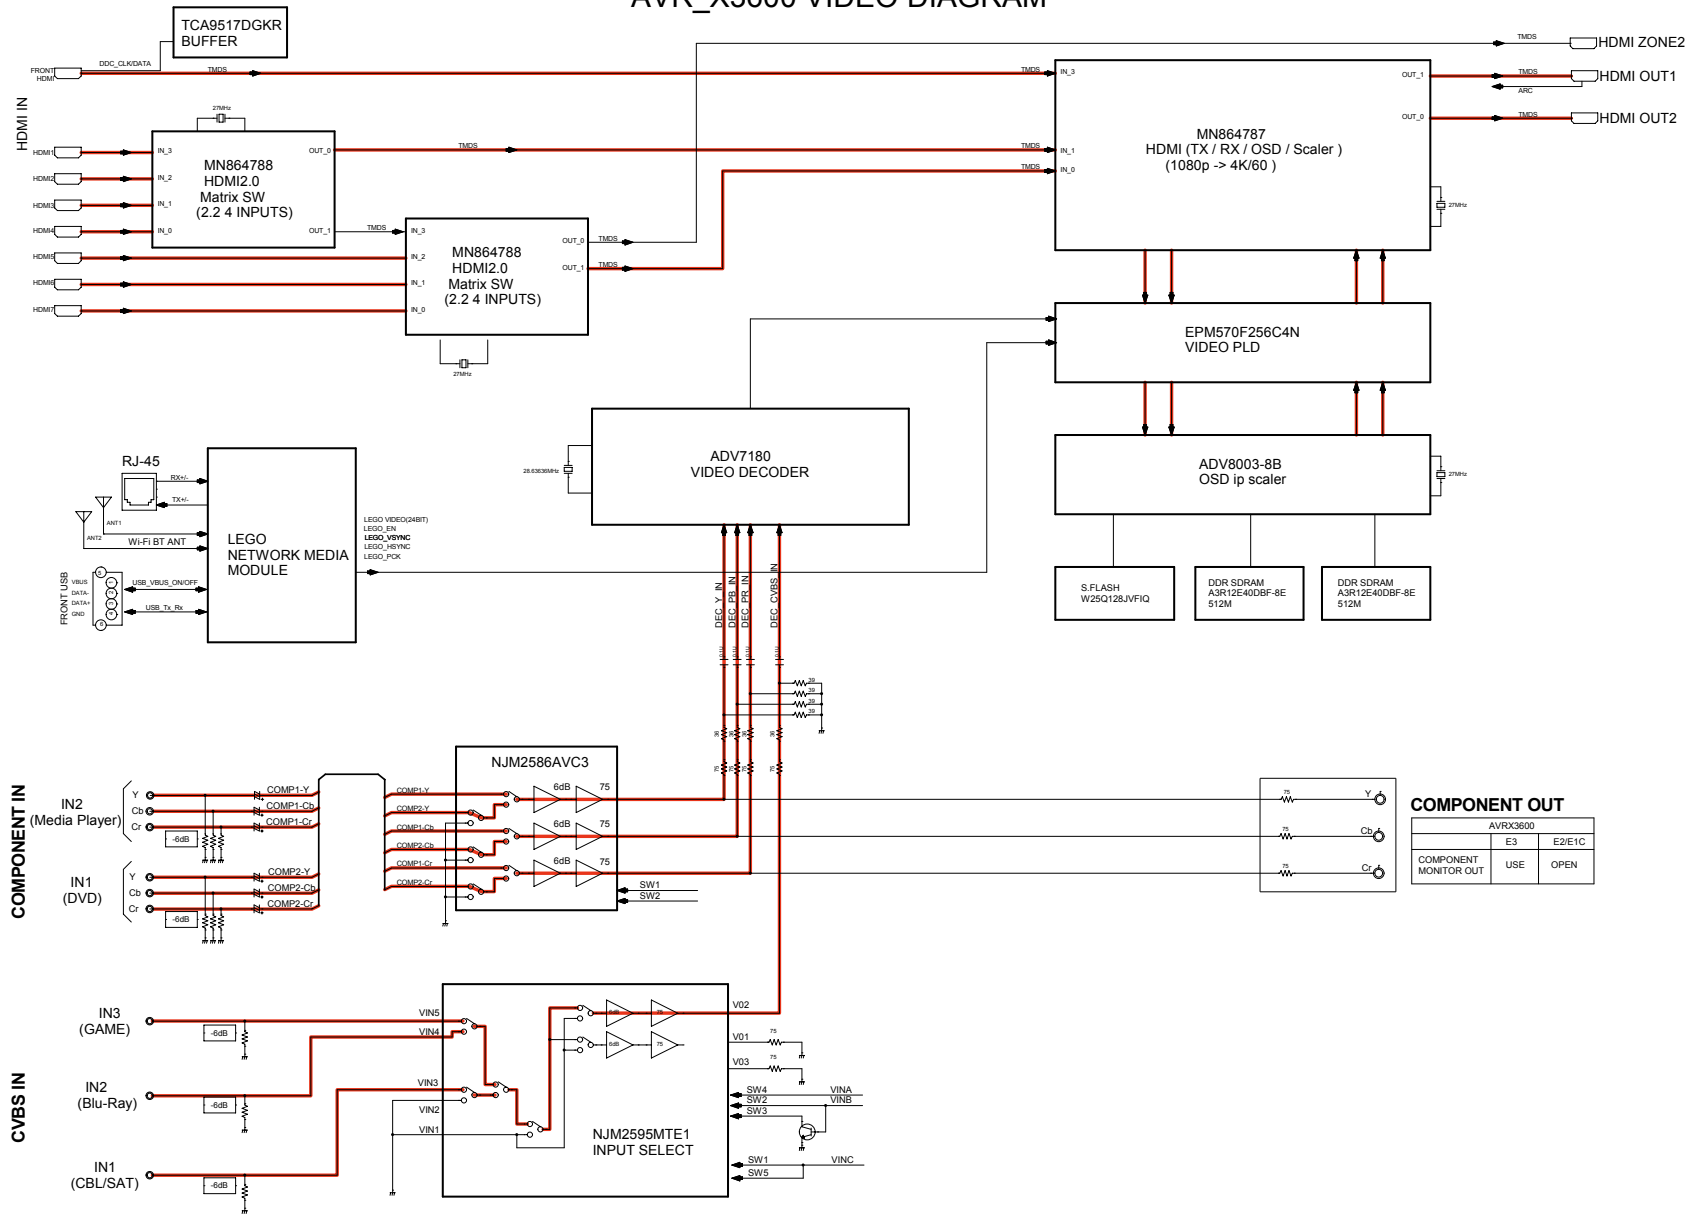


COMPONENT OUT

AVRX3600			
COMPONENT	MONITOR OUT	USE	E2/E1C
Y	75		
Cb	75		
Cr	75		

fig.V03

AVR_X3600 VIDEO DIAGRAM

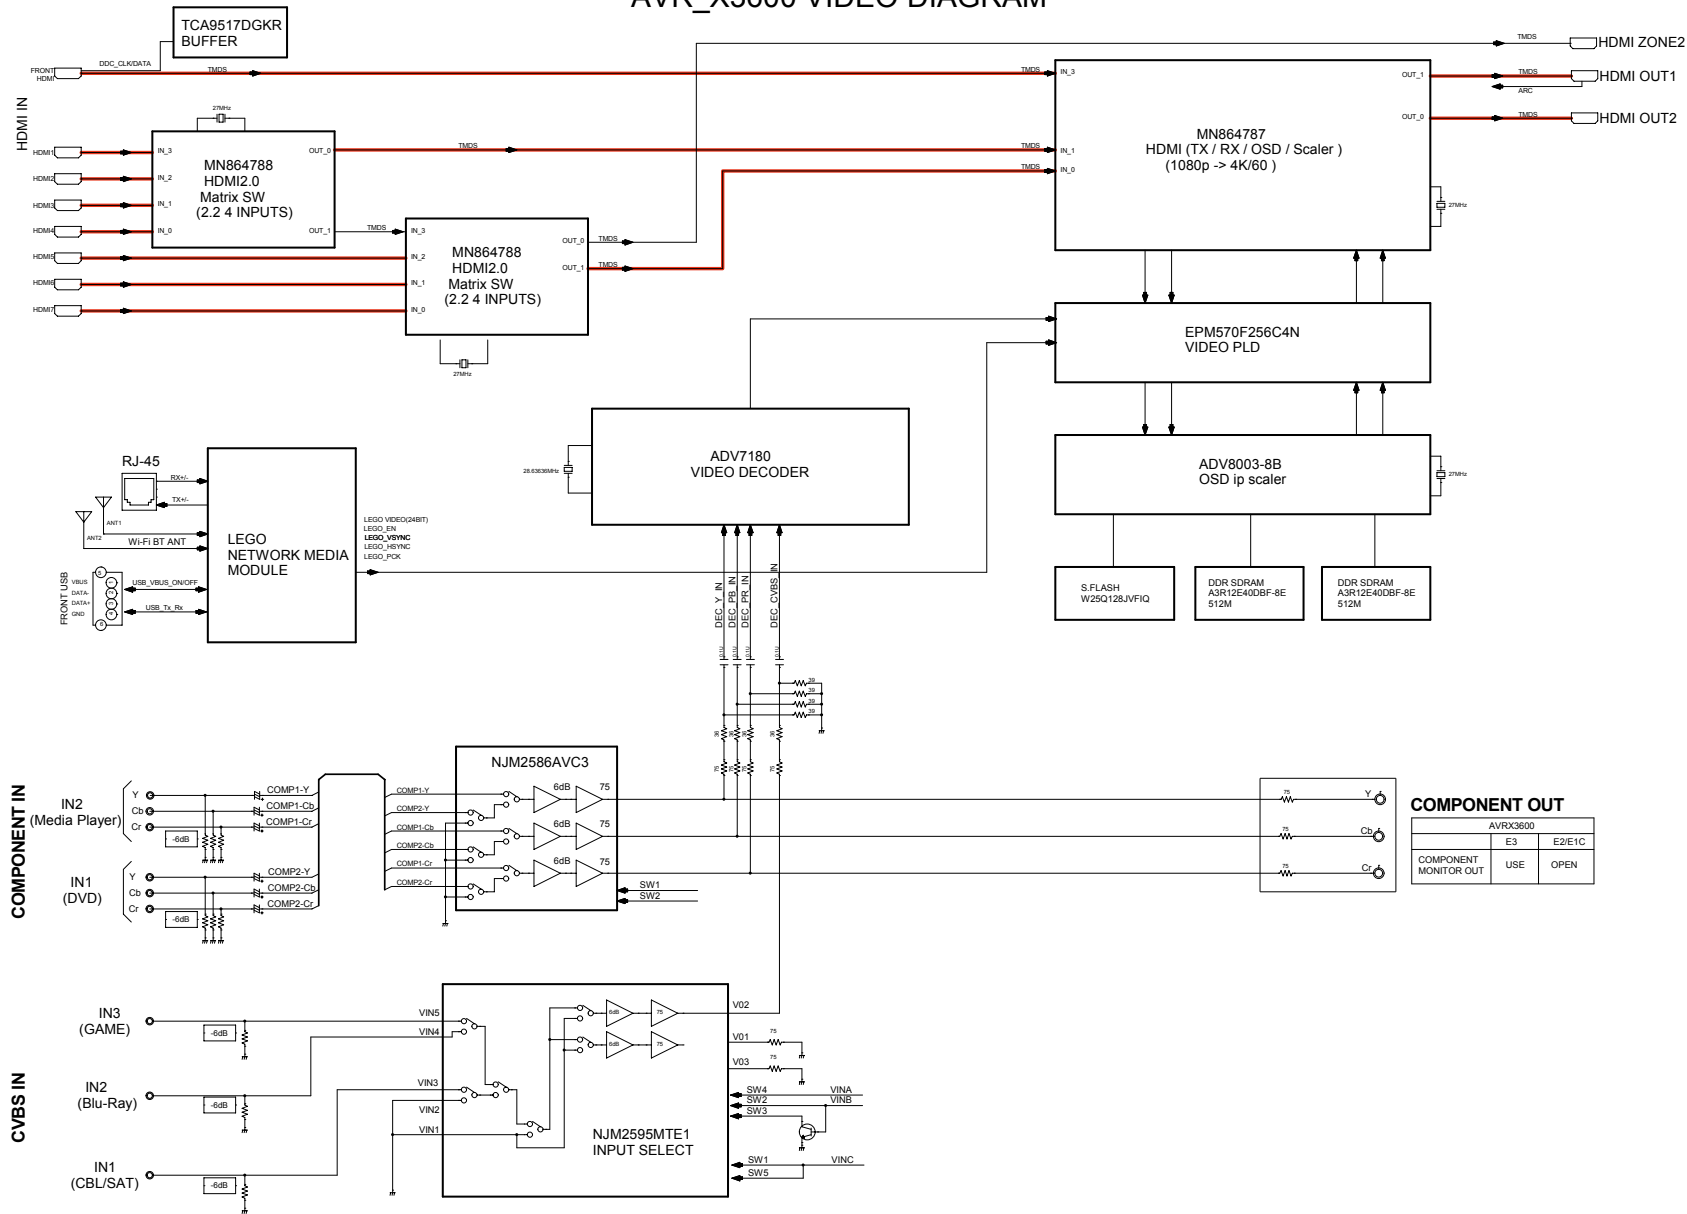

COMPONENT OUT

AVRX3600		
COMPONENT	E3	E2/E1C
COMPONENT MONITOR OUT	USE	OPEN

fig.V04

AVR_X3600 VIDEO DIAGRAM

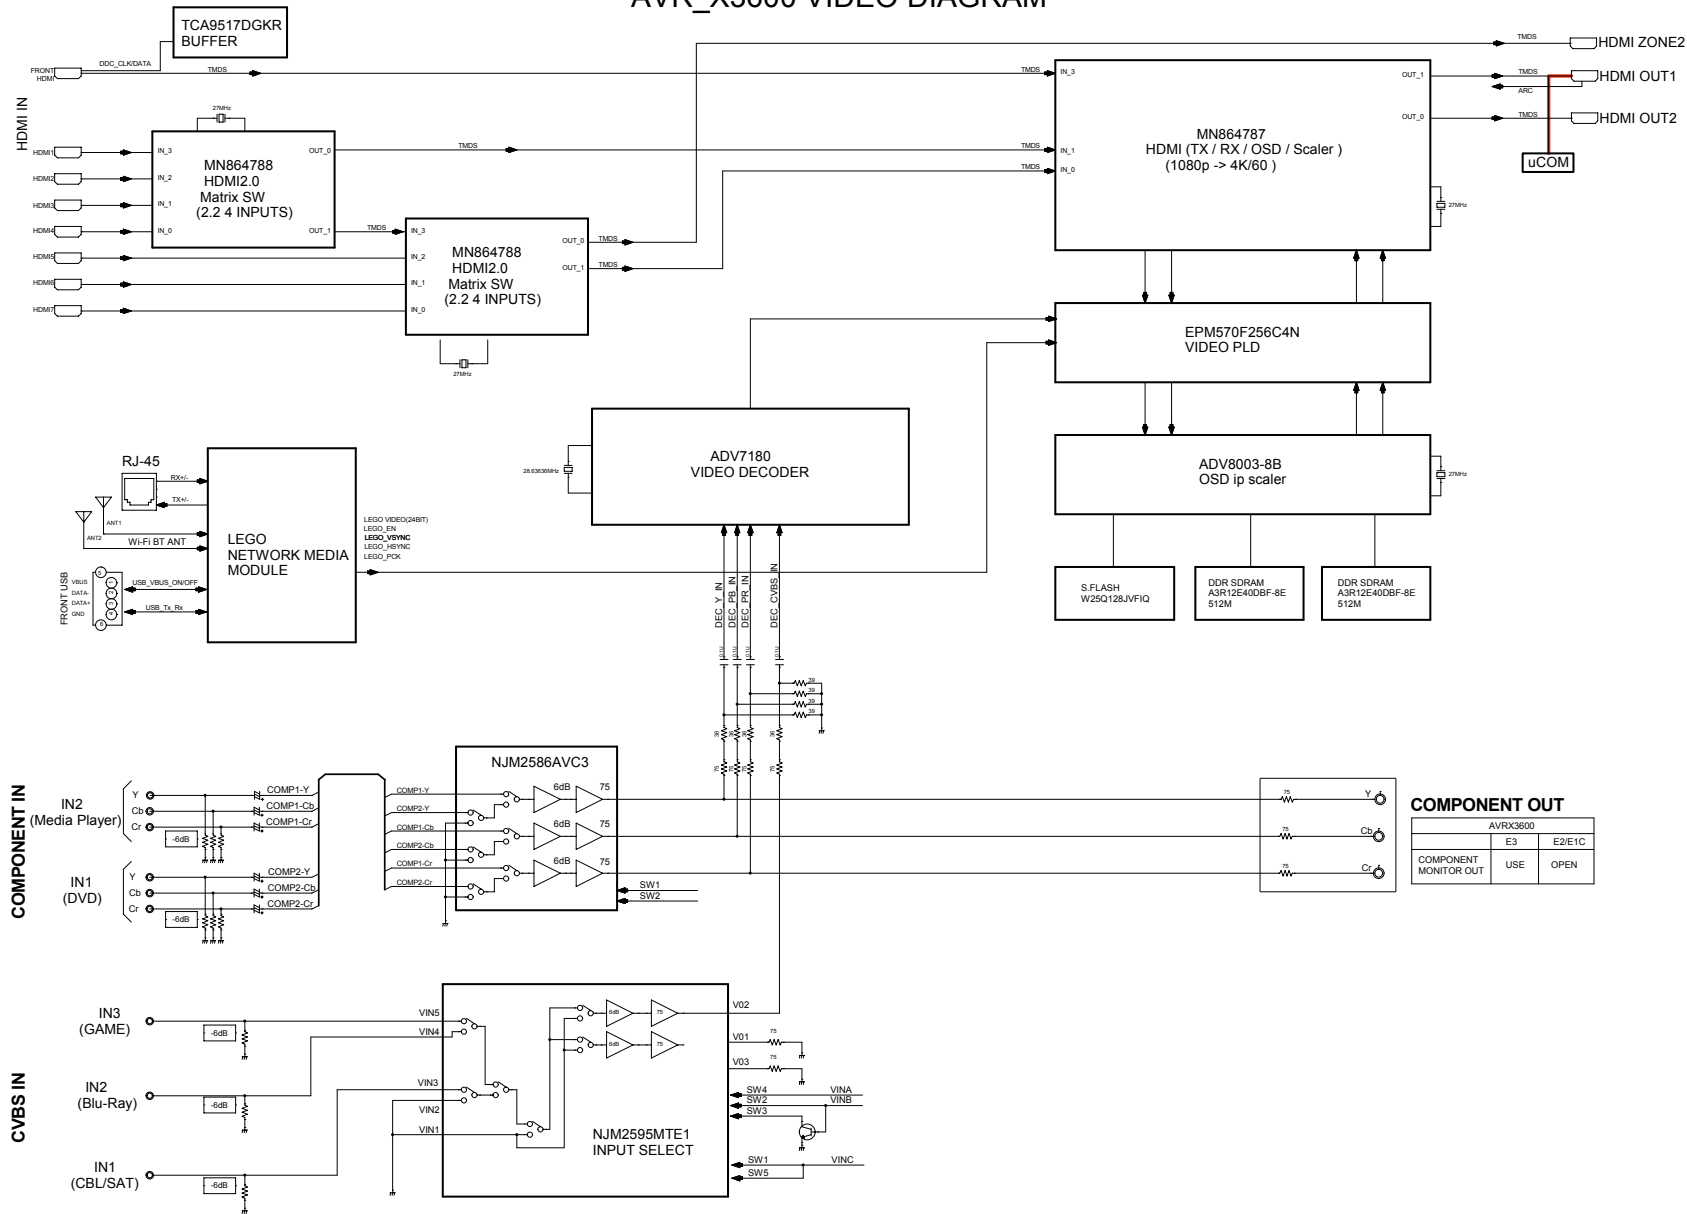


fig.V05a

AVR_X3600 DIGITAL AUDIO DIAGRAM

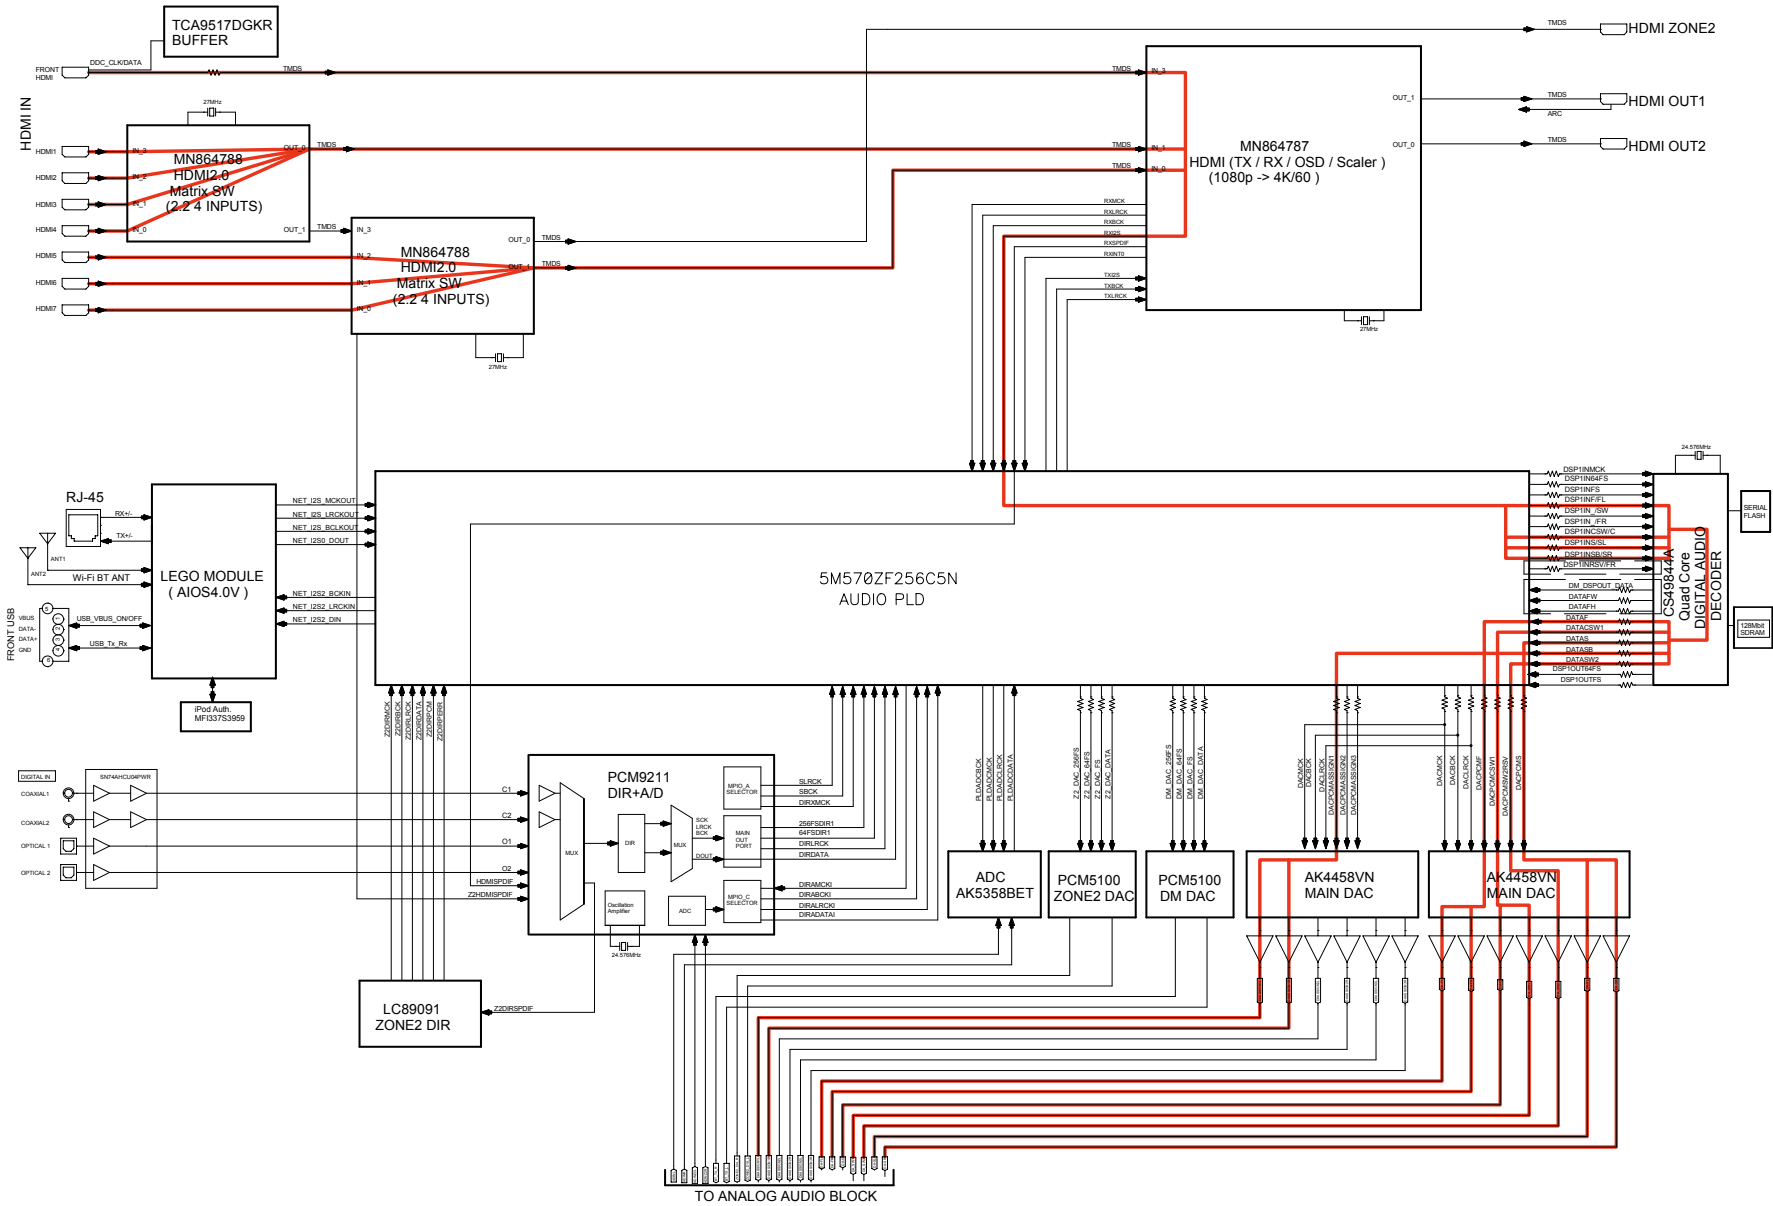


fig.V05b

AVR_X3600 ANALOG AUDIO DIAGRAM


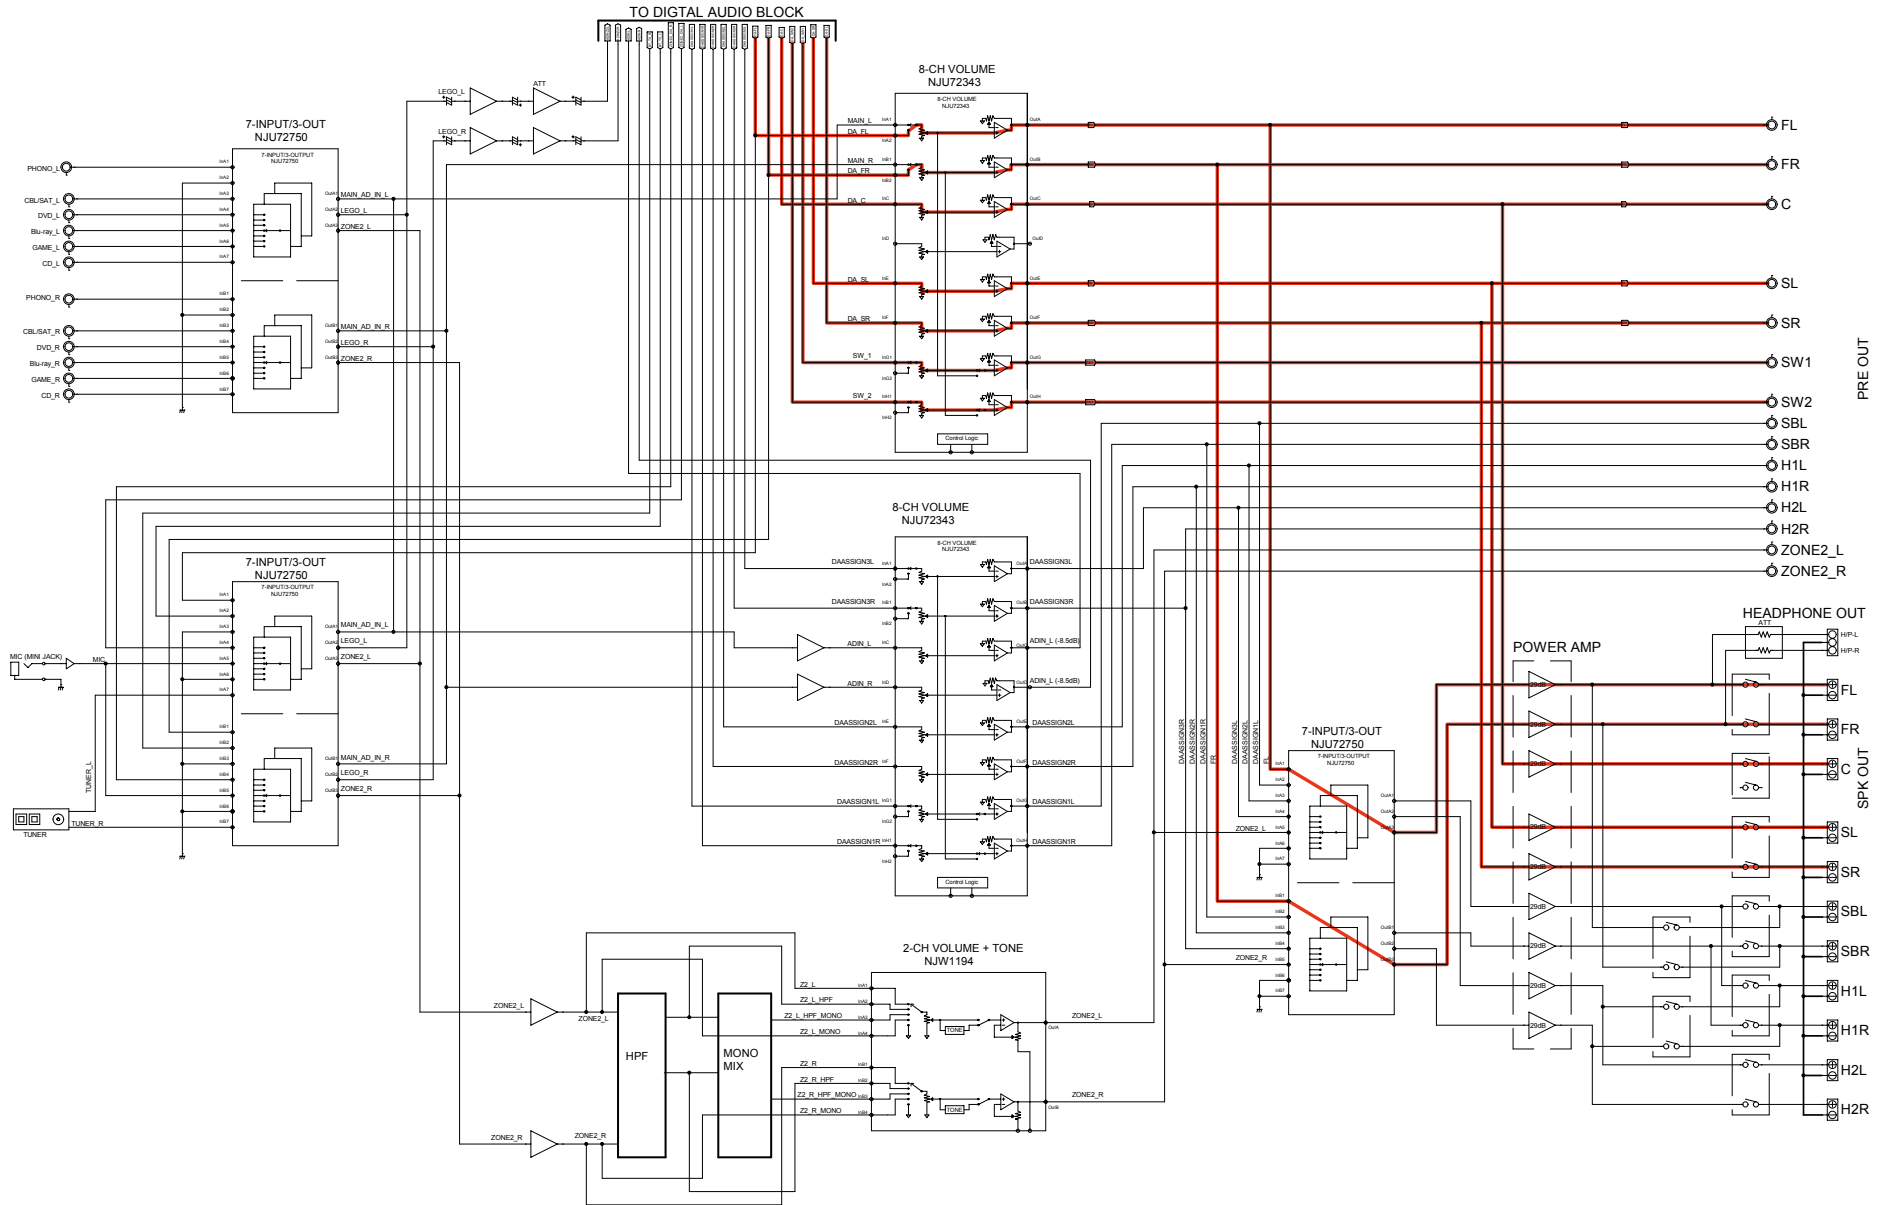


fig.V07


AVR_X3600 VIDEO DIAGRAM

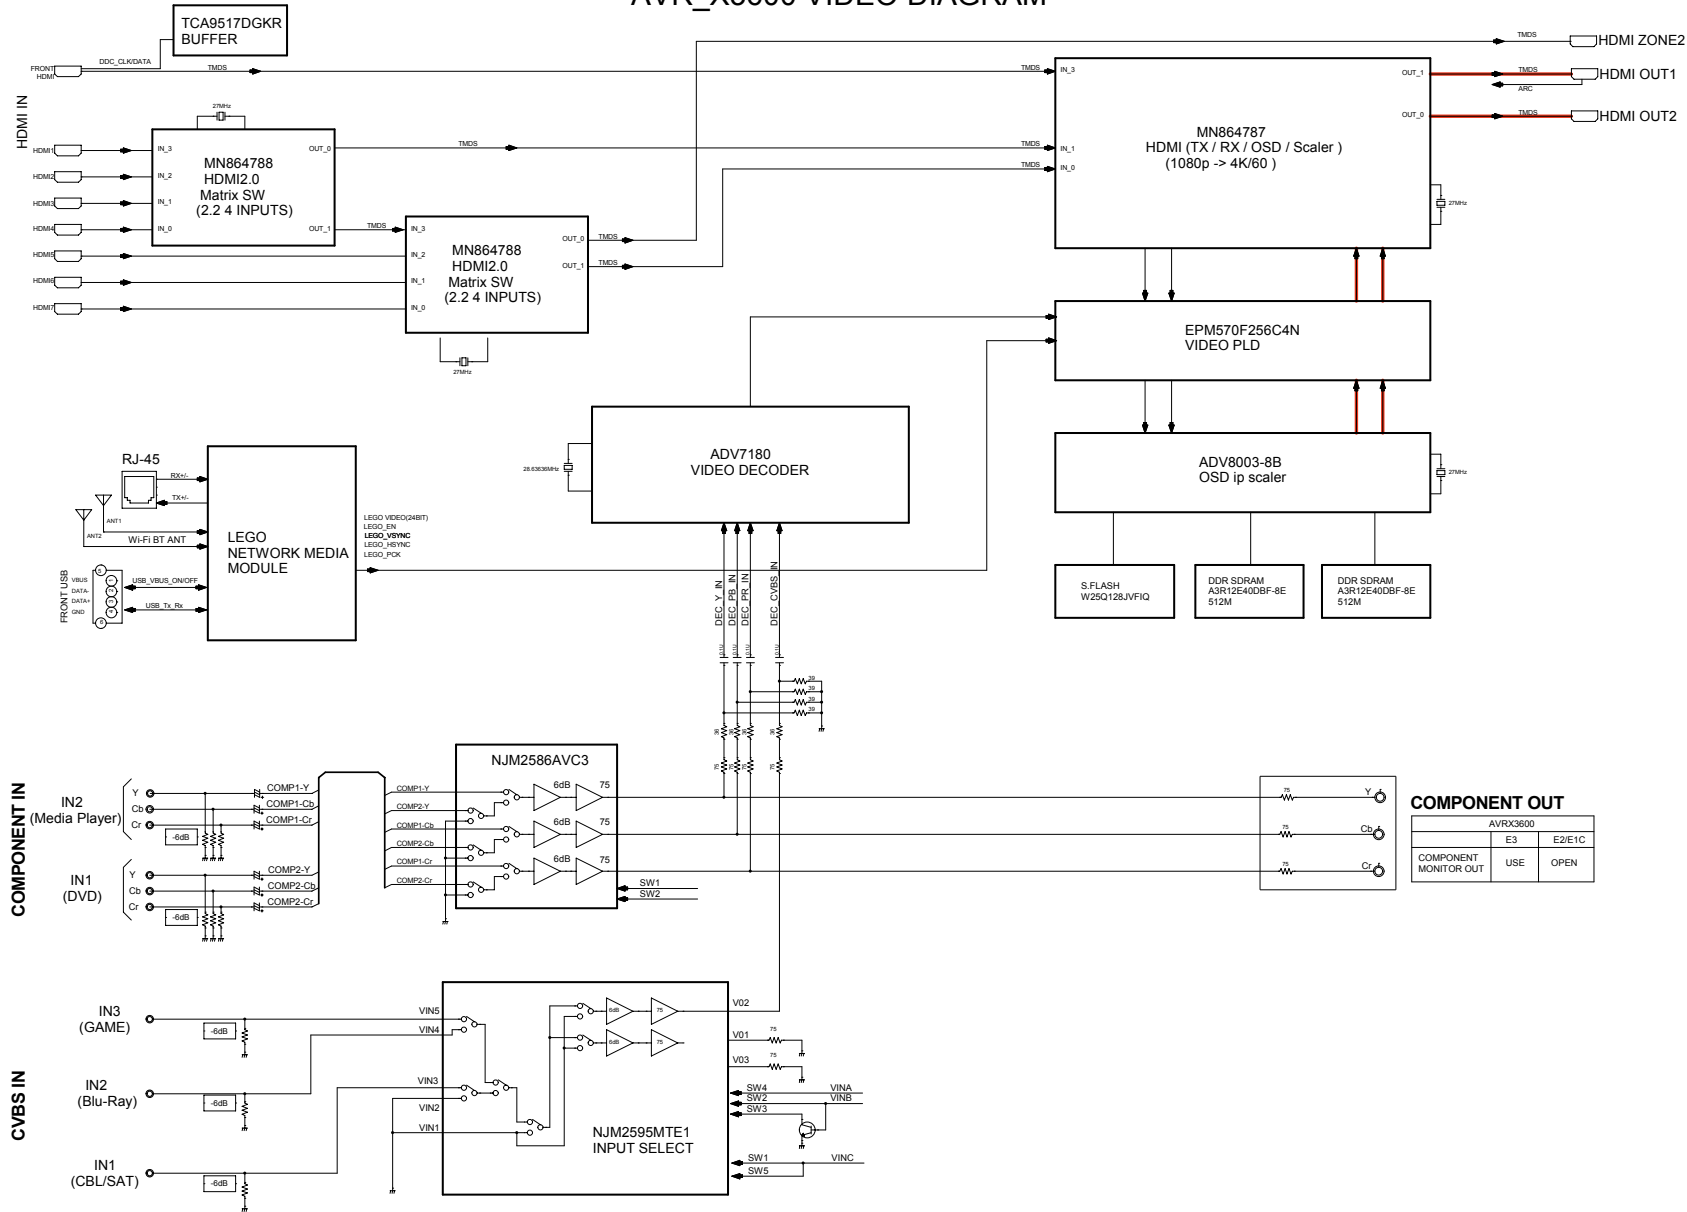

AVRX3600		
COMPONENT MONITOR OUT	E3	E2/E1C
	USE	OPEN

fig.V08

AVR_X3600 VIDEO DIAGRAM

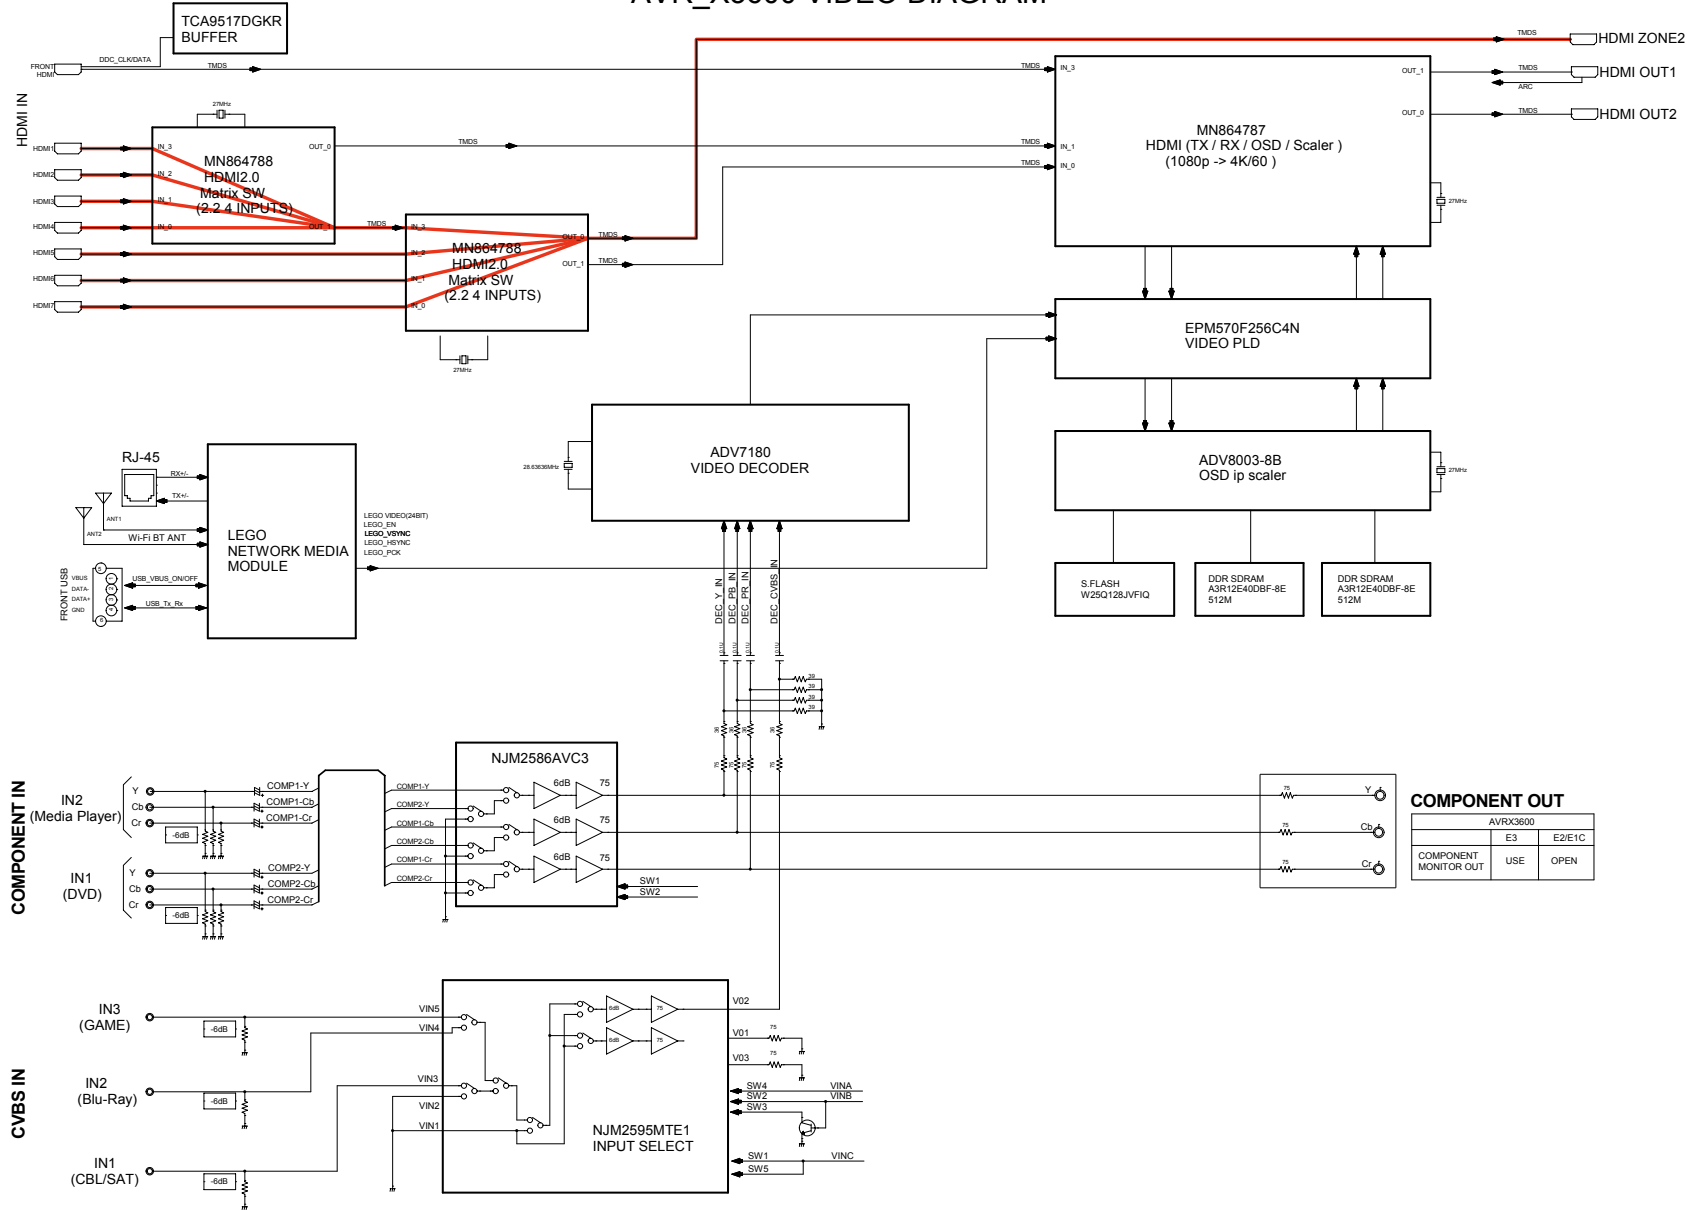

JIG FOR SERVICING

Use the following jigs (extension cable kit) when repairing the PCBs.
Order with your dealer for the jigs your dealer if necessary.

CAUTION : Incorrect connections may cause malfunction.

Connection of Jig for DIGITAL PCB

---Items to Be Prepared---




8U-110084S : EXTENSION UNIT KIT	:	1 Set
8U-110136S : EXTENSION UNIT KIT	:	1 Set
Insulation sheet (Not supplied)	:	3 sheet
Ground lead (Not supplied)	:	3 pc

-Proceeding-


(1) Remove the screws.



(2) Remove the connector PCB.

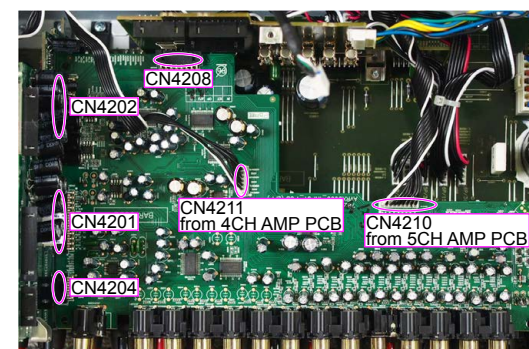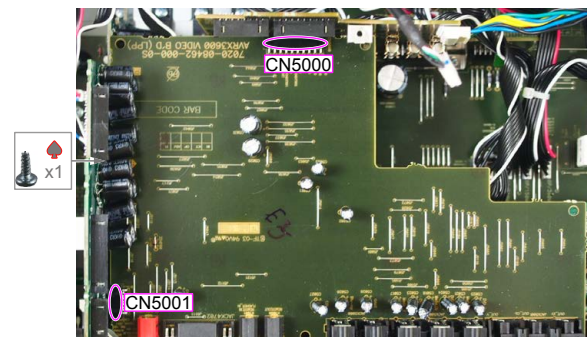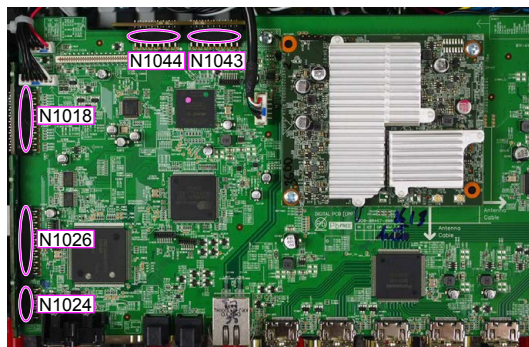

- (3) Remove the DIGITAL PCB from the chassis and turn it over.
Place an insulation sheet larger than the PCB underneath the DIGITAL PCB.
※ Connect the earth of the PCB to the chassis using an earth wire, etc.

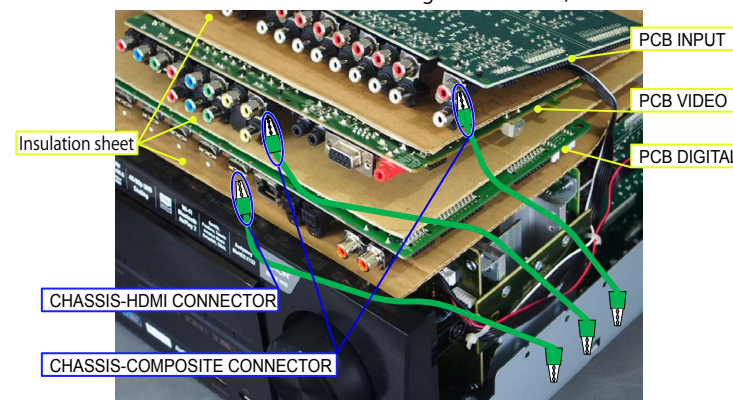

Before Servicing
This Unit


Electrical

Mechanical

Repair Information

Updating

(4) Connect the expansion cables.

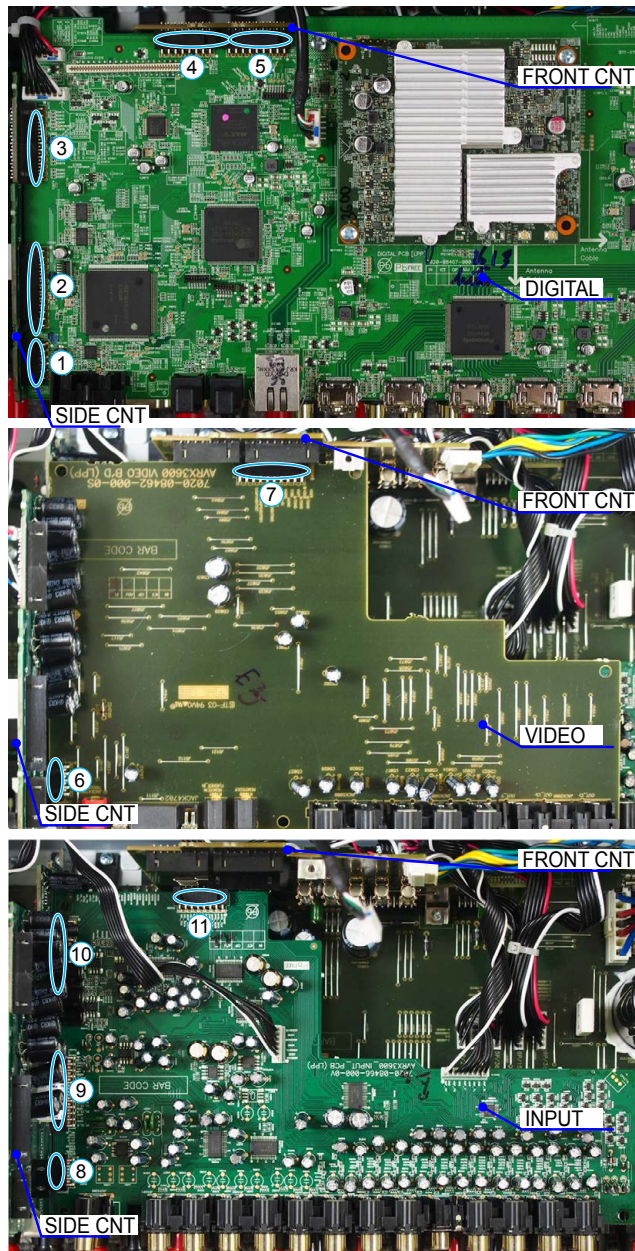

Board-to-Board Connections

No.	Pin	Ref. No.	PCB		Ref. No.	PCB
①	11pin	CP1023	SIDE CNT	↔	N1024	DIGITAL
②	23pin	CP1017	SIDE CNT	↔	N1026	DIGITAL
③	21pin	CP1018	SIDE CNT	↔	N1018	DIGITAL
④	15pin	CP1040	FRONT CNT	↔	N1044	DIGITAL
⑤	17pin	CP1039	FRONT CNT	↔	N1043	DIGITAL
⑥	9pin	CP4700	SIDE CNT	↔	CN5001	VIDEO
⑦	19pin	CP5000	FRONT CNT	↔	CN5000	VIDEO
⑧	9pin	CP4205	SIDE CNT	↔	CN4204	INPUT
⑨	23pin	CP4206	SIDE CNT	↔	CN4201	INPUT
⑩	27pin	CP4203	SIDE CNT	↔	CN4202	INPUT
⑪	15pin	CP4203	FRONT CNT	↔	CN4208	INPUT

ADJUSTMENT

Adjusting Idling Current

NOTE : Adjusting the idling current when "ECO Mode" is set may damage the Power AMP.

1. Preparation

- Prepare a DC voltmeter.
- Place the unit under normal usage conditions, away from highly ventilated areas such as next to an air conditioning machine or electric fan.
The set requires an ambient temperature of 15°C to 30°C and standard humidity.
- Settings of This Unit
 - POWER (Power source switch) STANDBY
 - SPEAKER (Speaker terminal) No load(Do not connect equipment such as speakers or dummy resistors.)

2. Adjustment Procedure



- Make sure that "ECO Mode" is off.
 - Press the "SETUP" button on the remote control to display the GUI menu.
 - Press the cursor button to select "General" → "ECO" → "Mode" → "Off".
- Remove the top cover and turn **VR401** (ALL Channel) of the AMP PCB counterclockwise(⤵) as far as possible.
- Connect the DC Voltmeter to the test points.

FRONT-Lch	: CP504	: VR414
FRONT-Rch	: CP505	: VR415
CENTER ch	: CP503	: VR413
SURROUND-Lch	: CP501	: VR411
SURROUND-Rch	: CP502	: VR412
ASSIGN1 Lch	: CP508	: VR418
ASSIGN1 Rch	: CP506	: VR416
ASSIGN2 Lch	: CP509	: VR419
ASSIGN2 Rch	: CP507	: VR417
- Connect the power cord to an outlet. Next, press the power button to turn on the power.
- Set this unit as follows.

MASTER VOLUME	: "---" (⤵ min.)	: turn counterclockwise to the lowest position.
SPEAKER (Speaker terminal)	: No load	

(Do not connect equipment such as speakers or dummy resistors.)

MODE	: MCH STEREO
FUNCTION	: TUNER
- Turn **VR401** clockwise(⤴) and adjust the voltage of the test point to "**8.0mV ± 0.5mV DC**" within 2 minutes.
- Check whether the voltage is within the range "**8.0mV ± 2mV DC**" 10 minutes after adjustment.
- Adjust the variable resistance of each channel using the same method.

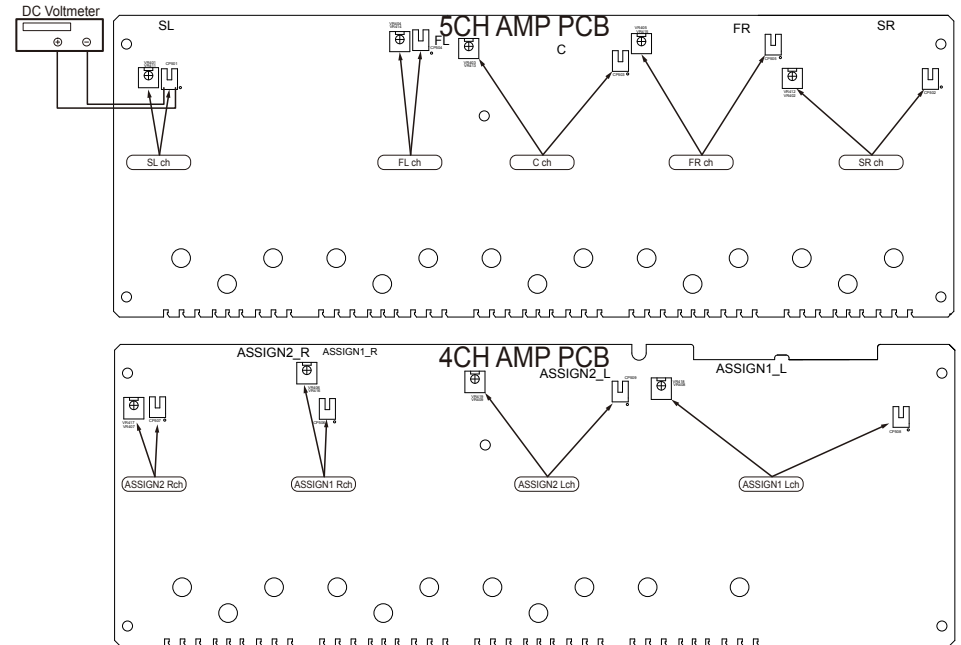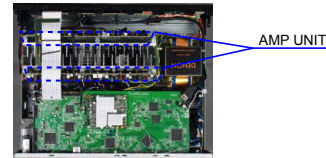

PROCEDURE AFTER REPLACING THE PCB.

PROCEDURE AFTER REPLACING THE U-COM, ETC.

FIRMWARE UPDATE PROCEDURE

1. Items necessary for update
2. Update preparation with a USB flash drive
3. Update method when the DIGITAL PCB or network module is replaced (Using a USB flash drive)
4. Update Method for Service Region Settings
5. Normal Firmware Update Method from USB Flash Drive
6. Normal Firmware Update Method from OTA
7. About the error codes

PROCEDURE AFTER REPLACING THE PCB.


The procedure after replacing the printed circuit boards is as follows.

(1) Change the resistor for setting the region.

Model Area	DIGITAL PCB	
	R1524	R1525
North America (E3)	OPEN	0
Europe (E2)	0	OPEN
China (E1C)	10k	10k

See the PCB below.

(2) Be sure to replace the software with the latest version.

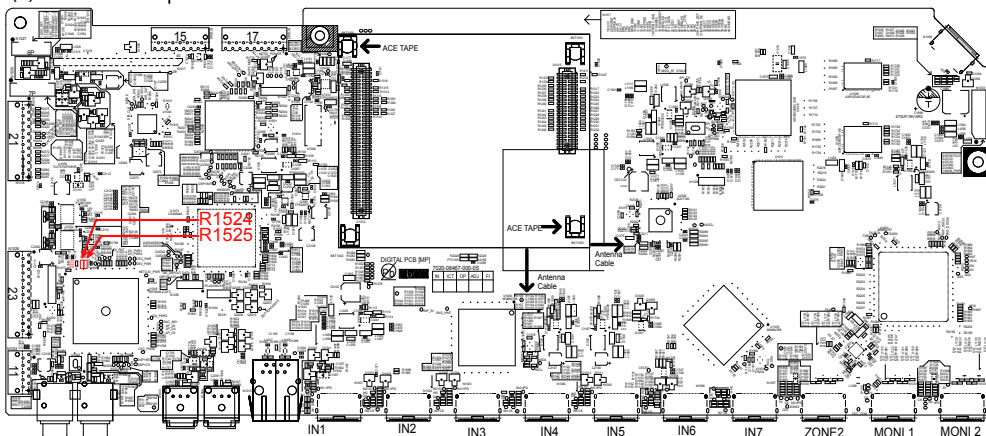

PROCEDURE AFTER REPLACING THE U-COM, ETC.

The procedure after replacing the MCU (microprocessor), flash ROM, etc. is as follows.

Implement the update method when the DIGITAL PCB or network module is replaced.

PCB Name	Ref. No.	Description	Procedure after Replacement	Remark
DIGITAL	U1018	R5F564MJCDFC	B	SOFTWARE : Main
DIGITAL	U1025	MX25L6406EM2I-12G 64M	B	SOFTWARE : DSP ROM
DIGITAL	U1027	W25Q128JVFIQ	B	SOFTWARE : GUI ROM
DIGITAL	U1041	5M570ZF256C5N	C	SOFTWARE : AUDIO PLD
DIGITAL	U1011	EPM570F256C4N	C	SOFTWARE : VIDEO PLD
MODULE	P20	NETWORK MODULE	D	SOFTWARE : Network

Procedure after Replacement

- A** : The software has been written. The software is not written at the time of replacement.
- B** : The software has been written. The software may need to be rewritten by version updates. Check the version.
- C** : The software has not been written. The software needs to be written after replacement. See "[FIRMWARE UPDATE PROCEDURE](#)" for information on writing the software.
- D** : The software has been written. Be sure to rewrite with the latest software for your service region. See "[3. Update method when the DIGITAL PCB or network module is replaced \(Using a USB flash drive\)](#)" for information on rewriting the software.

Before Servicing This Unit

Electrical

Mechanical

Repair Information

Updating

FIRMWARE UPDATE PROCEDURE

1. Items necessary for update

Items necessary for update are as follows.

Update Type	Needed Part for Update	Requirement	Offered / not Offered		
			Standard Service Equipment Not offered by D&M	Purchase from D&M Article code	Download from SDI
Via USB	USB flash drive (USB 2.0 : Min 1GB) • We recommend a USB memory device that has an LED installed.	Formatting FAT16 or FAT 32	X	-	"Table 1" or "Table 2"
Via OTA	Internet Connection by Broadband Circuit	-	X	-	-
	Modem	-	X	-	-
	Router	-	X	-	-
	Ethernet cable (CAT-5 or greater is recommended)	-	X	-	-

Table 1

Update download file when the DIGITAL PCB or network module is replaced

Model Name	Model Area	Download from SDI
AVR-X3600H	ALL	avr_40.prod.update.factory.xxxx.zip

Table 2

Update download file when the firmware is updated (Two files, "HW component" and "LEGO component")

Model Name	Model Area	Download from SDI		
		For HW component		For LEGO component
AVR-X3600HE3	North America (E3)	Product ID : 000101170100	DPMS_AVR-X3600HALL_LEGO_xxxx.zip	heos_40.prod_x.xxx.xx.zip
AVR-X3600HE2	Europe (E2)	Product ID : 000101170200		
AVR-X3600HE1C	China (E1C)	Product ID : 000101170500		

2. Update preparation with a USB flash drive

You can update the firmware by downloading the latest version with USB flash drive.

2.1. Connecting to the USB flash drive

(1) Preparation


- Windows PC
- USB flash drive format : Prepare a USB flash drive formatted in FAT16 or FAT32.
※We recommend a USB flash drive that has an LED installed.

NOTE :

- Use a memory that supports USB2.0.
- Do not run the USB flash drive through a hub.
- Do not connect a computer to the USB port of this unit using a USB cable.
- Do not use an extension cable when connecting the USB flash drive.
- Save the update file on a blank USB flash drive for use.
- If a USB flash drive cannot be updated, replace it with a different USB flash drive and perform the update again.

2.2. Unzipping the Downloaded File

Unzip the downloaded file on your computer.

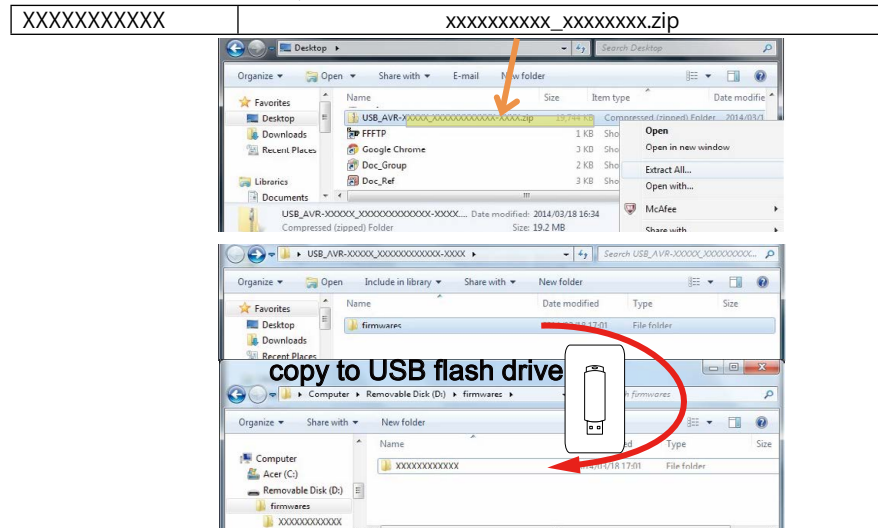

There are folders or files after unzipping.

Copy these folders or files onto the USB flash drive.

The folders or files must be placed in the root directory of the USB flash drive.

3. Update method when the DIGITAL PCB or network module is replaced (Using a USB flash drive)

3.1. File structure on USB flash drive

DIGITAL PCB or network module is replaced onto the USB flash drive in the following structure.


After unzipping the files, store them in the root of the same USB flash drive.

Model Area	Download from SDI
ALL	avr_40.prod.update.factory.xxxx.zip

USB flash drive root

- + avr_40.prod.update.factory
- + xxxxxxx.ota-download
- + heos_40.prod.update.factory

xxxxxx : Model name
zz : Region

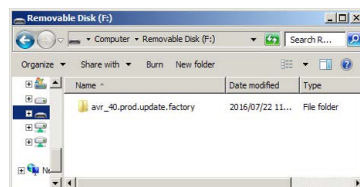


3.2. Start the update.

NOTE :

- Remove the LAN cable from this unit when updating. (Do not connect to a wired or wireless network.)
- The GUI menu setting details and image quality adjustment setting details are initialized when Firmware Factory Restore is performed. Therefore, take a note of the setting details beforehand and reconfigure the settings after update.
- Do not remove the USB flash drive until updating is completed.
- Do not turn off the power until updating is completed.
- It takes a maximum of approximately 25 minutes for update to complete.


Once an update is started, normal operations cannot be performed until it is completed.

- (1) Press the power button to turn on the power.
- (2) Wait for this unit to start up.
- (3) Set the input source to HEOS Music. Check that the display is as shown below.




Content of the display is scrolled.

- (4) Insert the USB flash drive into the USB port.

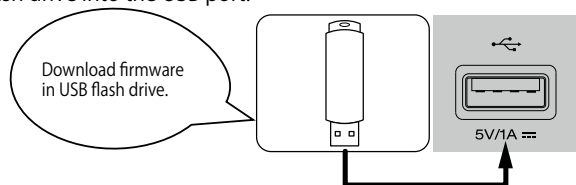

- (5) USB Update starts automatically. The Standby LED lights red.

Display during USB update

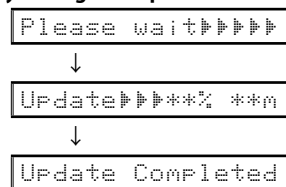


It takes a maximum of approximately 25 minutes for update to complete.

- (6) The unit restarts when update is complete.
 - ※When update is complete, the folder name on the USB flash drive changes to "avr_40.prod.update.factory.done". To use the files again, delete the ".done" part.

- (7) Execute Firmware Factory Restore.

While holding down buttons "TUNER PRESET CH -" and "DIMMER" simultaneously, press the power button to turn on the power.

Display during Firmware Factory Restore

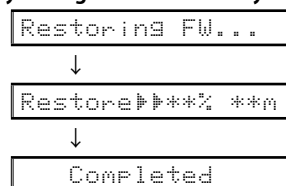

It takes approximately 15 minutes for Firmware Factory Restore to complete.

- (8) Execute Service Region Settings. See "4. Update Method for Service Region Settings"
- (9) Check that the version is the specified version. See "1. Version Display Mode"
- (10) If necessary, use OTA or the USB flash drive to update the firmware to the newest version.
 - ※We recommend using the firmware update method using OTA. See "5. Normal Firmware Update Method from USB Flash Drive" or "6. Normal Firmware Update Method from OTA"


4. Update Method for Service Region Settings

Copy the Service Region Settings from the USB flash drive to this unit.


4.1. Creating a Service Region Settings file

(1) Click [Start button] - [Accessories] - [notepad] on the PC to launch the notepad.

(2) Enter "TEXT".

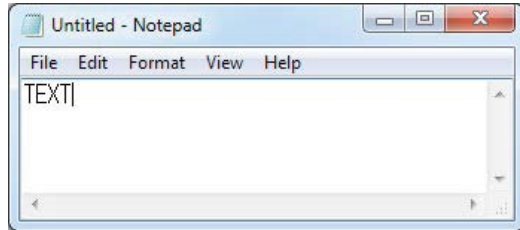


(3) Click "File", and then click "Save As...".

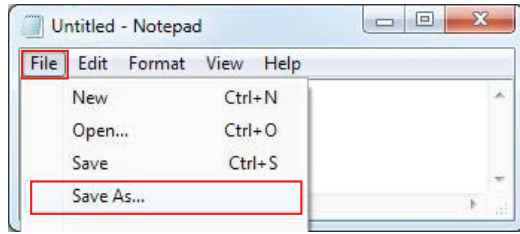


(4) Enter the file name and click the Save button.

NOTE : Enter the file name in double quotation marks. (The file extension is not required.)

Service Region	File name
North America	"denon-config-locale-set-1"
Europe	"denon-config-locale-set-2"
Japan	"denon-config-locale-set-3"
Australia	"denon-config-locale-set-4"
Korea	"denon-config-locale-set-5"
China	"denon-config-locale-set-6"
Israel	"denon-config-locale-set-7"

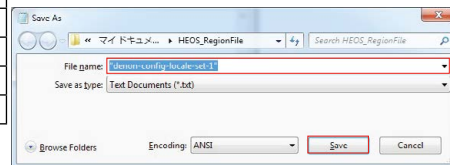

(5) Copy the files created on the USB flash drive.

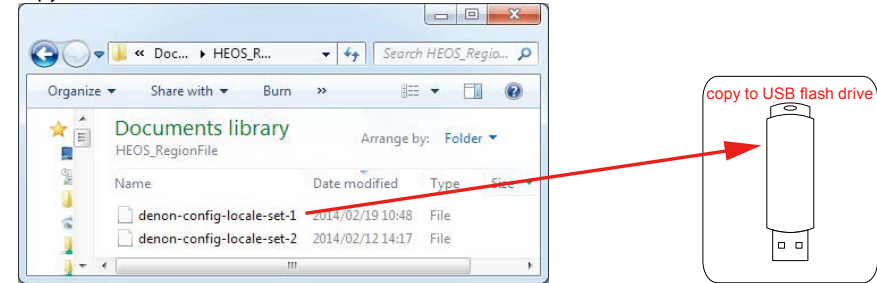


4.2. Starting Service Region Settings

NOTE :


- Remove the LAN cable from this unit when updating. (Do not connect to a wired or wireless network.)
- We recommend a USB memory device that has an LED installed.

- (1) Press the power button to turn on the power.
- (2) Wait for this unit to start up.
- (3) Set the input source to HEOS Music.
Check that the display is as shown below.



Content of the display is scrolled.

(4) Insert the USB flash drive into the USB port.

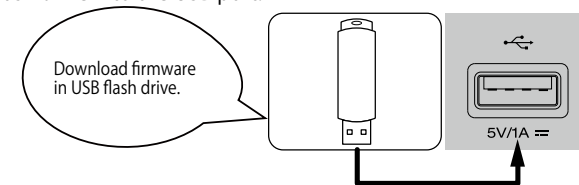

- (5) Wait for at least 10 seconds before removing the USB flash drive. (If the USB flash drive has an LED, this LED will be flashing. Remove the USB flash drive when the LED stops flashing.)

5. Normal Firmware Update Method from USB Flash Drive

5.1. File structure on USB flash drive


Copy the normal update files onto the USB flash drive in the following structure.

After unzipping the HW component USB update files for the target model and LEGO USB update files, store them in the root of the same USB flash drive.

Model Area	Download from SDI	
	For HW component	For LEGO component
North America (E3)	DPMS_AVR-X3600HALL_LEGO_xxxx.zip Product ID : 000101170100	heos_40.prod_x.xxx.xx.zip
Europe (E2)	DPMS_AVR-X3600HALL_LEGO_xxxx.zip Product ID : 000101170200	
China (E1C)	DPMS_AVR-X3600HALL_LEGO_xxxx.zip Product ID : 000101170500	

USB flash drive root

- + AVR-xxxxHxx_xxxx.update.auto
- + heos_40.prod.update.x-xxx-xx

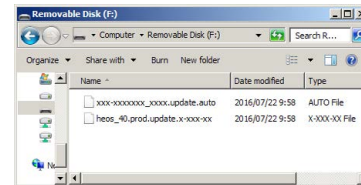

5.2. Start normal update

NOTE :


- Remove the LAN cable from this unit when updating.
(Do not connect to a wired or wireless network.)
- Do not remove the USB flash drive until updating is completed.
- Do not turn off the power until updating is completed.
- It takes a maximum of approximately 25 minutes for update to complete.

Once an update is started, normal operations cannot be performed until it is completed.

The GUI menu settings and image adjustment settings of this unit may be initialized.


Note down the settings before updating, and set them again after updating.

- (1) Press the power button to turn on the power.
- (2) Wait for this unit to start up.
- (3) Set the input source to HEOS Music.
Check that the display is as shown below.




Content of the display is scrolled.

- (4) Insert the USB flash drive into the USB port.

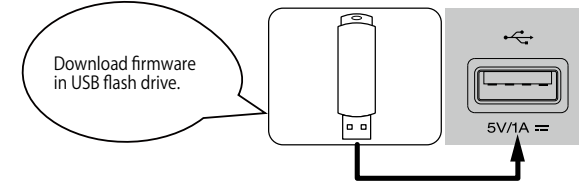

- (5) USB Update starts automatically.
The Standby LED lights red.

Display during USB update

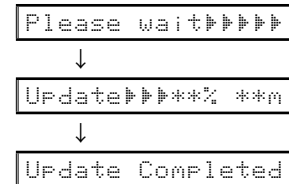

It takes a maximum of approximately 25 minutes for update to complete.

- (6) The unit restarts when update is complete.
- (7) After updating the firmware, check the version.
See "1. Version Display Mode"

6. Normal Firmware Update Method from OTA


Download the latest firmware from our website and update the firmware.

---Cautions on Firmware Update---

- For the update procedure, a proper broadband Internet connection environment and settings are required.
 - Do not turn off the power until updating is completed.
 - It takes a maximum of approximately 25 minutes for update to complete.
- Once an update is started, normal operations cannot be performed until it is completed. The GUI menu settings and image adjustment settings of this unit may be initialized. Note down the settings before updating, and set them again after updating.

6.1. Network Connection

- (1) System Requirements
 - Internet Connection by Broadband Circuit
 - Modem
 - Router
 - Ethernet cable (CAT-5 or greater is recommended)
- (2) Setting

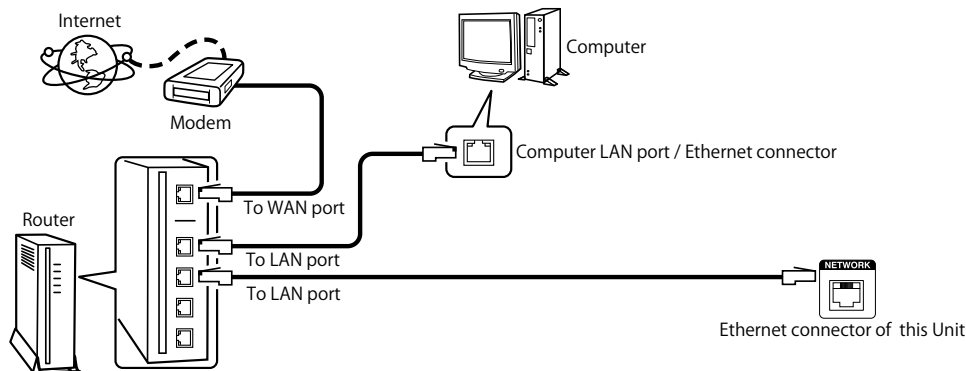


6.2. Check and update the firmware

Check if there is a firmware update available. It is also possible to check approximately how long the update will take.

- (1) Press the "SETUP" button on the remote control to display the GUI menu.
- (2) Press the cursor button to select "General" → "Firmware" → "Check for Update".
- (3) Check update
 - If the firmware version is anything other than the latest version, select "Update Now" to update the firmware.
 - "No update required. Latest version installed." is displayed when the firmware version is up to date.
- (4) OTA Update starts automatically.
The Standby LED lights red.

Display during OTA update

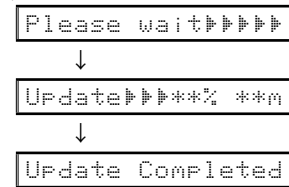

- It takes a maximum of approximately 25 minutes for update to complete.
- (5) The unit restarts when update is complete.
 - (6) After updating the firmware, check the version.
See "1. Version Display Mode"

7. About the error codes

See the table below for details on error codes and solutions when updating the firmware. Error codes are displayed in 4 digits, **YYXX**(**YY**: DeviceID, **XX**: ErrorCode).

Display

Update▶▶▶▶**% **n



Update Error**YYXX** Update Error**YYXX** (**YY**: DeviceID, **XX**: ErrorCode)

↓ ↑ The display is alternately displayed.

Please check you

Content of the display is scrolled.

Remedies

Error Code (YYXX) (DeviceID/ErrorCode)	Remedies
000A	"Connection failed. Please check your network, then try again."
0009	"Update failed. Please check your network, then try again."
0009	"Upgrade failed. Please check your network, then try again."
YY00 YY01 YY02 YY03 YY04 YY07	"Please check your network, unplug and reconnect the power cord, and try again."
YY00 YY01 YY02 YY03 YY04 YY07	"Please unplug and reconnect the power cord, and try again."
0005	"Incompatible update file found on the USB device. Please check the file."
0006	"Update file is corrupted. Please check the file."
000B	"Please contact customer service in your area." ※ Check the power supply and communication lines of each device.

Device ID table

Device ID (YY)	Device Name
00	General
01	Main CPU
0E	Main FBL (No used)
11	DSP1 or DSP
12	DSP2 ※ Except : DRA-800H/AVR-S650H/S750H/S950H/X1600H/X2600H/X3600H
13	DSP3 ※ Except : DRA-800H/AVR-S650H/S750H/S950H/X1600H/X2600H/X3600H
19	DSP4 ※ Except : DRA-800H/AVR-S650H/S750H/S950H/X1600H/X2600H/X3600H
15	Audio PLD
22	Video PLD ※ Except : DRA-800H/AVR-S650H/S750H/S950H/X1600H/X2600H
2A	GUI
2B	PIMG ※ ONLY : DRA-800H/AVR-S650H/S750H/S950H/X1600H/X2600H
33	LEGO

Error Code table

Type code (XX)	Description
00	Logical error
01	Error during erasing
02	Error during writing
03	Error during verifying
04	No access for the component
05	Package mismatched. Product ID, package version un-matched of the package manifest
06	Unpack dis-available of component package file
07	Time out
08	Latest firmware has already installed.
09	Error during download
0A	Error connection
0E	Hardware Error

---Checking the Firmware Version After the Update---

After updating the firmware, check the version.
See "1. Version Display Mode"

DENON®

www.denon.com